

# 9070 Smart Vibration Meter Vibration analysis at the touch of a button

**Analyze and Interprets readings...Incredible** 

performance at an unbelievably low price

**Machinery Health Monitoring Tools from testproductsintl.com • 800.368.5719** 

# **BENEFITS**


- ISO Built-in Alarms
- Easily identify bearing problems with BDU Reading
- Easily identify balance, alignment, looseness problems with our built in band filters
- 800 line FFT (spectrum)
- Ruggedized IP67 case
- 3-year Limited Warranty

## **FEATURES**

- Full Color OLED Display
- Built-in accelerometer with interchangeable stinger and magnetic mount

# **MARKETS**

- Commercial/Industrial HVAC
- Food Processing
- Manufacturing
- Mining
- Packaging
- Petrochemical
- Pulp and Paper
- Power Plants
- Utilities
- Automotive

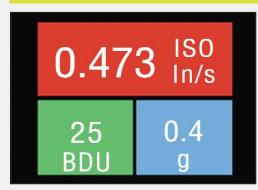


Overall machine and bearing conditions: vibration values are displayed with color coded alarm levels for ISO values and Bearing Damage (BDU)



#### Easy vibration analysis:

clear picture of machine problems detected with built in band filters

- 1X imbalance
- 2X misalignment
- 3X looseness

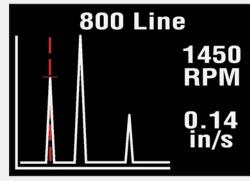

**Identify complex issues:** 

800-line spectrum with zoom and cursor



Photo Actual Size

**Test the TPI Advantage** 



# 9070 Smart Vibration Meter

# Machinery Health Monitoring Tools from testproductsintl.com • 800.368.5719

Stinger tip accelerometer with standard 1/4 x 28 threads. Various length stingers or magnets can be used



• Environmental:

o Water: IP67 Waterproof

o Operating: -32°F to 122°F (0C to 50C) o Storage: -4°F to 158°F (-20C to 70C)

• Power supply: 2xAA batteries

• Battery life: Approximately 50 hours of normal use

• Frequency ranges: 2/10Hz - 1kHz ISO 2Hz - 3kHz

• Frequency resolution: 100 / 200 / 400 / 800 lines

• Displayed amplitude units: Acceleration in g / velocity in inches per second or mm per second / Bearing damage in BDU

• Displayed frequency units: Hz, CPM or RPM

• Input range: +/- 50 g • Dynamic range: 72 dB Auto set up of VA bands

Accelerometer connection: Internal sensor

Standard accessories

• Pouch with protective cap for pointed stinger

Optional accessories:

o Extended stinger

o Magnet

#### Top button with circle:

- Press to power ON
- Press again to take a reading
- Auto OFF one minute after last reading, unless time OFF is changed in power time OFF in user settings

#### Left and right cursors:

- · Move curser in FFT mode
- Select set up in Menu mode

#### Menu Setup button:

- Press and it cycles through main big number screen, VA screen (Unbalance, Misalignment and Looseness)
- FFT, FFT zoom \*2, FFT zoom \*4, FFT zoom\*8 and back to start.

### Press and hold Setup Menu to set:

- ISO filter 2/10Hz
- ISO alarm level
- Units of measure: Metric/English
- Run speed (Metric defaults to 1500 CPM/English 1800 CPM)
- Frequency axis CPM (default) or Hz
- Screen brightness
- Power time OFF (programmable)

Left and right buttons select options and Menus accepts change

