


SNAP® Link Serial Wireless Adapters

QUICK START: PLEASE READ THIS FIRST

Step 1


- Apply power to Unit 1 using either the wall plug or a PC.
- Apply power to Unit 2

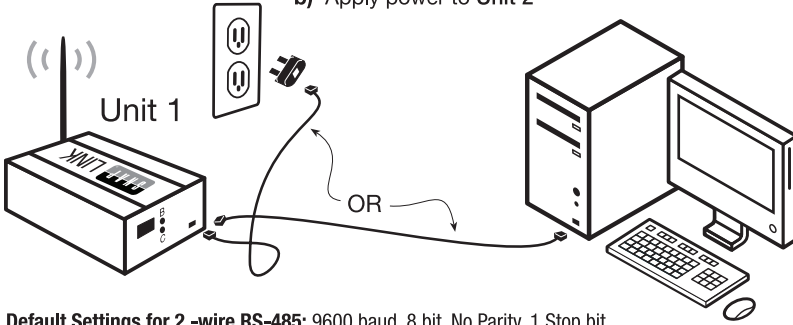

Default Settings for 2-wire RS-485: 9600 baud, 8 bit, No Parity, 1 Stop bit

Step 2

- Press and Hold the MODE button for over 5 seconds; Release when LED "A" turns RED. It will now Flash Red.
 - Standing near the first unit, Press and Hold the MODE button on Unit 2; Release when LED "A" turns Red. The units should be paired.
- Once successfully paired, LED "A" flashes Green to indicate good signal quality.
 - A flashing Amber color indicates successful pairing, but with a weak signal.*

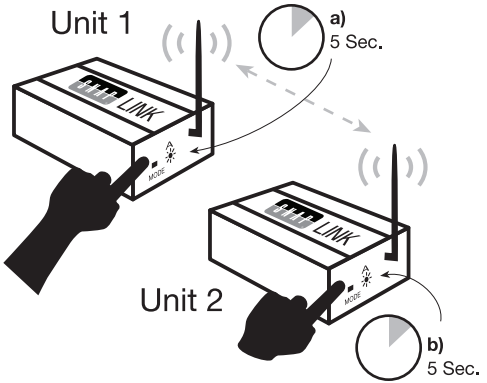

How to Reset to Factory Defaults:


- Unplug the device.
- While holding down the MODE button, plug device back into a power source and wait until all LEDs turn Amber, about 6 seconds.
- Release MODE Button. LED "A" turns off to indicate success.

How to Drop out of Pairing Mode:

- Hold down the LED "A" button for 5 seconds on one of the paired units.
- It will drop out of paired state and go back into "pairing mode", indicated by the flashing red LED "A". If you click once quickly on that same unit, it should "re-pair" to the unit it was previously paired with.

Step 3

Connecting Units to existing devices

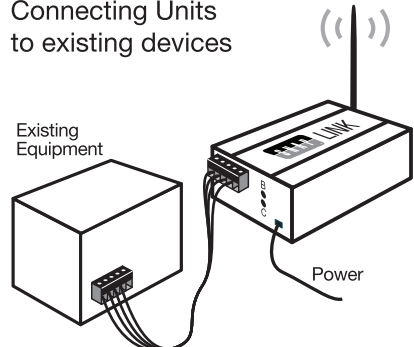


SNAP® Link Serial Wireless Adapters

QUICK START: PLEASE READ THIS FIRST

Everyone at **Synapse Wireless** appreciates your purchase. We're saving trees, reducing waste, and ensuring you have the most up-to-date versions by providing our documentation and software online.

- User documentation can be downloaded here:
<http://www.synapse-wireless.com/SNAPLink/doc>
(includes instructions for changing 2-wire settings to 4-wire RS-485 as well as configuring a Point-to-Multipoint, also called Master-to-Multiple-Slaves)
- Download SNAP EasySet configuration software to access additional configuration options using a Windows, Mac or Linux computer here:
<http://www.synapse-wireless.com/SNAPLink/EasySet>
- Some parameters may be changed without using EasySet software by using the 8 bit Dip Switch inside the unit, which is discussed further in the user documentation.

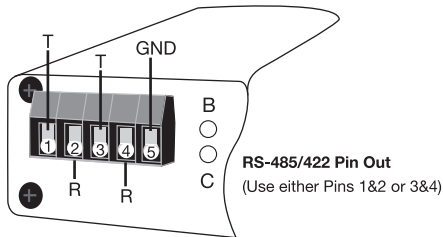

Wireless Technology to Control and Monitor Anything from Anywhere™

500 Discovery Drive
Huntsville, Alabama 35806
256 852-7888
synapse-wireless.com