


EL-USB-4

4-20mA Current Loop USB Data Logger

This data logger measures and stores up to 32,000 current loop readings over a 4-20mA d.c. measurement range. The user can easily set up the logging rate and start time, and download the stored data by plugging the module straight into a PC's USB port and running the purpose designed software under Windows 98, 2000 or XP. The data can then be graphed, printed and exported to other applications. The data logger is supplied complete with a long-life lithium battery. Correct functioning of the unit is indicated by a flashing red and green LED. The data logger features a pair of screw terminals and is supplied complete with a set of measurement leads terminating in crocodile clips.

FEATURES

- 4-20mA d.c. Current Loop Measurement Range
- Logging Rates between 1s and 12hr
- Stores 32,000 readings
- Connection via two screw terminals
- USB Interface for Set-up and Data Download
- User-Programmable Alarm Thresholds
- Red and Green LED Status Indication
- Replaceable Internal Lithium Battery

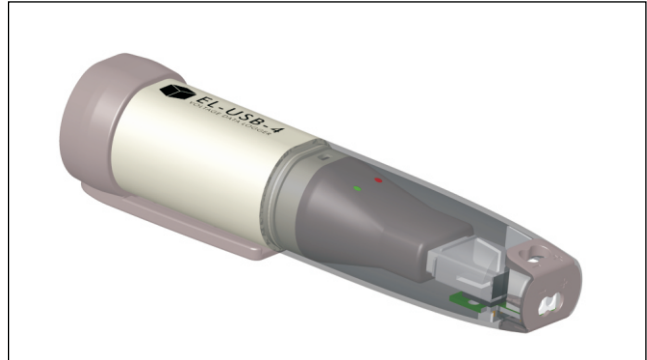

WINDOWS CONTROL SOFTWARE

Easy to install and use, the control software runs under Windows 98, 2000 and XP (Home and Professional Editions). It allows the user to set up and download any EL-USB-4.

ORDERING INFORMATION

Standard Data Logger
(Data Logger, Measurement Leads,
Software on CD and Battery)

Stock Number
EL-USB-4

Replacement Battery

BAT 3V6

DATA LOGGER SET-UPS

- Logger Name
- Logging Rate (1s, 10s, 1m, 5m, 30m, 1hr, 6hr, 12hr)
- High and Low Alarms
- Start Date and Start Time

SPECIFICATIONS

| Specification | Min. | Typ. | Max. | Unit |
|----------------------------------|-----------|------------|------------|-----------------|
| 4-20mA d.c. measurement range | 0 | 4-20 | | mA d.c. |
| Internal resolution | | ± 0.05 | | mA d.c. |
| Accuracy (overall error) | | ± 1 | | % ± 1 count |
| Logging rate | every 1s | | every 12hr | - |
| Operating temperature range | -35 (-31) | | +80 (176) | °C (°F) |
| 1/2AA 3.6V Lithium Battery Life* | 1 | | | Year |

* depending on ambient temperature, logging rate and use of alarm LEDs.

LED FLASHING MODES

EL-USB-4 features a red and a green LED.


The LEDs on an EL-USB-4 will flash in one of the following ways, assuming alarm latching is turned off (exact timings to be confirmed).

| | |
|--|---|
| - Green single flash, every 30 seconds | Logger primed and ready to start. |
| - Green single flash, every 10 seconds | Logging in progress, last stored value OK |
| - Red single flash, every 10 seconds | Logging in progress, the last stored reading is equal to or exceeds the low alarm level (If latching is turned on, then a stored value is equal to or exceeds the low alarm level) |
| - Red double flash every 10 seconds | Logging in progress, the last stored reading is equal to or exceeds the high alarm level (If latching is turned on, then a stored value is equal to or exceeds the high alarm level) |
| - Green single flash, every 20 seconds | Low battery, logging in progress, the last stored value OK |
| - Red single flash, every 20 seconds | Low battery, logging in progress, the last stored value is equal to or exceeds the low alarm level |
| - Red double flash, every 20 seconds | Low battery, logging in progress, the last stored value is equal to or exceeds the high alarm level |
| - Green double flash, every 20 seconds | Logger is full, last stored value OK |
| - Red/Green single flash, every 20 seconds, alarm latching turned on | Logger is full, last stored value is equal to or exceeds the low or high alarm level |
| - No LEDs flash | LEDs disabled during configuration to save battery power and increase logging duration. or Battery dead. |

By default latching is disabled. The red LED will then no longer continue to flash after the logged current has returned to normal. Instead, the green LED will then flash.

Latching can be turned on via the control software, so the red LED will continue to flash, even after the logged current has returned to normal. The red LED will effectively have latched into its alarm condition. This feature ensures that the user is notified that an alarm level has been exceeded, without the need to download the data from the logger.

CONNECTION

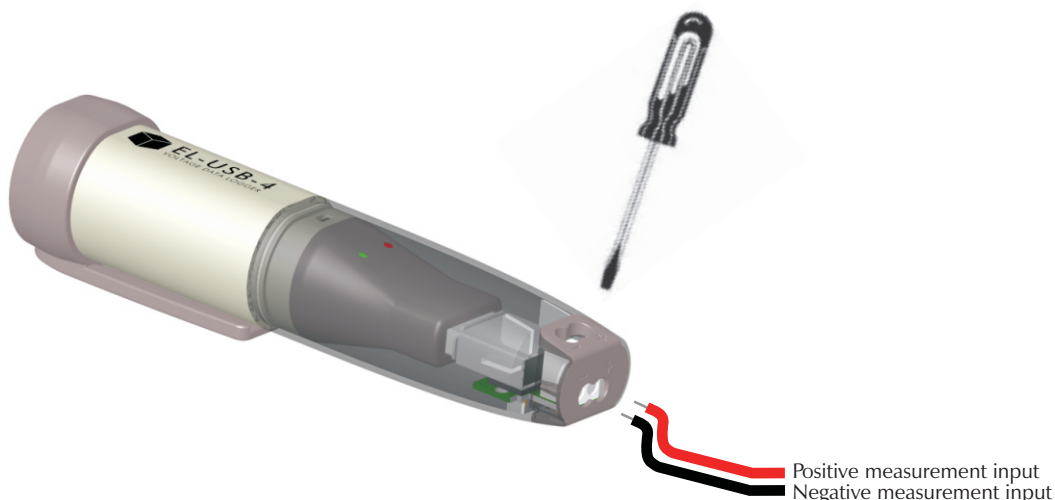

BATTERY REPLACEMENT

We recommend that you replace the battery every 12 months, or prior to logging critical data.

The EL-USB-4 does not lose its stored readings when the battery is discharged or when the battery is replaced; the data logging process will however be stopped and cannot be re-started until the battery has been replaced and the logged data has been downloaded to PC.

Only use 3.6V 1/2AA lithium batteries. Check with your supplier that the battery you are ordering is 'press fit' and is not fitted with solder tags. Before replacing the battery, remove the EL-USB-4 from the PC.

Note:

Leaving the EL-USB-4 plugged into the USB port for longer than necessary will cause some of the battery capacity to be lost.



WARNING: Handle lithium batteries carefully, observe warnings on battery casing.
Dispose of in accordance with local regulations.



APPLICATIONS

