

134 Marbledale Road • Tuckahoe, NY 10707 Phone: 914-793-0700 • Fax: 914-793-4527 sales@jonard.com • www.jonard.com

SA-90 SERIES ARM-MOUNTED FUME ABSORBER **SAK-90 CONVERSION KIT**


ASSEMBLY INSTRUCTIONS

Congratulations on your purchase of our SA-90/SAK-90 Fume Absorber System. This unit has been tested and inspected by OK Industries prior to shipment. We appreciate your comments and suggestions. Please feel free to contact us directly:

PLEASE FOLLOW THESE INSTRUCTIONS:

STEP#1.

(1)

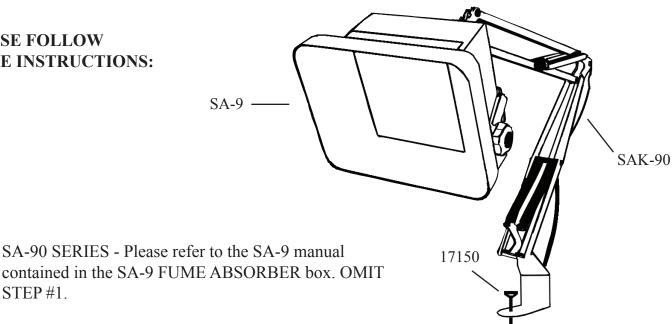

- (1a) SAK-90 Remove the exhaust air deflector from the rear of your SA-9 series FUME ABSORBER.
- **(2)** Using the thumb-screws provided with the SA-9 mount the SA-9 to the "U" shaped bracket.

IMPORTANT: YOU MUST ROUTE THE POWER CORD BELOW THE "U" SHAPED BRACKET

- Using the large black clips, secure the power cord along the outside sections of the arm **(3)** assembly.
- Clamp the arm mounting bracket in a suitable location on the workbench, insert the arm **(4)** assembly and connect the main power cord.