


PANEL BUDDY KNOCKOUT KIT

Jonard Part Number WBK-100

Remove panel knockouts without cutting holes in the drywall
(For use on electrical, security, alarm and datacom panels)

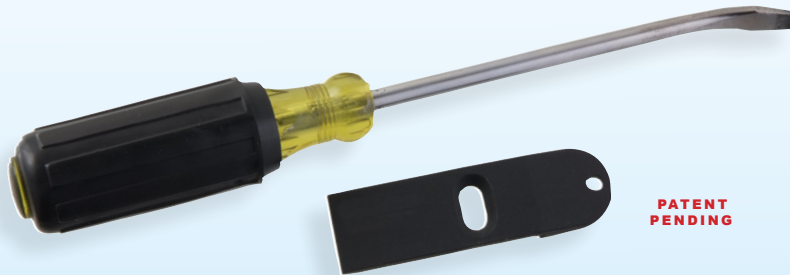

EASY STEP BY STEP INSTRUCTIONS



1

After removing the panel cover place the panel buddy on the edge of the panel in front of knockout to be removed.



2




Next insert the modified screwdriver through the hole and between the drywall under the knockout.



3

Push to loosen the knockout.

4

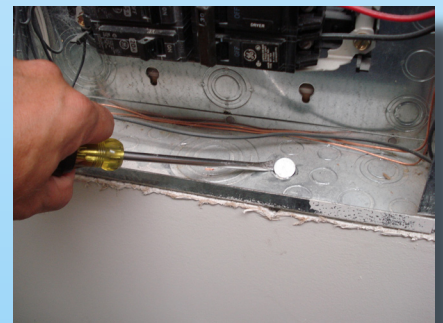

Using the screwdriver, remove panel knockout.

WARNING: DO NOT USE KIT NEAR LIVE CIRCUITS. INTENDED FOR USE BY LICENSED PROFESSIONALS

LIFETIME WARRANTY

This product is warranted to be free from defects in materials and workmanship for the normal life of the product.

For complete details visit: www.jonard.com