


PANDUIT® TJF "T" Junction Harness Board Accessory

INSTRUCTION SHEET

ASSEMBLY

ASSEMBLY IS REQUIRED BEFORE INSTALLATION

BY HAND PUSH
NAIL INTO TOP
OF HOUSING
(AS SHOWN TO
THE RIGHT)

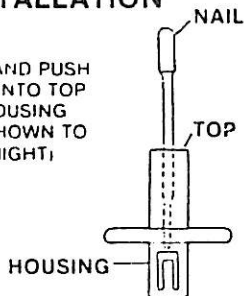


TINLEY PARK, IL 60477-0981

PR143N-TJF

INSTALLATION


USING A *MINIMUM*
THICKNESS HARNESS BOARD
OF 5/8" HAMMER ASSEMBLY
ONTO HARNESS BOARD UNTIL
THE TOP OF THE NAIL IS EVEN
WITH THE TOP OF THE
HOUSING

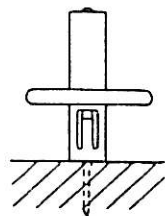


IMPORTANT: AFTER INSTAL-
LATION, WHEN FIXTURE IS NOT
IN USE, KEEP IN THE "UP"
POSITION.

USE


TO INSTALL HARNESS
1. SLIDE HOUSING UP THE
NAIL UNTIL IT STOPS

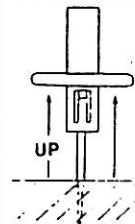

2. ROUTE WIRES AROUND
TOP OF HOUSING TO
FORM "T" JUNCTION

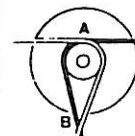

TO REMOVE HARNESS
3. SLIDE HOUSING DOWN THE
NAIL WHILE PULLING OFF
HARNESS

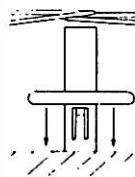

4. INSTALL — CABLE TIES
AT POINT A AND POINT B