


Product APPLICATION Guide

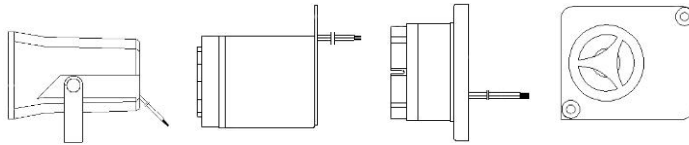

Bracket & Wall Mount

Bracket & Wall Mount- Extra Loud Indicators

Part Number	Sound Level @ 12Vdc @ 2ft (60cm)	Freq. (Hz)	Operating Voltage (Vdc)	Current @ 12Vdc (mA)	Size (mm)	Mounting Type
Extra Loud- Continuous Tone						
PS-510Q	108	3000	5 - 15	250	74 x 67 x 105 (L x W x H)	Bracket
PS-520Q	108	3000	5 - 15	200	58 x 45 x 70 (L x W x H)	Bracket
PS-530Q	108	2800	5 - 15	200	73 x 42 (Dia x Hgt)	Wall
PS-550Q	108	2800	5 - 15	200	59 x 54 x 62 (L x W x H)	Bracket
Extra Loud- Slow Pulse Tone (1.2 pps)						
PS-511Q	111	3000	5 - 15	250	74 x 67 x 105 (L x W x H)	Bracket
PS-521Q	108	3000	5 - 15	200	58 x 45 x 70 (L x W x H)	Bracket
PS-531Q	108	2800	5 - 15	200	73 x 42 (Dia x Hgt)	Wall
PS-551Q	108	2800	5 - 15	200	59 x 54 x 62 (L x W x H)	Bracket
PS-571Q	108	2800	5 - 15	200	85 x 62 x 70 (L x W x H)	Bracket
Extra Loud- Slow Warble Tone (2.5 - 3.5 kHz; 1.2 pps)						
PS-512Q	111	3000	5 - 15	250	74 x 67 x 105 (L x W x H)	Bracket
PS-522Q	108	3000	5 - 15	200	58 x 45 x 70 (L x W x H)	Bracket
PS-552Q	108	3000	5 - 15	200	59 x 54 x 62 (L x W x H)	Bracket
Extra Loud- Siren Tone (1.5 - 3.5 kHz Sweep)						
PS-513Q	113	2500	5 - 15	400	74 x 67 x 105 (L x W x H)	Bracket
PS-523AQ	108	2500	5 - 15	200	58 x 45 x 70 (L x W x H)	Bracket
PS-533Q	108	2500	5 - 15	200	73 x 42 (Dia x Hgt)	Wall
PS-553Q	108	2500	5 - 15	200	59 x 54 x 62 (L x W x H)	Bracket
PS-593SCQ	108	2500	5 - 15	250	70 x 53 x 55 (L x W x H)	Bracket
PS-723BQ	108	2500	5 - 15	150	47 x 39 x 22 (L x W x H)	Wall
PS-983Q	108	2500	5 - 15	150	60 x 51 x 35 (L x W x H)	Wall

Note: See individual data sheets for exact shape and physical dimensions

Call 317-612-1000 or Visit www.mallory-sonalert.com for More Details