# DP83907

DP83907 AT/LANTIC(TM)II



Literature Number: SNLS099A



# DP83907 AT/LANTIC<sup>™</sup>II

# **General Description**

The DP83907 Twisted-Pair Enhanced Coaxial Network Interface Controller is a CMOS VLSI device designed for easy implementation of CSMA/CD local area networks.

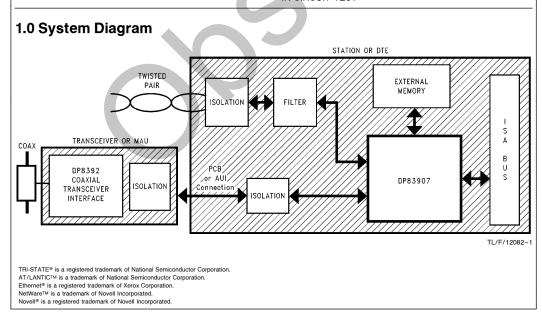
Unique to the DP83907 is the integration of the entire bus interface for PCAT ISA (Industry Standard Architecture) bus based systems. Hardware and software selectable options allow the DP83907's bus interface to be configured in the same manner as an NE2000 Architecture. All bus drivers and control logic are integrated to reduce board cost and area.

Supported network interfaces include 10BASE5 or 10BASE2 Ethernet via an external transceiver connected to its AUI port, and Twisted-pair Ethernet® (10BASE-T) using the on-board transceiver. The DP83907 provides the Ethernet Media Access Control (MAC), Encode-Decode (ENDEC) with an AUI interface, and 10BASE-T transceiver functions in accordance with the IEEE 802.3 standards.

The DP83907's integrated 10BASE-T transceiver fully complies with the IEEE standard. This functional block incorporates the receiver, transmitter, collision, heartbeat, loopback, jabber, and link integrity blocks as defined in the standard. The transceiver when combined with equalization resistors, transmit/receive filters, and pulse transformers provides a complete physical interface from the DP83907's ENDEC module and the twisted pair medium. (continued)

# Features

- Controller and integrated bus interface solution for IEEE 802.3, 10BASE5, 10BASE2, and 10BASE-T
- Software compatible with industry standard Ethernet Adapters: Novell<sup>®</sup>'s NE2000
- No external bus logic or drivers needed
- Supports jumpered or jumperless configuration
- Provides EEPROM interface for non-volatile storage of configuration data, user-defined data and Ethernet Physical Address
- Allows in-situ programming of EEPROM
- Integrated controller, ENDEC, and transceiver
- Full IEEE 802.3 compliant AUI interface
- Single 5V supply
- 10BASE-T TRANSCEIVER MODULE:
- Integrates transceiver functionality
- Transmitter and receiver functions
- Collision detect, heartbeat and jabber
- Selectable link integrity test or link disable
- Polarity Detection/Correction
- Auto switch
- On chip filter
- ENDEC MODULE:
- 10 Mbit/s Manchester encoding/decoding
   Squelch on receive and collision pairs
- MAC/CONTROLLER MODULE:
- Software compatible with DP8390, DP83901, DP83902
- Efficient buffer management implementation
- IN-CIRCUIT TEST



©1995 National Semiconductor Corporation TL/F/12082

RRD-B30M115/Printed in U. S. A.

# DP83907 AT/LANTIC II

PRELIMINARY

November 1995

# General Description (Continued)

The integrated ENDEC module allows Manchester encoding and decoding via a differential transceiver and phase lock loop decoder at 10 Mbit/sec. Also included are a collision detect translator and diagnostic loopback capability. The ENDEC module interfaces directly to the transceiver module, and also provides a fully IEEE compliant AUI (Attachment Unit Interface) for connection to other media transceivers.

The Media Access Control function which is provided by the Network Interface Control module (NIC) provides simple and efficient packet transmission and reception control by means of off-board memory which can be accessed through an I/O port.

The DP83907 provides a comprehensive solution for 10BASE-T IEEE 802.3 networks. Due to the inherent constraints of CMOS processing, isolation is required at the AUI differential signal interface for 10BASE5 and 10BASE2 applications.

# **Table Of Contents**

- 1.0 SYSTEM DIAGRAM
- 1.1 Connection Diagram
- 2.0 PIN DESCRIPTION
- 3.0 SIMPLIFIED APPLICATION DIAGRAM
- 4.0 FUNCTIONAL DESCRIPTION
  - 4.1 Bus Interface Block
  - 4.2 Power on RESET Operation
  - 4.3 EEPROM Operation
  - 4.4 Jumperless Operation Support
  - 4.5 Ethernet Cable Configuration
  - 4.6 Interrupt AND LED Operation
  - 4.7 Boot PROM Operation
  - 4.8 DP8390 Core (Network interface Controller)
  - 4.9 Twisted Pair Interface Module
  - 4.10 Encoder/Decoder (ENDEC) Module

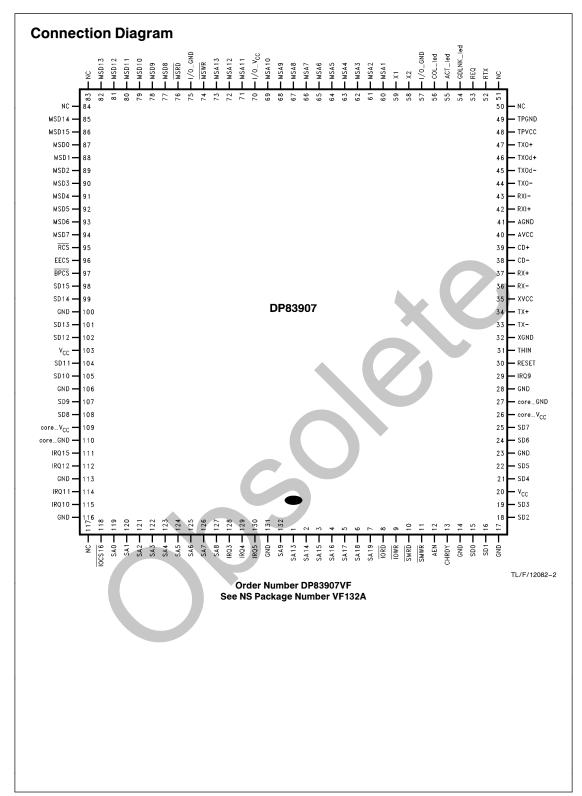
### 5.0 REGISTER DESCRIPTIONS

- 5.1 Configuration Registers
- 5.2 NIC Core Registers
- 5.3 DP8390 Core DMA Registers

### 6.0 OPERATION OF DP83907

- 6.1 Transmit/Receive Packet Encapsulation/Decapsulation
- 6.2 Buffer Memory Access Control (DMA)
- 6.3 Packet Reception
- 6.4 Packet Transmission
- 6.5 Loopback Dlagnostics
- 6.6 Memory Arbitration and Bus Operation
- 6.7 Functional Bus TimIng

### 7.0 IN-CIRCUIT TEST (ICT) DESCRIPTION



Pin No.	Pin Name	Туре	Description			
SA BUS INTER	FACE PINS					
119–127, 132	SA0-SA9	I TTL	LATCHED ADDRESS BUS: Low-order 10 bits of the system's latched 20-bit address bus. These bits are used to decode accesses to the DP83907's I/O map.			
1–7	SA13-SA19	I         LATCHED ADDRESS BUS: 7 bits of the system's latched 20-bit address bus that used to decode accesses to the DP83907's boot PROM.				
10, 11	SMRD, SMWR	I TTL	BOOT PROM STROBES: These inputs are used to access the BOOT PROM.			
15, 16, 18 19, 21, 22 24, 25, 98 99, 101, 102, 104, 105, 107, 108	SD0-SD7 SD8-SD15	I/O 3ST	SYSTEM DATA BUS: 16-bit system data bus. Used to transfer data between the system and the DP83907.			
118	IOCS16	О ОСН	<b>16 BIT I/O TRANSFER:</b> This signal indicates that the DP83907 is responding to a 16 bit I/O access by driving 16 bits of data on the bus.			
9	IOWR	I TTL	I/O WRITE STROBE: Strobe from system to write to the DP83907's I/O map.			
8	IORD	I TTL	I/O READ STROBE: Strobe from system to read from the DP83907's I/O map.			
30	RESET	I TTL	<b>RESET:</b> This signal is output by the system to reset all devices on the bus.			
13	CHRDY	О ОСН	CHANNEL READY: This signal is used to insert wait states into system accesses.			
12	AEN	I TTL	DMA ACTIVE: This signal indicates that the systems DMA has control of the bus.			
29, 111, 112, 114, 115, 128 129, 130	IRQ3, 4, 5, 9, 10, 11, 12, 15	O 3ST	<b>INTERRUPT REQUEST:</b> The operation of these outputs is determined by Configuration Register A.			

Note: Driver Types are: I = Input, O = Output, I/O = Bi-directional Output, OCH = Open Collector, 3ST = TRI-STATE® Output, TTL = TTL Compatible, AUI = Attachment Unit Interface, TPI = Twisted Pair Interface, LED = LED Drive, MOS = CMOS Level Compatible, XTAL = Crystal.


4


Pin No.	Pin Name	Туре	Description
NETWOR	K INTERFACE PIN	S	
44–47	TxOd+, TXO-, TXO+ TXOd-	O TPI	<b>TWISTED PAIR TRANSMIT OUTPUTS:</b> These high drive CMOS level outputs are resistively combined external to the chip to produce a differential output signal with equalization to compensate for Intersymbol Interference (ISI) on the twisted pair medium.
42, 43	RXI+, RXI-	। TPI	TWISTED PAIR RECEIVE INPUTS: These inputs feed a differential amplifier which passes valid data to the ENDEC module.
33, 34	TX- TX+	O AUI	AUI TRANSMIT OUTPUT: Differential driver which sends the encoded data to the transceiver.
36, 37	RX- RX+	I AUI	AUI RECEIVE INPUT: Differential receive input pair from the transceiver.
38, 39	CD- CD+	I AUI	AUI COLLISION INPUT: Differential collision pair input from the transceiver.
55	ACT_led	O LED	<b>ACTIVITY:</b> An open-drain active low output. It is asserted for approximately 50 ms whenever the DP83907 transmits or receives data in either AUI or TPI modes.
56	COL_led	O LED	<b>COLLISION:</b> An open-drain active low output. It is asserted for approximately 50 ms whenever the DP83907 detects a collision in either either AUI or TPI modes.
54	GDLNK_led	O LED	<b>GOOD LINK:</b> An open-drain active low output. This pin operates as an output to display link integrity status if this function has not been disabled by the GDLNK bit in Configuratioin Register B. This output is off if the DP83907 is in AUI mode or if link testing is enabled and the link integrity is bad (i.e., the twisted pair link has been broken). This output is on if the DP83907 is in Twisted Pair interface (TPI) mode, link integrity checking is enabled and the link integrity is good (i.e., the twisted pair link has <b>not</b> been broken) or if the link testing is disabled.
53	REQ	I	<b>EQUALIZATION RESISTOR:</b> A resistor can be connected from this pin to GND or $V_{CC}$ to change the equalization of the TP output.
52	RTX	Ι	<b>TRANSMIT LEVEL RESISTOR:</b> A resistor can be connected from this pin to GND or $V_{CC}$ to change the TP output amplitude level.
59	X1 (OSCIN)	l XTAL	CRYSTAL ON EXTERNAL OSCILLATOR INPUT
58	X2 (OSCOUT)	O XTAL	CRYSTAL FEEDBACK OUTPUT: Used in crystal connections only. Should be left unconnected when using an oscillator module.
31	THIN	O DCDC	THIN CABLE: This output is high if DP83907 is configured for thin cable. It can be used to enable the DC-DC converter required by the thin Ethernet configuration.
			thput, I/O = Bi-directional Output, OCH = Open Collector, 3ST = TRI-STATE Output, TTL = TTL Compatible, Isted Pair Interface, LED = LED Drive, MOS = CMOS Level Compatible, XTAL = Crystal.

Pin No.	Pin Name	Туре	Description
EXTERNA	L MEMORY SU	PPORT	
87–94	MSD0-7 or CA0-7 or DO, DI, SK	I/O-I-O MOS	MEMORY SUPPORT DATA BUS—CONFIGURATION REGISTER A INPUT: EEPROM SIGNALS: MSD0-7: When RESET is inactive these pins are used to access external memory and boot PROM. CA0-7: When RESET is active Configuration Register A is loaded with the data value on these pins. If the user puts an external pull-up on any of these pins then the corresponding register bit is set to a 1. If the pin is left unconnected then the register bit is 0. DO, DI, SK: When RESET goes from an active to an inactive level DP83907 will read the contents of a serial EEPROM, using these signals, and load the contents into internal registers. These internal registers are mapped into the space taken up by the PROM in the NE2000 Architecture. After the EEPROM read operation has completed these pins will rever to MSD0-2 (D0 = MSD0, DI = MSD1, SK = MSD2).
77–82 85, 86	MSD8-15 or CB0-7	I/O-I MOS	<b>MEMORY SUPPORT DATA BUS—CONFIGURATION REGISTER B INPUT:</b> MSD8–15: When RESET is inactive these pins are used to access external memory. CB0–7: When RESET is active Configuration Register B is loaded with the data value on these pins. If the user puts an external pull-up on any of these pins then the corresponding register bit is set to a 1. If the pin is left unconnected then the register bit is 0.
60-67	MSA1-8 or CC0-7	O-I MOS	<b>MEMORY SUPPORT ADDRESS BUS—CONFIGURATION REGISTER C INPUT:</b> MSA1–8: When RESET is inactive these pins drive the memory support address bus. CC0–7: When RESET is active Configuration Register C is loaded with the data value on these pins. If the user puts an external pull-up on any of these pins then the corresponding register bit is set to a 1. If the pin is left unconnected then the register bit is 0.
68, 69 71–73	MSA9-13 or DWID, EECONFIG and SIG 5-7	0-I MOS	<b>MEMORY SUPPORT ADDRESS BUS—DWID, EECONFIG AND SIGNATURE REGISTER:</b> MSA9–13: When RESET is inactive these pins drive the memory support address bus. DWID (MSA9): When RESET is active this input specifies whether the DP83907 is interfacing to an 8-bit or 16-bit ISA bus. If the user puts an external pull-up on this pin then the bus is considered to be 16-bit. If the pin is left unconnected then the bus is considered to be 8-bit. EECONFIG(MSA10): When RESET is active this input specifies whether the DP83907 loads the configuration from an EEPROM or from the MSD0–15 and MSA1–8 pins. If the user puts an external pull-up on this pin then configuration data is loaded from the EEPROM. If the pin is left unconnected then configuration data is loaded from the EEPROM. If the pin slft unconnected then configuration data is loaded from the the signature register are loaded with the data value on these pins. If the user puts an external pull-up on any of these pins then the corresponding register bit is set to a 1. If the pin is left unconnected then the register bit is 0.
76	MSRD	O MOS	MEMORY SUPPORT BUS READ: Strobes data from the external RAM into the DP83907 via the memory support data bus.
74	MSWR	O MOS	<b>MEMORY SUPPORT BUS WRITE:</b> Strobes data from the DP83907 into the external RAM via the memory support data bus.
			Dutput, I/O = Bi-directional Output, OCH = Open Collector, 3ST = TRI-STATE Output, TTL = TTL Compatible, visted Pair Interface, LED = LED Drive, MOS = CMOS Level Compatible, XTAL = Crystal.

Pin No.	Pin Name	Туре	Description
EXTERNAL ME	MORY SUPPORT	(Continu	ied)
95	RCS	O MOS	<b>RAM CHIP SELECT:</b> Drives the chip select of the external RAM.
97	BPCS	O MOS	<b>BOOT PROM CHIP SELECT:</b> Selects the boot PROM on the memory support data bus. This is for READ only.
96	EECS	O MOS	<b>EEPROM CHIP SELECT:</b> Strobes data from the EEPROM onto the memory support data bus.
POWER SUPP			
40	AV <sub>CC</sub>		<b>ANALOG 5V SUPPLY PIN:</b> This pin supplies 5V to the DP83907's analog circuitry. To maximize data recovery it is recommended that analog layout and decoupling rules be applied between this pin and AGND.
41	AGND		ANALOG NEGATIVE (GROUND) SUPPLY PIN.
35, 48	XV <sub>CC</sub> , TPV <sub>CC</sub>		PHYSICAL MEDIA 5V SUPPLY PINS: This pin supplies 5V to the DP83907's analog physical media interface circuitry.
32, 49	XGND, TPGND		PHYSICAL MEDIA NEGATIVE (GROUND) SUPPLY PINS: This pin is the ground to the DP83907's analog physical media interface circuitry.
26, 109	coreV <sub>CC</sub>		POSITIVE 5V SUPPLY PINS: These pins suppy power to the DP83907.
27, 110	coreGND		<b>NEGATIVE (GROUND) SUPPLY PINS:</b> These are the supply pins for the DP83907. It is suggested that decoupling capacitors be connected between the $V_{CC}$ and GND pins. It is essential to provide a path to ground for the GND pins with the lowest possible impedance.
20, 70, 103	V <sub>CC</sub>		<b>POSITIVE 5V SUPPLY PINS:</b> These pins supply power to the DP83907 Output Drivers e.g., SD, MSD, MSA, Chip selects.
14, 17, 23, 28, 57, 75, 100, 106,113, 116, 131	GND		<b>NEGATIVE (GROUND) SUPPLY PINS:</b> These are the supply pins for the DP83907 Drivers. It is suggested that decoupling capacitors be connected between the $V_{CC}$ and GND pins. It is essential to provide a path to ground for the GND pins with the lowest possible impedance.

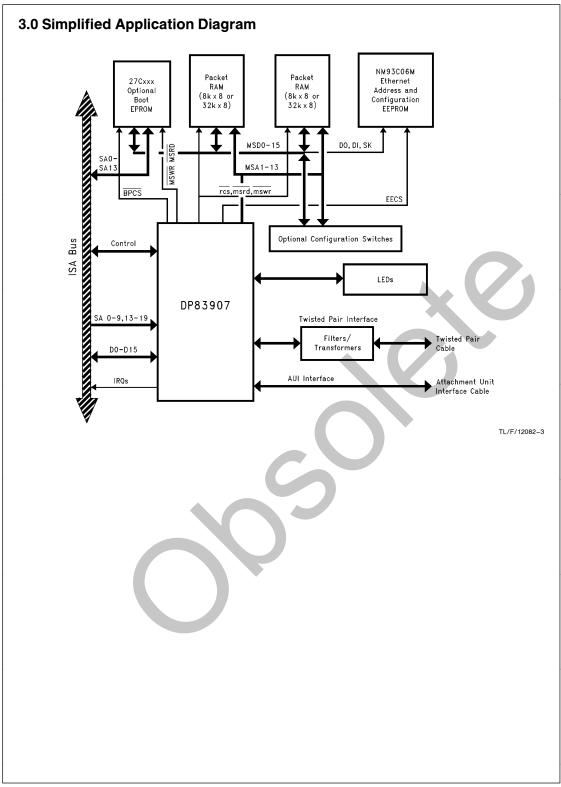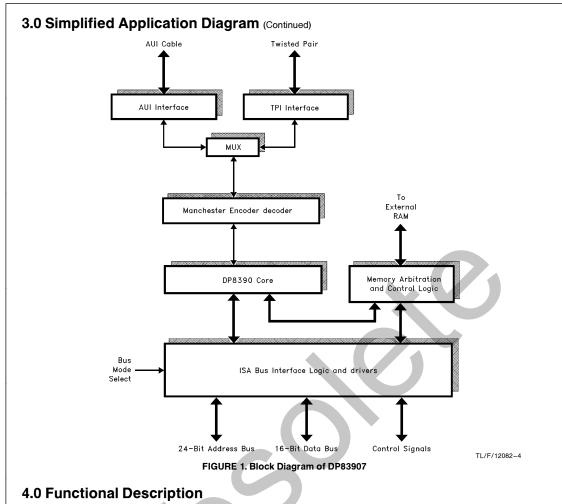Note: Driver Types are: I = Input, O = Output, I/O = Bi-directional Output, OCH = Open Collector, 3ST = TRI-STATE Output, TTL = TTL Compatible, AUI = Attachment Unit Interface, TPI = Twisted Pair Interface, LED = LED Drive, MOS = CMOS Level Compatible, XTAL = Crystal.





The DP83907 is a highly integrated and configurable Ethernet controller making it suitable for most Ethernet applications. The DP83907 integrates the functions of the following blocks:

- ISA Bus Interface containing all logic required to connect the DP8390 core to a packet buffer RAM and the ISA bus.
- 2. DP8390 Ethernet Controller Core and Media Access Control logic.
- 3. Media Interface which includes a TPI transceiver.


### 4.1 BUS INTERFACE BLOCK

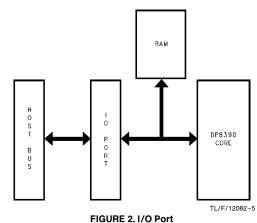The DP83907's Bus interface block provides the circuitry to interface the Ethernet controller logic and the external packet buffer RAM to an ISA (Industry Standard Architecture)

Bus. The bus interface provides an NE2000 Architecture compatible I/O port architecture, supporting both 8-bit and 16-bit wide ISA Bus slots.

### **DETERMINING 8-BIT OR 16-BIT WIDE DATA**


DP83907 can treat the system data bus and all internal data busses as 8 bits or 16 bits wide. 8-bit or 16-bit mode is determined by MSA9 at reset. For an adapter card this pin can be used to automatically detect if the card has been plugged into an 8-bit or 16-bit slot by connecting MSA9 via a 10 k\Omega pull-up resistor to a V<sub>DD</sub> on the upper connector. It will be pulled high when plugged into a 16-bit slot, enabling 16-bit mode, and floating when plugged into an 8-bit slot. When floating the internal pull-down resistor will enable 8-bit mode.




The DP83907's internal memory map is accessed one byte or word at a time, via a port within the systems I/O space. DP83907 is programmed by the user to control the transfers between its internal memory and the I/O port. The DP83907's internal registers and the memory access port are accessed within the system's I/O map. The address within this I/O map is, set by Configuration Register A.

# 16-BIT I/O PORT COMPATIBLE MODE I/O ADDRESS MAPPING

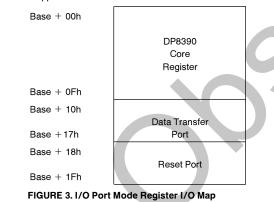This mode is compatible with Novell's NE2000 Architecture. The base I/O address of DP83907 is configured by Configuration Register A (either upon power up or by software writing to this register). At the base I/O address the following stwcture appears.



The DP83907 register space within this area are 8 bits wide, but the data transfer port is 16 bits wide. The DP83907's registers can be programmed to control the passing of data between its internal memory and the data transfer port. By accessing the data transfer port (using I/O instructions) the user can transfer data to or from the DP83907's internal memory. The DP83907's internal memory map is as shown below.

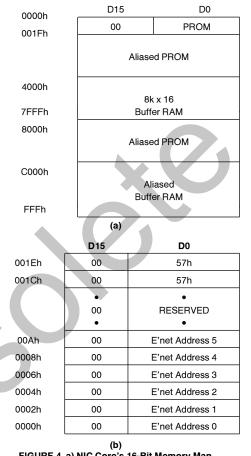

### FIGURE 4. a) NIC Core's 16-Bit Memory Map b) 16-Bit PROM Map

DP83907 has a 64k address range but only does partial decoding through this space. The PROM data is mirrored from all decodes up to 4000H and the entire map is repeated at 8000H. To access either the PROM or the RAM the user must initiate a Remote DMA transfer between the I/O port and memory.

On a remote read the DP83907 moves data from its internal memory map to the I/O port and the host system reads it by using an "INW" or "INSW" instruction from the I/O address of the data transfer port. If the system attempts to read the port before DP83907 has written the next word of data to it DP83907 will insert wait states into the system cycle using the CHRDY line. DP83907 will not begin the next memory read until the previous word of data has been read.

On a remote write the system writes data to the I/O port, using an "OUTW" or "OUTSW" instruction, and DP83907 moves it to its buffer memory. If the system attempts to write to the port before DP83907 has moved the data to memory, DP83907 will insert wait states into the system cycle using the CHRDY line. DP83907 will not begin the next memory write until a new word has been written to the I/O port.

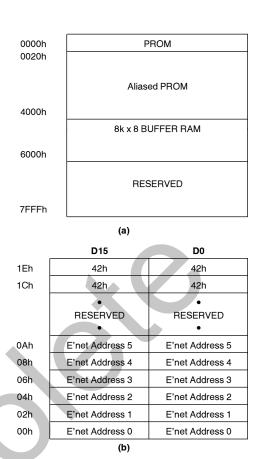
Addresses 00H to 1FH are specified as the PROM space for compatibility with the NE2000 Architecture. This is actually an array of 8-bit registers which are loaded from an external EEPROM after DP83907 is initialized by an ISA RE-SET. They should contain the same data as the PROM did in the NE2000 Architecture and in the same format. To transfer the data out the user must initiate a 16-bit DMA read transfer and discard the most significant byte of data on each transfer.

At address 00H of the PROM is a six byte Ethernet address for this node. The upper two addresses of the PROM store contain bytes which identify whether the DP83907 is in 8-bit or 16-bit mode. For 16-bit mode these bytes both contain the value 57H, for 8-bit mode they both contain 42H.

### 8-BIT I/O PORT COMPATIBLE MODE

This mode is compatible with the 8-bit mode offered by Novells NE2000 Architecture. The NE2000 automatically detects whether it is in an 8-bit or 16-bit slot and configures itself appropriately. As explained in the previous paragraphs, the user can determine whether the board is in 8-bit or 16-bit mode by reading the PROM. In 8-bit mode only 8 Kbytes of RAM are addressable, as in the 8-bit mode of the NE2000 Architecture. The I/O map is the same as the 16-bit mode, the memory map is shown in *Figure 5*. Again the PROM has only a partial decode, so is mirrored at all addresses up to 4000H. The PROM still occupies 32 bytes of address space, although it only has 16 bytes of data, as the data at all odd address locations is merely a mirror of the data at the previous even address location.


A low cost card, using only one 8 Kbyte RAM, can be designed. If the function on MSA9 is left unconnected, then the DP83907 will always operate in 8-bit mode, regardless of the slot the board is in.



### FIGURE 5. a) 8-Bit NIC Core's Memory Map b) 8-Bit PROM Map

### 4.2 POWER ON RESET OPERATION

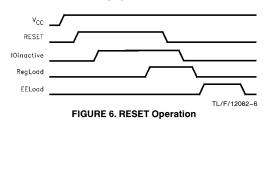The DP83907 configures itself after a Reset signal is applied. To be recognized as a valid Power-On-Reset the Reset signal must be active for at least 415  $\mu$ s. *Figure 6* shows how the RESET circuitry operates.



The ISA standard determines that within 500 ns of RESET going active all devices should enter the appropriate reset condition. The DP83907 will generate the internal signal lOinactive after RESET has been active for 400 ns, which will disable all outputs and cause RESET to be the only input monitored. The DP83907 will not respond to a RESET pulse of shorter duration than this. An internal timer continues to monitor the amount of time RESET is active. After 415  $\mu$ s it is considered a valid Power-On-Reset and an internal signal called RegLoad is generated.

When a Power-On-Reset occurs the DP83907 latches in the values on the configuration pins and uses these to configure the internal registers and options. Internally these pins contain pull-down resistors, which are enabled when lOinactive goes active. If any pins are unconnected they default to a logic zero. The internal pull-down resistor has a high resistance to allow the external pull-up resistors to be of a high value. This limits the current taken by the memory support bus. The suggested external resistor value is 10 k $\Omega$ . The configuration registers are loaded from the memory support bus when RESET goes inactive if RegLoad is active. The internal pull-down resistors are enabled onto the bus until RegLoad has gone inactive.

A Power-On-Reset also causes the DP83907 to load the internal PROM space from the EEPROM, which can take up to 320  $\mu$ s. This occurs after RegLoad has gone inactive. The DP83907 will be inaccessible during this time. If EECONFIG is held high the configuration data loaded on the falling edge of RESET will be overwritten with data read from the serial EEPROM. Regardless of the level on EECONFIG, the PROM space will always be loaded with data from the serial EEPROM during the time specified as EELoad.

### **4.3 EEPROM OPERATION**

The DP83907 uses an NMC93C06, or another serial EEPROM with compatible timings. The NMC93C06 is a 256bit device, arranged as 16 words by 16 bits wide. The programmed contents of the EEPROM is shown in *Figure 7*.

	D15	D0
0Fh	EEPROM Code	Config. C
0Eh	Config. B	Config. A
	•	•
	:	
08h	42h	42h
07h	57h	57h
	•	•
	•	•
	•	•
03h	Reserved	Reserved
02h	E'net Address 5	E'net Address 4
01h	E'net Address 3	E'net Address 2
00h	E'net Address 1	E'net Address 0

FIGURE 7. EEPROM Programming Map

### Mapping EEPROM into PROM Space

Data is read from the EEPROM at boot time and stored in registers within the DP83907. While this operation takes place the DP83907 can not be accessed by the system. These registers are mapped into the space traditionally occupied by the PROM in the NE2000

The user should program the EEPROM to contain the Ethernet address in the first six bytes and whatever is required in the next 8 bytes. The user should then program 5757H and 4242H into address 07h and 08h respectively. The DP83907 device driver may determine that this is a 16-bit board by checking this value.

The DP83907 reads the first 8 words from the EEPROM and maps them into the memory map at the appropriate address.

### In Circuit ProgrammIng the EEPROM

If the upper byte of address 0Fh in the EEPROM does not contain 073H then the DP83907 enters a mode that allows the EEPROM contents to be programmed. This can be used in production to program the EEPROM in-situ. By programming 073H into the uppermost byte the EEPROM is protected from future adaptation, except for configuration data which can always be modified.

If the EEPR bit of the Signature Register is low the EEPROM program mode may be entered. The EEPR bit is low if the EEPROM code is not programmed as 73H. In this mode, if the EELOAD bit of Configuration Register B is set the user can directly control the EEPROM signals by writing to the Data Transfer Port. The user can write to the Data Transfer Port and the value on the SD3, SD2 and SD1 pins will be driven onto the EECS, SK and DI outputs. These outputs will be latched. The user can generate a clock on SK by repetitively writing 1 then 0 to the appropriate bit. This can be used to generate the EEPROM signals, as per the NM93C06 data sheet.

When the EEPROM has been programmed the user must give the DP83907 a reset signal to return to normal operation and to read in the new data.

### Storing and Loading Configuration from EEPROM

If the EECONFIG function on MSA10 is high during boot up the DP83907's configuration is read from the EEPROM, before the PROM data is read. The configuration data is stored within the upper two words of the EEPROM's address space. Configuration Registers A and B are located in the lower of these words, Register C in the lower byte of the upper word, as shown in *Figure 7*.

To write this configuration into the EEPROM the user must follow the routine specified in the pseudo code below. If the EEPROM code byte in the EEPROM is programmed as 73H the Configuration Registers may be written to in the EPROM. This operation will work regardless of the level on EECONFIG. The EELOAD bit of Configuration Register B being set starts the EEPROM write process. Care should be taken not to accidentally set the GDLINK bit and therefore disable link integrity checking. The next 3 writes to this register load the values that will be stored in the configuration register (note that the last 2 of these writes do not have to follow the normal practice of preceding a write to this register with a read to this address). The DP83907 will then commence the EEPROM write. The write has been completed when the EELOAD bit goes to zero. This loading proce-

dure should be followed exactly and interrupts should be disabled until it has completed, to prevent any accidental accesses to the DP83907.

```
EEPROM_LOAD()
```

### 4.4 JUMPERLESS OPERATION SUPPORT

One of the biggest problems in installing new adapters in a PC is not knowing the available resources within that machine. DP83907's software configuration overcomes that problem. The conflicts possible in the I/O base selection can be overcome by a special mode for software configuration of the I/O base address. By using this mode, and by using the configuration storage capability of the EEPROM, a fully software configurable design on the ISA bus can be realized without address conflict problems.

This mode is invoked by having the DP83907 default to jumperless software configuration option in the I/O base selection. This mode enables configuration register A to be mapped to address location 278H which is defined to be a printer port's data register. If software writes to this location four consecutive times, on the fourth write the DP83907 will load the data written into the I/O address bits of Configuration Register A. This data should set the I/O base address to a known conflict-free value. The DP83907 can now be configured and operated at the desired base I/O address. If desired, the configuration software could change the EEPROM content to the new values eliminating the need to reconfigure upon each power up. Alternately the software could leave the EEPROM alone and execute the configuration using the printer port's data register upon each power up. This configuration scheme will only work once after each power-up. Therefore the user can not enable the DP83907 from reserved mode, change it back into reserved mode and enable it again. A power-on reset must occur between the first time it is enabled from the reserved mode and the second.

### 4.5 ETHERNET CABLE CONFIGURATION

DP83907 offers the choice of all the possible Ethernet cabling options, that is Ethernet (10BASE5), Thin Ethernet (10BASE2) and Twisted-pair Ethernet (10BASE-T). The type of cabling used is controlled by Configuration Register B. DP83907 also supplies a THIN output signal which can be used to disable/enable an external DC-DC converter which is required for 10BASE2.

### 4.6 INTERRUPT AND LED OPERATION

The DP83907 has only one Interrupt Mode. There are 8 possible interrupts. Configuration Register A controls which of the 8 interrupt lines are driven, the others are TRI-STATE. The interrupt outputs should be connected to the following ISA Interrupt lines, In the order given, to maintain NE2000 Architecture compatibility: 3, 4, 5, 9, 10, 11, 12, 15.

### **4.7 BOOT PROM OPERATION**

The DP83907 supports an optional boot PROM, the address and size of which can be set in Configuration Register C. This boot PROM can be any 8-bit wide storage device implemented with a non-volatile technology. Write cycles to this device can be enabled and disabled by programming Configuration Register B. This can be used to prevent unwanted write cycles to certain devices, such as a Flash EEPROM. The DP83907 supplies the chip select to the device and buffers the data on to and from the ISA bus, so the memory support data bus should be connected to the boot PROM's data pins.

### 4.8 DP8390 CORE (NETWORK INTERFACE CONTROL-LER)

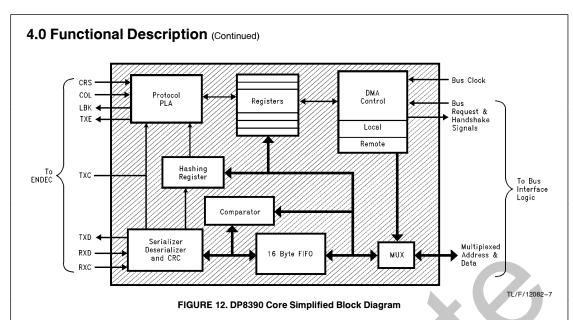
The DP8390 Core logic, *Figure 12*, contains the Serializer/ Deserializer which is controlled by the Protocol PLA, DMA Control, FIFO, Address Comparator and Multicast Hashing Register. The DP8390 core implements all of the IEEE 802.3 Media access control functions for the DP83907 and interfaces to the internal ENDEC (on the left of the block diagram) and to the Bus Interface and memory support bus via a number of address, data and control signals (the right side of the block diagram). The following sections describe the functions of the DP8390 core.

### **Receive DeserialIzer**

The Receive Deserializer is activated when the input signal Carrier Sense is asserted to allow incoming bits to be shifted into the shift register by the receive clock. The serial receive data is also routed to the CRC generator/checker. The Receive Deserializer includes a synch detector which detects the SFD (Start of Frame Delimiter) to establish where byte boundaries within the serial bit stream are located. After every eight receive clocks, the byte wide data is transferred to the 16-byte FIFO and the Receive Byte Count is incremented. The first six bytes after the SFD are checked for valid comparison by the Address Recognition Logic. If the Address Recognition Logic does not recognize the packet, the FIFO is cleared.

### **CRC Generator/Checker**

During transmission, the CRC logic generates a local CRC field for the transmitted bit sequence. The CRC encodes all fields after the SFD. The CRC is shifted out MSB first follow-



ing the last transmit byte. During reception the CRC logic generates a CRC field from the incoming packet. This local CRC is serially compared to the incoming CRC appended to the end of the packet by the transmitting node. If the local and received CRC match, a specific pattern will be generated and decoded to indicate no data errors. Transmission errors result in different pattern and are detected, resulting in rejection of a packet.

### **Transmit Serializer**

The Transmit Serializer reads parallel data from the FIFO and serializes it for transmission. The serializer is clocked by the transmit clock generated internally. The serial data is also shifted into the CRC generator/checker. At the beginning of each transmission, the Preamble and SFD Generator append 62 bits of 1,0 preamble and a 1,1 synch pattern. After the last data byte of the packet has been serialized the 32-bit FCS (Frame Check Sequence) field is shifted directly out of the CRC generator. In the event of a collision the Preamble and SFD generator is used to generate a 32-bit JAM pattern of all 1's.

### **Comparator-Address Recognition Logic**

The address recognition logic compares the Destination Address Field (first 6 bytes of the received packet) to the Physical address registers stored in the Address Register Array. If any one of the six bytes does not match the pre-programmed physical address, the Protocol Control Logic rejects the packet. All multicast destination addresses are filtered using a hashing technique. (See register description.) If the multicast address indexes a bit that has been set in the filter bit array of the Multicast Address Register Array the packet is accepted, otherwise it is rejected by the Protocol Control Logic. Each destination address is also checked for all 1's which is the reserved broadcast address.

### **FIFO and Packet Data Operations**

### OVERVIEW

To accommodate the different rates at which data comes from (or goes to) the network and goes to (or comes from) the packet buffer memory, the DP83907 contains a 16-byte FIFO for buffering data between the media and the buffer RAM located on the memory support bus. The FIFO threshold is programmable. When the FIFO has filled to its programmed threshold, the local DMA channel transfers these bytes (or words) into local memory (via the memory bus). It is crucial that the local DMA is given access to the bus within a minimum bus latency time; otherwise a FIFO underrun (or overrun) occurs.

FIFO underruns or overruns are caused when a local DMA request is issued while an ISA bus access is current and the ISA cycle takes longer to complete than the local DMA's tolerable latency. This tolerable latency depends on the FIFO threshold, whether it is in byte or word wide mode and the speed of the DMA clock (BSCLK frequency). Note that this refers to standard ISA cycles, NOT those where the CHRDY is deasserted extending the cycle.

### **FIFO THRESHOLD DETECTION**

To assure that no overwriting of data in the FIFO, the FIFO logic flags a FIFO overrun as the 13th byte is written into the FIFO, effectively shortening the FIFO to 13 bytes. The FIFO logic also operates differently in Byte Mode and in Word Mode. In Byte Mode, a threshold is indicated when the n + 1 byte has entered the FIFO; thus, with an 8 byte threshold, the DP83907 issues a request to the buffer RAM when the 9th byte has entered the FIFO, making the effective threshold 9 bytes. For Word Mode, the request is not generated until the n + 2 bytes have entered the FIFO. Thus, with a 4 word threshold (equivalent to 8 byte threshold), a request to the buffer RAM is issued when the 10th byte has entered the FIFO, making the effective threshold to Bytes.

# TOLERABLE LATENCY CALCULATION

To prevent a FIFO **overrun** a byte (or word) of data must be **removed** from the FIFO before the 13th byte is written. Therefore the worst case tolerable latency is the time from the effective threshold being reached to the time the 13th byte is written minus the time taken to load the first byte (or word) of data to the FIFO during a local DMA burst (8 BSCLKs).

tolerable latency = ((overrun - effective) threshold

imes time to transfer byte on network)

- time to fill 1st FIFO location

For the case of a 4 word threshold using a 20 MHz BSCLK: tolerable latency = ((13 - 10)  $\times$  800) - (8  $\times$  50) ns

### = 2 us

To prevent a FIFO **underrun** a byte (or word) of data must be **added** to the FIFO before the last byte is removed. Therefore the worst case tolerable latency is the time from the effective threshold being reached to the time the last byte is removed minus the time taken to load the first byte (or word) of data to the FIFO during a local DMA burst (8 BSCLKs).

tolerable latency = (threshold

 $\times$  time to transfer byte on network) - time to fill 1st FIFO location

For the case of a 4 word threshold using a 20 MHz BSCLK: tolerable latency =  $(4 \times 800) - (8 \times 50)$  ns

$$= 2.8 \ \mu s$$

The worst case latency, either overrun or underrun, ultimately limits the overall latency that the DP83907 can tolerate. If the standard ISA cycles are shorter than the worst case latency, then no FIFO overruns or underruns will occur.

### **BEGINNING OF RECEIVE**

At the beginning or reception, the DP83907 stores the entire Address field of each incoming packet in the FIFO to determine whether the packet matches its Physical Address Registers or maps to one of its Multicast Registers. This causes the FIFO to accumulate 8 bytes. Furthermore, there are some synchronization delays in the DMA PLA. Thus, the actual time that a request to access the buffer RAM is asserted from the time the Start of Frame Delimiter (SFD) is detected is 7.8 µs. This operation affects the bus latencies at 2 and 4 byte thresholds during the first receive request since the FIFO must be filled to 8 bytes (or 4 words) before issuing a request to the buffer RAM.

### END OF RECEIVE

When the end of a packet is detected by the ENDEC module, the DP83907 enters its end of packet processing sequence, emptying its FIFO and writing the status information at the beginning of the 1st buffer. The DP83907 holds onto the memory bus for the entire sequence. The longest time that local DMA will hold the buffer RAM occurs when a packet ends just as the DP83907 performs its last FIFO burst. The DP83907, in this case, performs a programmed burst transfer followed by flushing the remaining bytes in the FIFO, and completed by writing the header information to the buffer memory. The following steps occur during this sequence.

- 1. DP83907 issues request to access the RAM because the FIFO threshold has been reached.
- During the burst, the packet ends, resulting in the request being extended.
- 3. DP83907 flushes remaining bytes from FIFO.
- 4. DP83907 performs internal processing to prepare for writing the header.
- 5. DP83907 writes 4-byte (2-word) header
- 6. DP83907 de-asserts access to the buffer RAM.

### **BEGINNING OF TRANSMIT**

Before transmitting, the DP83907 performs a prefetch from memory to load the FIFO. The number of bytes prefetched is the programmed FIFO threshold. The next request to the buffer RAM is not issued until after the DP83907 actually begins transmitting data, i.e., after SFD.

### **READING THE FIFO**

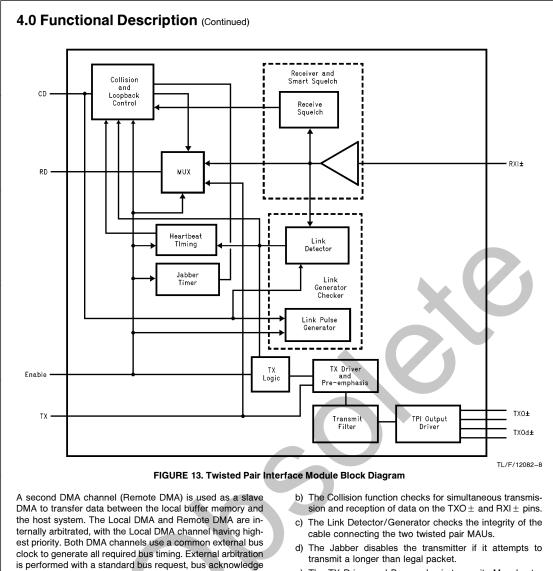
If the FIFO is read during normal operation the DP83907 will "hang" the ISA bus by deasserting CHRDY and never asserting it. The FIFO should only be read during loopback diagnostics.

### PROTOCOL PLA

The protocol PLA is responsible for implementing the IEEE 802.3 protocol, including collision recovery with random backoff. The Protocol PLA also formats packets during transmission and strips preamble and synch during reception.

### DMA AND BUFFER CONTROL LOGIC

The DMA and Buffer Control Logic is used to control two 16-bit DMA channels. During reception, the Local DMA stores packets in a receive buffer ring, located in buffer memory. During transmission the Local DMA uses programmed pointer and length registers to transfer a packet from local buffer memory to the FIFO.



e) The TX Driver and Pre-emphasis transmits Manchester encoded data to the twisted pair network via the summing resistors and transformer/filter.

handshake protocol.

**4.9 TWISTED PAIR INTERFACE MODULE** 

inputs (RXI $\pm$ ) and receiving the data.

The TPI consists of five main logical functions:

a) The Receiver/Smart Squelch, responsible for determining when valid data is present on the differential receive

### **Receiver and Smart Squelch**

The DP83907 implements an intelligent receive squelch on the RXI± differential inputs to ensure that impulse noise on the receive inputs will not be mistaken for a valid signal.

The squelch circuitry employs a combination of amplitude and timing measurements to determine the validity of data on the twisted pair inputs. There are two voltage level options for the smart squelch. One mode, 10BASE-T mode, uses levels that meet the 10BASE-T specification. The second mode, reduced squelch mode, uses a lower squelch threshold level, and can be used in longer cable applications where due to attenuation smaller signal levels may be present. The squelch level mode can be selected in the DP83907 configuration registers.

*Figure 14* shows the operation of the smart squelch in 10BASE-T mode.

The signal at the start of packet is checked by the smart squelch and any pulses not exceeding the squelch level (either positive or negative, depending upon polarity) will be rejected. Once this first squelch level is overcome correctly the opposite squelch level must then be exceeded within 150 ns later. Finally the signal must exceed the original squelch level within a further 150 ns to ensure that the input waveform will not be rejected. The checking procedure results in the loss of typically three bits at the beginning of each packet.

Only after all these conditions have been satisfied will a control signal be generated to indicate to the remainder of the circuitry that valid data is present. At this time the smart squelch circuitry is reset.

In the reduced squelch mode the operation is identical except that the lower squelch levels shown in the figure are used.

Valid data is considered to be present until either squelch level has not been generated for a time longer than 150 ns, indicating End of Packet. Once good data has been detected the squelch levels are reduced to minimize the effect of noise causing premature End of Packet detection.

### Collision

A collision is detected by the TPI module when the receive and transmit channels are active simultaneously. If the TPI is receiving when a collision is detected it is reported to the controller immediately. If, however, the TPI is transmitting when a collision is detected the collision is not reported until seven bits have been received while in the collision state. This prevents a collision being reported incorrectly due to noise on the network. The signal to the controller remains for the duration of the collision.

Approximately 1  $\mu$ sec after the transmission of each packet a signal called the Signal Quality Error (SQE) consisting of typically 10 cycles of 10 MHz is generated. This 10 MHz signal, also called the Heartbeat, ensures the continued functioning of the collision circuitry.

### Link Detector/Generator

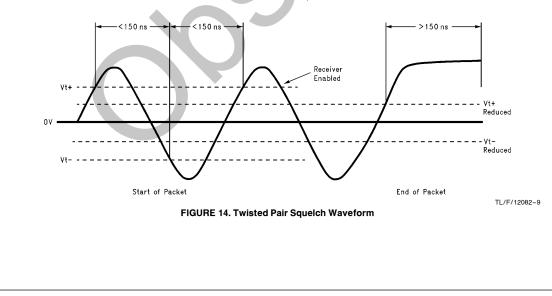
The link generator is a timer circuit that generates a link pulse as defined by the 10 Base-T specification that will be generated by the transmitter section. The pulse which is 100 ns wide is transmitted on the TXO+ output, every 16 ms, in the absence of transmit data.

The pulse is used to check the integrity of the connection to the remote MAU. The link detection circuit checks for valid pulses from the remote MAU and if valid link pulses are not received the link detector will disable the transmit, receive and collision detection functions.

The GDLNK output can directly drive a LED to show that there is a good twisted pair link. For normal conditions the LED will be on. The link integrity function can be disabled by setting the GDLNK bit of Configuration Register B.

### Jabber

The jabber timer monitors the transmitter and disables the transmission if the transmitter is active for greater than 26 ms. The transmitter is then disabled for the whole time that the Endec module's internal transmit enable is asserted. This signal has to be deasserted for approximately 750 ms (the unjab time) before the Jabber re-enables the transmit outputs.



### Transmitter

The transmitter consists of four signals, the true and compliment Manchester encoded data (TXO $\pm$ ) and these signals delayed by 50 ns (TXOd $\pm$ ).

These four signals are resistively combined TXO+ with TXOd- and TXO- with TXOd+. This is known as digital pre-emphasis and is required to compensate for the twisted pair cable which acts like a low pass filter causing greater attenuation to the 10 MHz (50 ns) pulses of the Manchester encoded waveform than the 5 MHz (100 ns) pulses.

An example of how these signals are combined is shown in the following diagram.


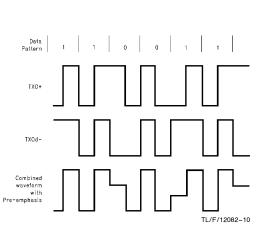


FIGURE 15. Typical Summed Transmit Waveform

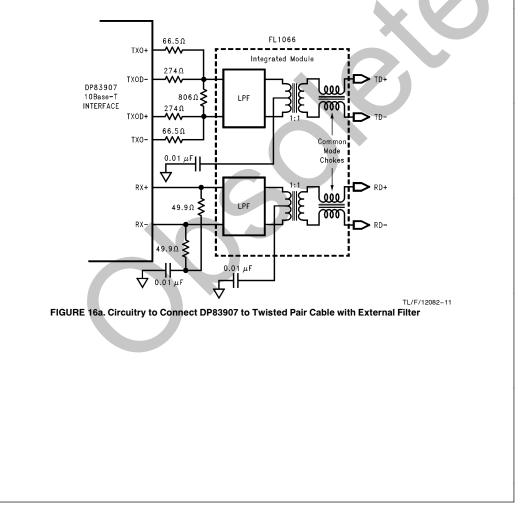The signal with pre-emphasis shown above is generated by resistively combining TXO+ and TXOd-. This signal along with its compliment is passed to the transmit filter.



### 4.0 Functional Description (Continued) PT4160 10.5Ω TXO-16.9.0 TXOD-TXO+ 5V See DP83907 Pg. 61 тст 10Base-RTX INTERFACE 10.5Ω TXOD-TXO-~~~ 16.90 TXO- $\sim$ 0.01 µF $\uparrow$ RX-RCT+ RCT 49.9.0 RX-RCT-Ŷ 49.9Ω 0.01μF 4 0.01 μF TL/F/12082-52 FIGURE 16b. Circuitry to Connect DP83907 to Twisted Pair Cable with Internal Filter

### **On-Chip Filters**

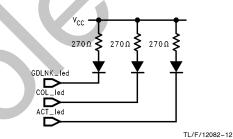
The on-chip filters are enabled via an external pull-up resistors on  $MSD \le 12^>$  at configuration. Only an isolation transformer and impedance matching resistors are needed for the transmit and receive twisted pair interface.


### **UTP/STP Function**

The TPI transceiver supports both shielded and unshielded twisted pair cable. UTP is default but STP can be enabled during configuration by a pull-up on MSA<7> or by setting bit D6 of configuration register C. In UTP mode TXO + and TXOD+ are driven and TXOD- and TXOD- are TRI-STAT-ED. In STP mode, TXO- and TXOD- are driven and TXO+ and TXO+ are driven and TXO+ are TRI-STATED.

### **Auto-Switch Function**

When an auto-switch function is enabled at configuration by a pull-up on MSA <5> or by setting bit D4 of the configuration register C, it allows the transceiver to switch between TP and AUI outputs. If there is an absence of link pulses, the transceiver will switch to AUI mode. Similarly, when the transceiver starts detecting link pulses it will switch to TP mode. The switching from one mode to the next is only done after the current package has been transmitted or received. If the twisted pair output is jabbering and gets into link fail state, then the switch to AUI mode is only done after the jabbering is done, including the time it takes to unjab (unjab time). When auto-switching is enabled the THIN output is automatically generated if AUI is selected.






### Status Information

Status information is provided by the DP83907 on the ACT\_led, COL\_led and GDLNK\_led outputs as described in the pin description table. These outputs are suitable for driving status LED's as shown in *Figure 17*. All outputs are open drain.

Recommended Transformers for Internal Filter mode:

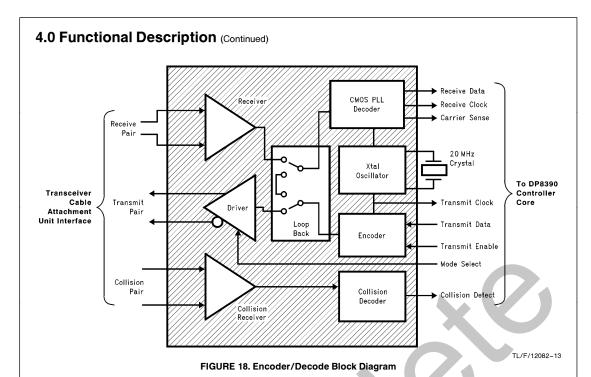- 1) Valor PT4160
- 2) Pulse PE-68029
- 3) PCA EPE6087A
- 4) Delta THX16B02
- 5) Belfus A553-3899-06
- 6) Kappa TP3036



# 4.10 ENCODER/DECODER (ENDEC) MODULE

The ENDEC consists of four main logical blocks:

- a) The oscillator generates the 10 MHz transmit clock signal for system timing.
- b) The Manchester encoder accepts NRZ data from the controller, encodes the data to Manchester, and transmits the data differentially to the transceiver, through the differential transmit driver.
- c) The Manchester decoder receives Manchester data from the transceiver, converts it to NRZ data and clock pulses, and sends it to the controller.
- d) The collision translator indicates to the controller the presence of a valid 10 MHz collision signal to the PLL.

### Oscillator

The oscillator is controlled by a 20 MHz parallel resonant crystal connected between X1 and X2 or by an external clock on X1. The 20 MHz output of the oscillator is divided by 2 to generate the 10 MHz transmit clock for the controller. The oscillator also provides internal clock signals to the encoding and decoding circuits.

### **CRYSTAL OPERATION**

If the crystal used with the internal oscillator circuit is not properly selected, the DP83907 oscillator may not reliably start oscillation under all conditions.

If this occurs, it could be deceiving to a designer, since his prototypes may work fine. However, when the designer does qualification testing or starts production, he may encounter a higher than expected board yield loss due to the oscillator not starting. The DP83907's oscillator circuit clocks the Encoder Decoder logic. The DP83907's oscillator also clocks the twisted pair interface block. If the oscillator does not start, the DP83907 will not be able to transmit or receive.

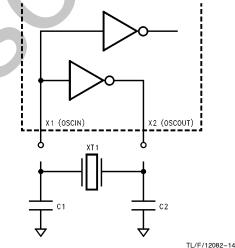


FIGURE 19. Crystal Connection to DP83907 (see text for component values)

If a crystal is connected to the DP83907, it is recommended that the circuit shown in *Figure 19* be used and that the components used meet the following:

Crystal XT1: AT cut parallel resonant crystal

Series Resistance:  $\leq$  25 $\Omega$ 

Specified Load Capacitance:  $\leq$  20 pF

Accuracy: 0.005% (50 ppm)

Typical Load: 50 µW-75 µW

The recommended values for capacitors C1 and C2 should be 26 pF minus the board capacitance on that pin. Therefore if both X1 and X2 have 4 pF of board capacitance then a 22 pF capacitor should be used.

According to the IEEE 802.3 standard, the entire oscillator circuit (crystal and amplifier) must be accurate to 0.01%. When using a crystal, the X2 pin is not guaranteed to provide a TTL compatible logic output, and should not be used to drive external standard logic. If additional logic needs to be driven, then an external oscillator should be used, as described in the following section.

### **Oscillator Module Operation**

If the designer wishes to use a crystal clock oscillator, one that provides the following should be employed:

TTL or CMOS output with a 0.01% frequency tolerance
 40-60% duty cycle

The circuit is shown in *Figure 20*. When using a clock oscillator it is recommended that the designer connect the oscillator output to the X1 pin and leave the X2 pin floating.

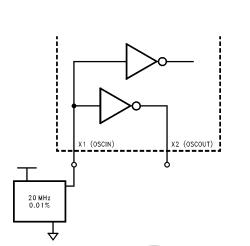


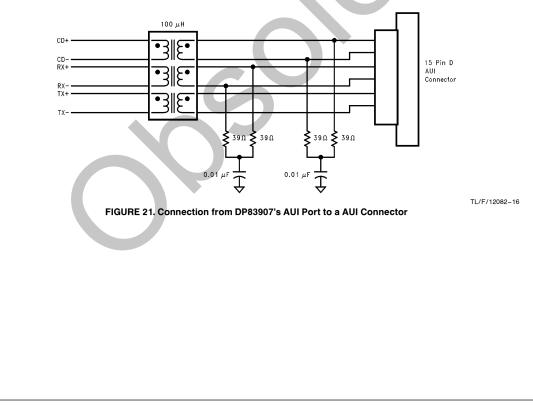


FIGURE 20. DP83907 Connection for Oscillator Module

### Manchester Encoder and Dlfferential Driver

The differential transmit pair, on the secondary of the employed transformer, drives up to 50 meters of twisted pair AUI cable.

The DP83907 allows full-step to be compatible with IEEE 802.3. Transmit+ and Transmit- are equal in the idle state, providing zero differential voltage to operate with transformer coupled loads.



### Manchester Decoder

The decoder consists of a differential receiver and a PLL to separate a Manchester encoded data stream into internal clock signals and data. The differential input must be externally terminated with two 39 $\Omega$  resistors connected in series if the standard 78 $\Omega$  transceiver drop cable is used. In thin Ethernet applications, these resistors are optional. To prevent noise from falsely triggering the decoder, a squelch circuit at the input rejects signals with levels less than -175 mV. Signals more negative than -300 mV. Data becomes valid typically within 6-bit times. The DP83907 may tolerate bit jitter up to 20 ns in the received data. The decoder detects the end of a frame when no more mid-bit transitions are detected.

### **Collision Translator**

When in AUI Mode, the Ethernet transceiver (DP8392 CTI) detects a collision, it generates a 10 MHz signal to the differential collision inputs (CD $\pm$ ) of the DP83907. When these inputs are detected active, the DP83907 uses this signal to back off its current transmission and reschedule another one.

In this mode the COL\_led output will indicate when the CD+ lines are active during activity on the network. This means it will correctly indicate any collision on the network, but will not be lit for heartbeat or if there is no cable connected.

The collision differential inputs are terminated the same way as the differential receive inputs. The squelch circuitry is also similar, rejecting pulses levels less than -175 mV.

### AV<sub>CC</sub> Power Supply Consideration

The AV<sub>CC</sub> pin is the +5V power supply for the phase lock loop (PLL) of the ENDEC unit. Since this is an analog circuit, excessive noise on the AV<sub>CC</sub> pin can affect the performance of the PLL. This noise, if in the 10 KHz-400 KHz range, can reduce the jitter performance of the ENDEC, resulting in missing packets or CRC errors.

If the power supply noise is causing significant packet reception error, a low pass filter could be added to reduce the power supply noise and hence improve the jitter performance. Standard analog design techniques should be utilized when laying out the power supply traces on the board. If the digital power supply is used, it may be desirable to add a one pole RC filter (designed to have a cut-off frequency of 1 KHz) as shown in *Figure 22* to improve the jitter performance. The AV<sub>CC</sub> draws 3 mA-4 mA so the voltage across the resister is less than 90 mV, which will not affect the PLL's operation.

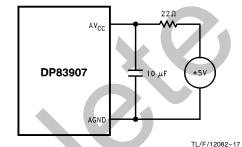


FIGURE 22. Filtering Power Supply Noise


# **5.0 Register Descriptions**

# 5.1 CONFIGURATION REGISTERS

These registers are used to configure the operation of the DP83907 typically after power up. These registers control the configuration of bus interface, setting options like interrupt selection, I/O base address, and other specific modes.

# MODE CONFIGURATION REGISTER A


To prevent any accidental writes of this register it is "hidden" behind a previously unused register. Register 0AH in the DP83907's Page 0 of registers was previously reserved on a read. Now Configuration Register A can be read at that address and can be written to by following a read to 0AH with a write to 0AH. If any other DP83907 register accesses take place between the read and the write then the write to 0AH will access the Remote Byte Count Register 0.



Bit	Symbol	Function
0-2	IOAD0-IOAD2	I/O ADDRESS: These three bits determine the base I/O address of the DP83907 within the system's I/O map. The DP83907 occupies 20H bytes of the system's address space.         Bit 2 1 0       0 0 0 0300H         0 0 1       Software (Note 1)         0 1 0       0240H         0 1 1       0280H         1 0 0       02C0H         1 1 0       0320H         1 1 0       0340H         1 1 1       0360H         Note 1: When 001 is selected the DP83907 will not respond to any I/O Addresses, but will allow 4 consecutive writes to 278H to write these three bits of this register. This sequence will only operate once after a power-on reset. This mode allows the DP83907
		to be configured via software without conflicting with other peripherals.
3–5	INTO-INT2	INTERRUPT LINE USED:         Bit 5 4 3       IRQ         0 0 0       3         0 0 1       4         0 1 0       5         0 1 1       9         1 0 0       10         1 0 1       11         1 1 0       12         1 1 1       15
6	FRd/WR	<b>FAST RD/WR:</b> When this bit is set high the DP83907, in I/O mode, will begin the next port fetch before the current IORD/IOWR has completed. In slow ISA systems this may cause the data in the port to be overwritten before the ISA cycle has been completed.
7	RES	RESERVED: This bit must be set low for normal operation.

# MODE CONFIGURATION REGISTER B

To prevent any accidental writes of this register it is "hidden" behind a previously unused register. Register 0BH in the DP83907's Page 0 of registers was previously reserved on a read. Now Configuration Register B can be read at that address and can be written to by following a read to 0BH with a write to 0BH. If any other DP83907 register accesses take place between the read and the write then the write to 0BH will access the Remote Byte Count Register 1. **Care should be taken when writing to this register a GDLINK and BE are not simple read/write bits.** e.g., the user can not change the physical layer by reading B, or-ing the returned value with the bits to be set and writing this value to B. This could inadvertently disable link integrity generation and clear a bus error indication before it was noted.



Bit Symbol	Function
PHYS0- PHYS1	PHYSICAL LAYER INTERFACE: These 2 bits determine which type of physical interface the DP83907 is using. The 2 TPI interfaces use twisted pair outputs and inputs, while the other 2 interfaces use the AUI outputs and inputs. In 10BASE5 mode the THICK/THIN output pin is driven low, in 10BASE2 mode it is driven high. This can be used to enable the DC-DC converter required by the 10BASE2 specification to provide electrical isolation. The Non spec TPI mode is a twisted pair mode with reduced receive squelch levels. This allows the use of longer cable lengths than specified in the twisted pair specification, or the use of cable with higher losses.         Bit 1 0       0       TPI (10BASE-T Compatible Squelch Level)         0 1       Thin Ethernet (10BASE2)         1 0       Thick Ethernet (10BASE5) (AUI Port)         1 1       TPI (Reduced Squelch Level)
2 GDLINK	GOOD LINK: When a 1 is written to this bit the link test pulse generation and integrity checking is disabled
	When this bit is read it will indicate the link status, reflecting the value shown on the LED output. It is 0 if the DP83907 is in AUI mode or if link testing is enabled and the link integrity is bad (i.e., the twisted pair link has been broken). It is 1 if the DP83907 is in TPI mode, link integrity checking is enabled and the link integrity is good (i.e., the twisted pair link has <b>not</b> been broken) or if the link testing is disabled.
3 IO16CON	<b>IO16 CONTROL:</b> When this bit is set high the DP83907 generates IO16 after IORD or IOWR go active. If low this output is generated only on address decode.
4 RES	RESERVED: This bit must be set low for normal operation.
5 BE	<b>BUS ERROR:</b> This bit shows that the DP83907 has detected a bus error condition. This will go high if the DP83907 attempts to insert wait states into a system access and the system terminates the cycle without inserting the wait states. Writing a one to this bit clears it to zero. Writing a zero has no effect.
6 BPWR	BOOT PROM WRITE: When this bit is low no write cycles are generated to the boot PROM.
7 EELOAD	<b>EEPROM LOAD:</b> Writing a 1 to this bit enables the EEPROM load algorithm as detailed in Section 4. This bit should not be configured to be high, either from switches or an EEPROM.

	ymbol PS0-3	within t	the select us. The fo Bit 2 0 0 0	ted memo	ory area [ are valid a <b>Bit 0</b>	ddress at whi		1 BPS1 begins a	0 BPS0		
	-	within t data bu Bit 3 0 0 0 0	PROM S the select us. The fo Bit 2 0 0 0	ELECT: S ted memo Illowing a Bit 1 0	Selects a ory area [ ure valid a <b>Bit 0</b>	ddress at whi DP83907 read	Function ch boot PROM	J			
	-	within t data bu Bit 3 0 0 0 0	the select us. The fo Bit 2 0 0 0	ted memo ollowing a <b>Bit 1</b> 0	ory area [ are valid a <b>Bit 0</b>	DP83907 read	ch boot PROM	begins a	nd the size		
	-	within t data bu Bit 3 0 0 0 0	the select us. The fo Bit 2 0 0 0	ted memo ollowing a <b>Bit 1</b> 0	ory area [ are valid a <b>Bit 0</b>	DP83907 read		begins a	nd the siz		
		0 0 0 0	0 0 0	0			d sizes:	rough M		e. When the syst nd drives it onto t	
		0 0 0	0 0			Address	Size				
		0 0	0	1	Х	Х	No Boot PR	DM			
		0			0	0C000H	8K				
				1	1	0C400H	8K				
		0	1	0	0	0C800H	8K				
		0	1 1	0 1	1 0		8K 8K				
		0	1	1	1	0D000H 0D400H	8K 8K				
		1	0	0	0	0D400H	8K				
		1	õ	õ	1	0DC00H	8K				
		1	0	1	0	0C000H	32K				
		1	0	1	1	0C800H	32K				
		1	1	0	0	0D000H	32K				
		1	1	0	1	0D800H	32K				
		1	1	1	0	0C000H	64K				
		1	1	1	1	0D000H	64K				
	RES	RESER	RVED: Th	is bit mus	st be set l	ow for norma	al operation.				-
5 F	RES	RESER	RVED: Th	is bit mus	st be set l	high for norm	al operation.				
6 F	RES	RESER	RVED: Th	is bit mus	st be set l	ow for norma	al operation.				
7 SC	OFEN	softwa	re. If this uration fro	bit is set	high then	the configura	ation registers a	re not a	cessible.	on registers A an If EECONFIG is EEPROM even if	high the

# SIGNATURE REGISTER

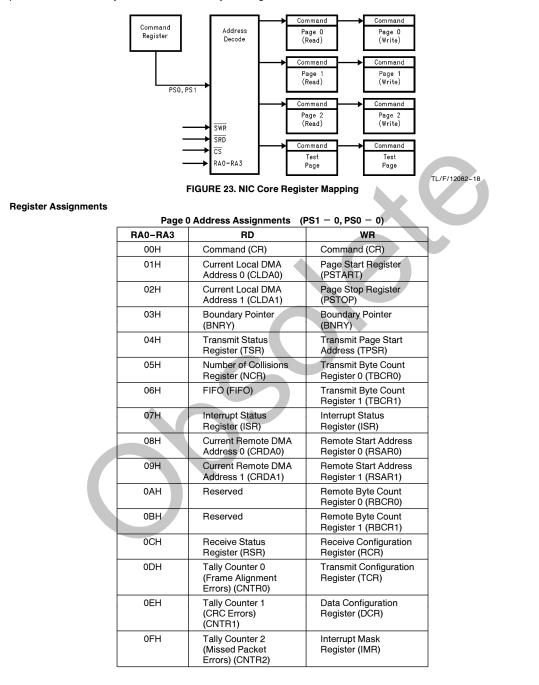
This register is intended to allow the software programmer to determine which of the DP83907 family of devices and what board configuration is being used. This register is "hidden" behind a used register. Register 01H in the DP83907's Page 1 of registers is Physical Address Register 0, which is read/write. Now the Signature Register can be read at that address by following a read to 01H, on Page 1, with another read to 01H. If any other DP83907 register accesses take place between the two reads then the second read will access Physical Address Register 0. All writes are to Physical Address Register 0. The user can determine if the Signature Register exists by writing, while in Page 1, a known value to the Physical Address Register 0 then reading it back twice. The first read will be the known value. If the second read is not equal to the value written then the Signature Register exists. This operation should only be attempted while the DP83907 is in STOP mode (STP bit in the Command Register set high).

7	6	5	4	3	2	1	0
SIG7	SIG6	SIG5	EEPR	REV3	REV2	REV1	REV0

Bit	Symbol	Function
0-3	REV0-3	DP83907 FAMILY REVISION: Shows that this is an DP83907 by holding the value:
		Rev 3 Rev 2 Rev 1 Rev 0
		1 0 0 0
4	EEPR	<b>EEPROM PROGRAMMED:</b> If the upper byte of the EEPROM contains 073H when loaded into the DP83907 this bit will be high.
0-3	SIG5-7	BOARD REVISION: Shows that this board uses an NE2000 Architecture compatible interrupt structure:
	(MSA11-13)	Sig 7 Sig 6 Sig 5

# 5.2 NIC CORE REGISTERS

All registers are 8-bit wide and mapped into two pages which are selected in the Command Register (PS0, PS1). Pins RA0–RA3 are used to address registers within each page. Page 0 registers are those registers which are commonly accessed during DP83907 operation while page 1 registers are used primarily for initialization. The registers are partitioned to avoid having to perform two write/read cycles to access commonly used registers.




RA0-RA3	RD	WR
00H	Command (CR)	Command (CR)
01H	Physical Address Register 0 (PAR0)	Physical Address Register 0 (PA R0)
02H	Physical Address Register 1 (PAR1)	Physical Address Register 1 (PA R1)
03H	Physical Address Register 2 (PAR2)	Physical Address Register 2 (PA R2)
04H	Physical Address Register 3 (PAR3)	Physical Address Register 3 (PA R3)
05H	Physical Address Register 4 (PAR4)	Physical Address Register 4 (PA R4)
06H	Physical Address Register 5 (PAR5)	Physical Address Register 5 (PA R5)
07H	Current Page Register (CURR)	Current Page Register (C URR)
08H	Multicast Address Register 0 (MAR0)	Multicast Address Register 0 (MAR0)
09H	Multicast Address Register 1 (MAR1)	Multicast Address Register 1 (MAR1)
0AH	Multicast Address Register 2 (MAR2)	Multicast Address Register 2 (MAR2)
0BH	Multicast Address Register 3 (MAR3)	Multicast Address Register 3 (MAR3)
0CH	Multicast Address Register 4 (MAR4)	Multicast Address Register 4 (MAR4)
0DH	Multicast Address Register 5 (MAR5)	Multicast Address Register 5 (MAR5)
0EH	Multicast Address Register 6 (MAR6)	Multicast Address Register 6 (MAR6)
OFH	Multicast Address Register 7 (MAR7)	Multicast Address Register 7 (MAR7)

Page 2 Address Assignments (PS1 = 1, PS0 = 0)				
RA0-RA3	RD	WR		
00H	Command (CR)	Command (CR)		
01H	Page Start Register (PSTART)	Current Local DMA Address 0 (CLDA0)		
02H	Page Stop Register (PSTOP)	Current Local DMA Address 1 (CLDA1)		
03H	Remote Next Packet Pointer	Remote Next Pack Pointer		
04H	Transmit Page Start Address (TPSR)	Reserved		
05H	Local Next Packet Pointer	Local Next Packet Pointer		
06H	Address Counter (Upper)	Address Counter (Upper)		
07H	Address Counter (Lower)	Address Counter (Lower)		
08H	Reserved	Reserved		
09H	Reserved	Reserved		
0AH	Reserved	Reserved		
0BH	Reserved	Reserved		
0CH	Receive Configuration Register (RCR)	Reserved		
ODH	Transmit Configuration Register (TCR)	Reserved		
0EH	Data Configuration Register (DCR)	Reserved		
0FH	Interrupt Mask Register (IMR)	Reserved		

Note: Page 2 registers should only be accessed for diagnostic purposes. They should not be modified during normal operation. Page 3 should never be modified.

# COMMAND REGISTER (CR) 00H (READ/WRITE)


The Command Register is used to initiate transmissions, enable or disable Remote DMA operations and to select register pages. To issue a command the microprocessor sets the corresponding bit(s) (RD2, RD1, RD0, TXP). Further commands may be overlapped, but with the following rules: (1) If a transmit command overlaps with a remote DMA operation, bits RD0, RD1, and RD2 must be maintained for the remote DMA command when setting the TXP bit. Note, if a remote DMA command is re-issued when giving the transmit command, the DMA will complete immediately if the remote byte count register has not been re-initialized. (2) If a remote DMA operation overlaps a transmission, RD0, RD1, and RD2 may be written with the desired values and a "0" written to the TXP bit. Writing a "0" to this bit has no effect. (3) A remote write DMA may not overlap remote read operation or vice versa. Either of these operations must either complete or be aborted before the other operation may start. Bits PS1, PS0, RD2, and STP may be set any time.



D0	Symbol	Description					
	STP	<b>STOP:</b> Software reset command, takes the controller off-line, no packets will be received or transmittee Any reception or transmission in progress will continue to completion before entering the reset state. To exit this state, the STP bit must be reset and the STA bit must be set high. To perform a software reset, this bit should be set high. The software reset has executed only when indicated by the RST bit in the ISR being set to 1. STP powers up high.					
		Note: If the DP83907 has previously been in start mode and the STP is set, both the STP and STA bits will remain set.					
D1	STA	<b>START:</b> This bit is used to activate the NIC Core after either power up, or when the NIC Core has been placed in a reset mode by software command or error. STA powers up low.					
D2	ТХР	<b>TRANSMIT PACKET:</b> This bit must be set to initiate transmission of a packet. TXP is internally reset either after the transmission is completed or aborted. This bit should be set only after the Transmit Byte Count and Transmit Page Start registers have been programmed.					
D3-D5	RD0-RD2	REMOTE DMA COMMAND: These three encoded bits control operation of the Remote DMA channel.         RD2 can be set to abort any Remote DMA command in progress. The Remote Byte Count Registers should be cleared when a Remote DMA has been aborted. The Remote Start Addresses are not restored to the starting address if the Remote DMA is aborted.         RD2       RD1       RD0         0       0       Not Allowed         0       0       Not Allowed         0       1       Remote Read         0       1       Send Packet         1       X       Abort/Complete Remote DMA (Note 1)         Note 1: If a remote DMA operation is aborted and the remote byte count has not decremented to zero, the data transfer port should be read, for a remote read or send packet, or written to, for a remote write. This is required to ensure future correct operation.					
D6, D7	PS0, PS1	PAGE SELECT: These two encoded bits select which register page is to be accessed with addresses RA0-3.         PS1       PS0         0       0       Register Page 0         0       1       Register Page 1         1       0       Register Page 2         1       1       Reserved					

# INTERRUPT STATUS REGISTER (ISR) 07H (READ/WRITE)

This register is accessed by the host processor to determine the cause of an interrupt. Any interrupt can be masked in the Interrupt Mask Register (IMR). Individual interrupt bits are cleared by writing a "1" into the corresponding bit of the ISR. The valid interrupt output is active as long as any unmasked signal is set, and will not go low until all unmasked bits in this register have been cleared. The ISR must be cleared after power up by writing it with all 1's.



	Description
D0 PRX	PACKET RECEIVED: Indicates packet received with no errors.
D1 PTX	PACKET TRANSMITTED: Indicates packet transmitted with no errors.
D2 RXE	RECEIVE ERROR: Indicates that a packet was received with one or more of the following errors: CRC Error Frame Alignment Error FIFO Overrun Missed Packet
D3 TXE	<b>TRANSMIT ERROR:</b> Set when packet transmitted with one or more of the following errors:         —Excessive Collisions         —FIFO Underrun
D4 OVW	<b>OVERWRITE WARNING:</b> Set when receive buffer ring storage resources have been exhausted. (Local DMA has reached Boundary Pointer.)
D5 CNT	COUNTER OVERFLOW: Set when MSB of one or more of the Network Tally Counters has been set.
D6 RDC	REMOTE DMA COMPLETE: Set when Remote DMA operation has been completed.
D7 RST	RESET STATUS: Set when DP83907 enters reset state and cleared when a Start Command is issued to the CR. This bit is also set when a Receive Buffer Ring overflow occurs and is cleared when one or more packets have been removed from the ring. Writing to this bit has no effect. Note: This bit does not generate an interrupt, it is merely a status indicator.


	-	ter Descriptions (Continued) ASK REGISTER (IMR) 0FH (WRITE)						
The Interrupt Mask Register is used to mask interrupts. Each interrupt mask bit corresponds to a bit in the Interrupt Status Register (ISR). If an interrupt mask bit is set, an interrupt will be issued whenever the corresponding bit in the ISR is set. If any bit in the IMR is set low, an interrupt will not occur when the bit in the ISR is set. <b>The IMR powers up all zeros.</b>								
		7         6         5         4         3         2         1         0           —         RDCE         CNTE         OVWE         TXEE         RXEE         PTXE         PRXE						
	- HDCE CNIE OVWE IXEE HXEE PIXE PHXE							
Bit	Symbol	Description						
D0	PRXE	PACKET RECEIVED INTERRUPT ENABLE 0: Interrupt Disabled 1: Enables Interrupt when packet received						
D1	PTXE	PACKET TRANSMITTED INTERRUPT ENABLE 0: Interrupt Disabled 1: Enables Interrupt when packet is transmitted						
D2	RXEE	RECEIVE ERROR INTERRUPT ENABLE 0: Interrupt Disabled 1: Enables Interrupt when packet received with error						
D3	TXEE	<b>TRANSMIT ERROR INTERRUPT ENABLE</b> 0: Interrupt Disabled         1: Enables Interrupt when packet transmission results in error						
D4	OVWE	OVERWRITE WARNING INTERRUPT ENABLE 0: Interrupt Disabled 1: Enables Interrupt when Buffer Management Logic lacks sufficient buffers to store incoming packet						
D5	CNTE	COUNTER OVERFLOW INTERRUPT ENABLE 0: Interrupt Disabled 1: Enables Interrupt when MSB of one or more of the Network Statistics counters has been set						
D6	RDCE	DMA COMPLETE INTERRUPT ENABLE 0: Interrupt Disabled 1: Enables Interrupt when Remote DMA transfer has been completed						
D7	Reserved	Reserved						

		7	6	5	4	3	2	1	0	
		-	FT1	FT0	ARM	LS	LAS	BOS	WTS	]
Bit	Symbol						Deserin	tion		
D0	Symbol WTS	0: 9 1: 9 ; W	Selects Selects TS esta	word-wid ablishes b	e DMA trar e DMA tra oyte or wor	nsfers d transf		oth Remo		cal DMA transfers
D1	BOS	Note: When word-wide mode is selected, up to 32k words are addressable; A0 remains low. BYTE ORDER SELECT 0: MS byte placed on AD15–AD8 and LS byte on AD7–AD0. (32xxx, 80x86) 1: MS byte placed on AD7–AD0 and LS byte on AD15–AD8. (680x0) : Ignored when WTS is low								
D2	LAS	0: [ 1: \$	Dual 16 Single 3	RESS SEI bit DMA i 2-bit DMA	mode A mode	of the F	lemote D	MA regist	ers RSAF	Ro, 1 are issued as A16
		A31 F	Power u	p high						
D3	LS	0: I Loc	_oopback	SELECT ck mode s operation Operatior	selected. E 1	Bits D1 a	and D2 of	f the TCR	must also	o be programmed for
D4	ARM	0: \$ cor 1: \$ Rir	Send Co ntrol Send Co Ig	ommand e	not execut	Remote	DMA au	to-initializ		r Ring under program nove packets from Buffe
D5 and D6	FT0 and FT1	mem thres netwo Note: Re FT1 0 0 1 1 Durin has fi	ory bus hold inc ork befo FIFO thre <b>Ceive T</b> <b>FT</b> 0 1 0 1 0 1 g transi lled from	is reques licates the pre the FIF shold setting 'hreshold 0 Wr 2 mission, til m the Loc	ted when a e number of O is emp determines th as ord Wide 1 Word 2 Words 4 Words 5 Words 6 Words he FIFO th	filling or of bytes tied ont the DMA but By 2 4 8 12 nreshold of ore be	emptying (or word o the mer rst length. <b>Yte Wide</b> Bytes Bytes Bytes Bytes I indicate ing trans	g the FIFC s) the FIF mory bus. s the num ferred to t	). During O has fille ber of by	s point at which the reception, the FIFO ed serially from the tes (or words) the FIFO ory. Thus, the transmiss

		7         6         5         4         3         2         1         0             OFST         ATD         LB1         LB0         CRC					
Bit	Symbol	Description					
D0	CRC	INHIBIT CRC 0: CRC appended by transmitter 1: CRC inhibited by transmitter In loopback mode CRC can be enabled or disabled to test the CRC logic.					
D1 and D2	LB0 and LB1	ENCODED LOOPBACK CONTROL: These encoded configuration bits set the type of loopback that is to be performed. Note that loopback in mode 2 places the ENDEC Module in loopback mode and that D3 of the DCR must be set to zero for loopback operation.         LB1       LB0         Mode 0       0       Normal Operation (LPBK = 0)         Mode 1       0       1       Internal NIC Module Loopback (LPBK = 0)         Mode 2       1       0       Internal ENDEC Module Loopback (LPBK = 1)         Mode 3       1       1       External Loopback (LPBK = 0)					
D3	ATD	AUTO TRANSMIT DISABLE: This bit allows another station to disable the DP83907'S transmitter by transmission of a particular multicast packet. The transmitter can be re-enabled by resetting this bit or by reception of a second particular multicast packet. 0: Normal Operation 1: Reception of multicast address hashing to bit 62 disables transmitter, reception of multicast address hashing to bit 63 enables transmitter.					
D4	OFST	<ul> <li>COLLISION OFFSET ENABLE: This bit modifies the backoff algorithm to allow prioritization of nodes.</li> <li>0: Backoff Logic implements normal algorithm.</li> <li>1: Forces Backoff algorithm modification to 0 to 2<sup>min(3 + n, 10)</sup> slot times for first three collisions, then follows standard backoff. (For the first three collisions, the station has higher average backoff delay making a low priority mode.)</li> </ul>					
D5	Reserved	Reserved					
D6	Reserved	Reserved					
<u>D7</u>	Reserved	Reserved					

# TRANSMIT STATUS REGISTER (TSR) 04H (READ)

This register records events that occur on the media during transmission of a packet. It is cleared when the next transmission is initiated by the host. All bits remain low unless the event that corresponds to a particular bit occurs during transmission. Each transmission should be followed by a read of this register. The contents of this register are not specified until after the first transmission.



Bit	Symbol	Description
D0	PTX	<b>PACKET TRANSMITTED:</b> Indicates transmission without error. (No excessive collisions or FIFO underrun) (ABT = "0", FU = "0").
D1	Reserved	Reserved
D2	COL	<b>TRANSMIT COLLIDED:</b> Indicates that the transmission collided at least once with another station on the network. The number of collisions is recorded in the Number of Collisions Registers (NCR).
D3	ABT	<b>TRANSMIT ABORTED:</b> Indicates the DP83907 aborted transmission because of excessive collisions. (Total number of transmissions including original transmission attempt equals 16.)
D4	CRS	<b>CARRIER SENSE LOST:</b> This bit is set when carrier is lost during transmission of the packet. Transmission is not aborted on loss of carrier.
D5	FU	<b>FIFO UNDERRUN:</b> If the DP83907 cannot gain access of the bus before the FIFO empties, this bit is set. Transmission of the packet will be aborted.
D6	CDH	<b>CD HEARTBEAT:</b> Failure of the transceiver to transmit a collision signal after transmission of a packet will set this bit. The Collision Detect (CD) heartbeat signal must commence during the first 6.4 $\mu$ s of the Interframe Gap following a transmission. In certain collisions, the CD Heartbeat bit will be set even though the transceiver is not performing the CD heartbeat test.
D7	owc	<b>OUT OF WINDOW COLLISION:</b> Indicates that a collision occurred after a slot time (51.2 $\mu$ s). Transmissions rescheduled as in normal collisions.

	-	er Descriptions (Continued) IGURATION REGISTER (RCR) OCH (WRITE)	
This acce	-	ermines operation of the DP83907 during reception of a packet and is used to program what types of packets to	)
		7 6 5 4 3 2 1 0	
		MON PRO AM AB AR SEP	
Bits	Symbols	Description	
DI	SEP	SAVE ERRORED PACKETS	
		0: Packets with receive errors are rejected. 1: Packets with receive errors are accepted. Receive errors are CRC and Frame Alignment errors.	
D1	AR	ACCEPT RUNT PACKETS: This bit allows the receiver to accept packets that are smaller than 64	
		bytes. The packet must be at least 8 bytes long to be accepted as a runt. 0: Packets with fewer than 64 bytes rejected.	
		1: Packets with fewer than 64 bytes accepted.	
D2	AB	ACCEPT BROADCAST: Enables the receiver to accept a packet with an all 1's destination address.	
		0: Packets with broadcast destination address rejected. 1: Packets with broadcast destination address accepted.	
D3	АМ	ACCEPT MULTICAST: Enables the receiver to accept a packet with a multicast address, all multicast	:
		addresses must pass the hashing array. 0: Packets with multicast destination address not checked.	
		1: Packets with multicast destination address checked.	
D4	PRO	<ul> <li><b>PROMISCUOUS PHYSICAL:</b> Enables the receiver to accept all packets with a physical address.</li> <li>0: Physical address of node must match the station address programmed in PAR0–PAR5.</li> <li>1: All packets with physical addresses accepted.</li> </ul>	
D5	Reserved	Reserved (program to 0)	
D6	Reserved	Reserved	
D7	Reserved	Reserved	
estab		"OR'd" together, i.e., if D2 and D3 are set the DP83907 will accept broadcast and multicast addresses as well as its own physical address. To uous mode, bits D2, D3, and D4 should be set. In addition the multicast hashing array must be set to all 1's in order to accept all multicast	


# 5.0 Register Descriptions (Continued)
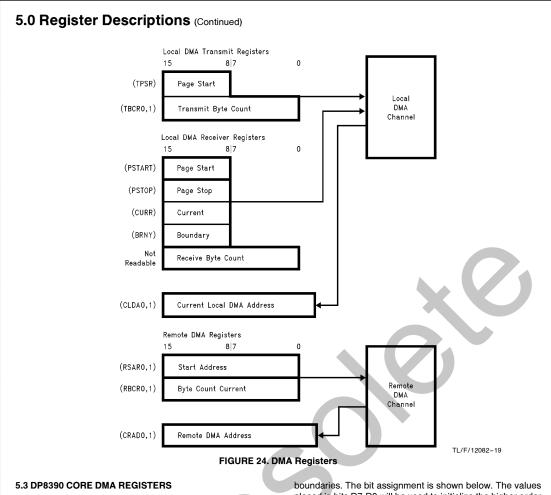
# RECEIVE STATUS REGISTER (RSR) 0CH (READ)

This register records status of the received packet, including information on errors and the type of address match, either physical or multicast. The contents of this register are written to buffer memory by the DMA after reception of a good packet. If packets with errors are to be saved the receive status is written to memory at the head of the erroneous packet if an erroneous packet is received. If packets with errors are to be rejected the RSR will not be written to memory. The contents will be cleared when the next packet arrives. CRC errors, Frame Alignment errors and missed packets are counted internally by the DP83907 which relinquishes the Host from reading the RSR in real time to record errors for Network Management Functions. The contents of this register are not specified until after the first reception.



Bit Symbo	I Description
D0 PRX	<b>PACKET RECEIVED INTACT:</b> Indicates packet received without error. (Bits CRC, FAE, FO, and MPA are zero for the received packet.)
D1 CRC	<b>CRC ERROR:</b> Indicates packet received with CRC error. Increments Tally Counter (CNTR1). This bit will also be set for Frame Alignment errors.
D2 FAE	<b>FRAME ALIGNMENT ERROR:</b> Indicates that the incoming packet did not end on a byte boundary and th CRC did not match at last byte boundary. Increments Tally Counter (CNTR0).
D3 FO	<b>FIFO OVERRUN:</b> This bit is set when the FIFO is not serviced causing overflow during reception. Reception of the packet will be aborted.
D4 MPA	<b>MISSED PACKET:</b> Set when packet intended for node cannot be accepted by SNIC because of a lack of receive buffers or if the controller is in monitor mode and did not buffer the packet to memory. Increments Tally Counter (CNTR2).
D5 PHY	PHYSICAL/MULTICAST ADDRESS: Indicates whether received packet had a physical or multicast address type.         0: Physical Address Match         1: Multicast/Broadcast Address Match
D6 DIS	<b>RECEIVER DISABLED:</b> Set when receiver disabled by entering Monitor mode. Reset when receiver is re enabled when exiting Monitor mode.
D7 DFR	<b>DEFERRING:</b> Set when internal Carrier Sense or Collision signals are generated in the ENDEC module. It the transceiver has asserted the CD line as a result of the jabber, this bit will stay set indicating the jabber condition.
FAE         CRC           0         1           1         0           1         1	Type of Error         No Error (Good CRC and <6 Dribble Bits)         CRC Error         Illegal, wil not occur         Frame Alignment Error and CRC Error



The DMA Registers are partitioned into groups; Transmit, Receive and Remote DMA Registers. The Transmit registers are used to initialize the Local DMA Channel for transmission of packets while the Receive Registers are used to initialize the Local DMA Channel for packet Reception. The Page Stop, Page Start, Current and Boundary Registers are used by the Buffer Management Logic to supervise the Receive Buffer Ring. The Remote DMA Registers are used to

initialize the Remote DMA Note: In the figure above, registers are shown as 8 or 16 bits wide. Although some registers are 16-bit internal registers, all registers are accessed as 8-bit registers. Thus the 16-bit Transmit Byte Count Register is broken into two 8-bit registers. TBCR0 TBCR1. Also TPSR, PSTART, PSTOP, CURR and BNRY only check or control the upper 8 bits of address information on the bus. Thus they are shifted to positions 15-8 in the diagram above.

### Transmit DMA Registers

# TRANSMIT PAGE START REGISTER (TPSR)

This register points to the assembled packet to be transmitted. Only the eight higher order addresses are specified since all transmit packets are assembled on 256-byte page boundaries. The bit assignment is shown below. The values placed in bits D7-D0 will be used to initialize the higher order address (A8-A15) of the Local DMA for transmission. The lower order bits (A7-A0) are initialized to zero.

# **Bit Assignment**

	7	6	5	4	3	2	1	0
TPSR	A15	A14	A13	A12	A11	A10	A9	A8
	(A7-A	0 Initializ	ed to 0)					

# TRANSMIT BYTE COUNT REGISTER 0,1 (TBCR0, TBCR1)

These two registers indicate the length of the packet to be transmitted in bytes. The count must include the number of bytes in the source, destination, length and data fields. The maximum number of transmit bytes allowed is 64K bytes. The DP83907 will not truncate transmissions longer than 1500 bytes. The bit assignment is shown below:

	7	6	5	4	3	2	1	0
TBCR1	L15	L14	L13	L12	L11	L10	L9	L8
	7	6	5	4	3	2	1	0
TBCR0	L7	L6	L5	L4	L3	L2	L1	L0

# 5.0 Register Descriptions (Continued)

Local DMA Receive Registers

# PAGE START STOP REGISTERS (PSTART, PSTOP)

The Page Start and Page Stop Registers program the starting and stopping address of the Receive Buffer Ring. Since the DP83907 uses fixed 256-byte buffers aligned on page boundaries only the upper eight bits of the start and stop address are specified.

# PSTART, PSTOP bit assignment

,								
	7	6	5	4	3	2	1	0
PSTART PSTOP	A15	A14	A13	A12	A11	A10	A9	A8

### **BOUNDARY (BNRY) REGISTER**

This register is used to prevent overflow of the Receive Buffer Ring. Buffer management compares the contents of this register to the next buffer address when linking buffers together. If the contents of this register match the next buffer address the Local DMA operation is aborted.

	7	6	5	4	3	2	1	0
BNRY	A15	A14	A13	A12	A11	A10	A9	A8

# **CURRENT PAGE REGISTER (CURR)**

This register is used internally by the Buffer Management Logic as a backup register for reception. CURR contains the address of the first buffer to be used for a packet reception and is used to restore DMA pointers in the event of receive errors. This register is initialized to the same value as PSTART and should not be written to again unless the controller is Reset.

	7	6	5	4	3	2	1	0
CURR	A15	A14	A13	A12	A11	A10	A9	A8

# CURRENT LOCAL DMA REGISTER 0,1 (CLDA0,1)


These two registers can be accessed to determine the current Local DMA Address.

	7	6	5	4	3	2	1	0	
CLDA1	A15	A14	A13	A12	A11	A10	A9	A8	
	7	6	5	4	3	2	1	0	~
CLDA0	A7	A6	A5	A4	A3	A2	A1	A0	

### **Remote DMA Registers**

### **REMOTE START ADDRESS REGISTERS (RSAR0,1)**

Remote DMA operations are programmed via the Remote Start Address (RSAR0,1) and Remote Byte Count (RBCR0,1) registers. The Remote Start Address is used to point to the start of the block of data to be transferred and the Remote Byte Count is used to indicate the length of the block (in bytes).



### REMOTE BYTE COUNT REGISTERS (RCB0,1) 6 7 3 2 A10 A9



### A3 A2 A1

0

A8

0

A0

2

3

Note:

RSAR0 programs the start address bits A0-A7. RSAR1 programs the start address bits A8-A15.

Address incremented by two for word transfers, and by one for byte transfers. Byte count decremented by two for word transfers and by one for byte transfers

RBCR0 programs LSB byte count.

RBCR1 programs MSB byte count.

# CURRENT REMOTE DMA ADDRESS (CRDA0, CRDA1)

The Current Remote DMA Registers contain the current address of the Remote DMA. The bit assignment is shown below:

	7	6	5	4	3	2	1	0
CRDA1	A15	A14	A13	A12	A11	A10	A9	A8
	7	6	5	4	3	2	1	0
CRDA0	A7	A6	A5	A4	A3	A2	A1	A0

# Physical Address Registers (PAR0-PAR5)

The physical address registers are used to compare the destination address of incoming packets for rejecting or accepting packets. Comparisons are performed on a bytewide basis. The bit assignment shown below relates the sequence in PAR0-PAR5 to the bit sequence of the received packet.

ľ		D7	D6	D5	D4	D3	D2	D1	D0
	PAR0	DA7	DA6	DA5	DA4	DA3	DA2	DA1	DA0
	PAR1	DA15	DA14	DA13	DA12	DA11	DA10	DA9	DA8
	PAR2	DA23	DA22	DA21	DA20	DA19	DA18	DA17	DA16
	PAR3	DA31	DA30	DA29	DA28	DA27	DA26	DA25	DA24
	PAR4	DA39	DA38	DA37	DA36	DA35	DA34	DA33	DA32
	PAR5	DA47	DA46	DA45	DA44	DA43	DA42	DA41	DA40

	De	s	ource						
P/S	DA0	DA1	DA2	DA3		DA46	DA47	SA0	

Note: P/S = Preamble, Synch

DA0 = Physical/Muftcast Bit

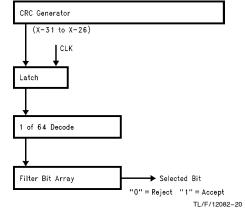
# Multicast Address Registers (MAR0–MAR7)

The multicast address registers provide filtering of multicast addresses hashed by the CRC logic. All destination addresses are fed through the CRC logic and as the last bit of the destination address enters the CRC, the 6 most significant bits of the CRC generator are latched. These 6 bits are then decoded by a 1 of 64 decode to index a unique filter bit (FB0-63) in the multicast address registers. If the filter bit selected is set, the multicast packet is accepted. The sys-

# 5.0 Register Descriptions (Continued)

tem designer would use a program to determine which filter bits to set in the multicast registers. All multicast filter bits that correspond to multicast address accepted by the node are then set to one. To accept all multicast packets all of the registers are set to all ones.

Note: Although the hashing algorithm does not guarantee perfect filtering of multicast address, it will perfectly filter up to 64 multicast addresses if these addresses are chosen to map into unique locations in the multicast filter.






# 6.0 Operation of DP83907

This section details the operation of the DP83907. The operations discussed are packet reception and transmission, bus operations, and loopback diagnostics.

# 6.1 TRANSMIT/RECEIVE PACKET ENCAPSULATION/ DECAPSULATION;

A standard IEEE 802.3 packet consists of the following fields: preamble, Start of Frame Delimiter (SFD), destination address, source address, length, data, and Frame Check Sequence (FCS). The typical format is shown in the figure following. The packets are Manchester encoded and decoded by the ENDEC module and transferred serially to the NIC module using NRZ data with a clock. All fields are of fixed length except for the data field. The DP83907 generates and appends the preamble, SFD and FCS field during transmission. The Preamble and SFD fields are stripped during reception. (The CRC is passed through to buffer memory during reception.)





# Preamble and Start of Frame Delimiter (SFD)

The Manchester encoded alternating 1, 0 preamble field is used by the ENDEC to acquire bit synchronization with an incoming packet. When transmitted each packet contains 62 bits of alternating 1, 0 preamble. Some of this preamble will be lost as the packet travels through the network. The preamble field is stripped by the NIC module. Byte alignment is performed with the Start of Frame Delimiter (SFD) pattern which consists of two consecutive 1's. The DP83907 does not treat the SFD pattern as a byte, it detects only the two bit pattern. This allows any preceding preamble within the SFD to be used for phase locking.

# **Destination Address**

The destination address indicates the destination of the packet on the network and is used to filter unwanted packets from reaching a node. There are three types of address formats supported by the DP83907: physical, multicast and broadcast. The physical address is a unique address that corresponds only to a single node. All physical addresses have an MSB of "0". These addresses are compared to the internally stored physical address registers. Each bit in the destination address must match in order for the DP83907 to accept the packet. Multicast addresses begin with an MSB of "1". The DP83907 filters multicast addresses using a standard hashing algorithm that maps all multicast addresses into a 6-bit value. This 6-bit value indexes a 64-bit array that filters the value. If the address consists of all 1's it is a broadcast address, indicating that the packet is intended for all nodes. A promiscuous mode allows reception of all packets: the destination address is not required to match any filters. Physical, broadcast, multicast, and promiscuous address modes can be selected.

# Source Address

The source address is the physical address of the node that sent the packet. Source addresses cannot be multicast or broadcast addresses. This field is simply passed to buffer memory.

### Length Field


The 2-byte length field indicates the number of bytes that are contained in the data field of the packet. This field is not interpreted by the DP83907.

### Data Field

The data field consists of anywhere from 46 to 1500 bytes. Messages longer than 1500 bytes need to be broken into multiple packets. Messages shorter than 46 bytes will require appending a pad to bring the data field to the minimum length of 46 bytes. If the data field is padded, the number of valid data bytes is indicated in the length field. The DP83907 does not strlp or append pad bytes for short packets, or check for oversize packets.

### FCS Field

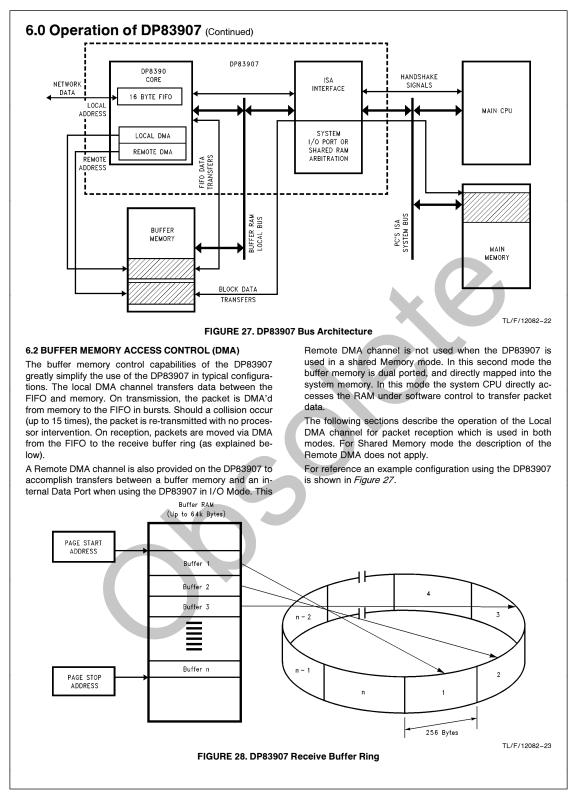The Frame Check Sequence (FCS) is a 32-bit CRC field calculated and appended to a packet during transmission to allow detection of errors when a packet is received. During reception, error free packets result in a specific pattern in the CRC generator. Packets with improper CRC will be rejected. The AUTODIN II (X32 + X26 + X23 + X22 + X16 + X12 + X11 + X10 + X8 + X7 + X5 + X4 + X2 + X1 + 1) polynomial is used for the CRC calculations.



# 6.3 PACKET RECEPTION

The Local DMA receive channel uses a Buffer Ring Structure comprised of a series of contiguous fixed length 256 byte (128 word) buffers for storage of received packets. The location of the Receive Buffer Ring is programmed in two registers, a Page Start and a Page Stop Register. Ethernet packets consist of a distribution of shorter link control packets and longer data packets, the 256 byte buffer length provides a good compromise between short packets and longer packets to most efficiently use memory. In addition these buffers provide memory resources for storage of back-toback packets in loaded networks. The assignment of buffers for storing packets is controlled by Buffer Management Logic in the DP83907. The Buffer Management Logic provides three basic functions: linking receive buffers for long packets, recovery of buffers when a packet is rejected, and recirculation of buffer pages that have been read by the host.

At initialization, a portion of the 64k byte (or 32k word) address space is reserved for the receive buffer ring. Two eight bit registers, the Page Start Address Register (PSTART) and the Page Stop Address Register (PSTOP) define the physical boundaries of where the buffers reside. The DP83907 treats the list of buffers as a logical ring; whenever the DMA address reaches the Page Stop Address, the DMA is reset to the Page Start Address.

# Initialization of the Buffer Ring


Two static registers and two working registers control the operation of the Buffer Ring. These are the Page Start Register, Page Stop Register (both described previously), the Current Page Register and the Boundary Pointer Register. The Current Page Register points to the first buffer used to store a packet and is used to restore the DMA for writing status to the Buffer Ring or for restoring the DMA address in the event of a Runt packet, a CRC, or Frame Alignment error. The Boundary Register points to the first packet in the Ring not yet read by the host. If the local DMA address ever reaches the Boundary, reception is aborted. The Boundary Pointer is also used to initialize the Remote DMA for removing a packet and is advanced when a packet is removed. A simple analogy to remember the function of these registers is that the Current Page Register acts as a Write Pointer and the Boundary Pointer acts as a Read Pointer.

 Note 1: At initialization, the Page Start Register value should be loaded into both the Current Page Register and the Boundary Pointer Register, if using the Send Packet Command. If using manual Remote Reads, the Current Page Register must always remain 1 + Boundary Register.

 Note 2: The Page Start Register must not be initialized to 00H.

### **Beginning of Reception**

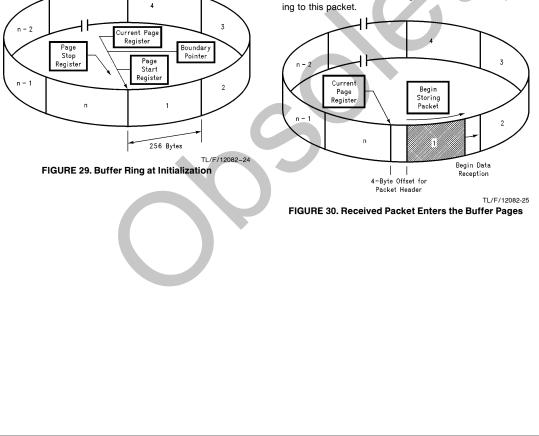When the first packet begins arriving the DP83907 begins storing the packet at the location pointed to by the Current Page Register. An offset of 4 bytes is saved in this first buffer to allow room for storing receive status corresponding to this packet.




### Linking Receive Buffer Pages

If the length of the packet exhausts the first 256 byte buffer, the DMA performs a forward link to the next buffer to store the remainder of the packet. For a maximal length packet the buffer logic will link six buffers to store the entire packet. Buffers cannot be skipped when linking, a packet will always be stored in contiguous buffers. Before the next buffer can be linked, the Buffer Management Logic performs two comparisons. The first comparison tests for equality between the DMA address of the next buffer and the contents of the Page Stop Register. If the buffer address equals the Page Stop Register, the buffer management logic will restore the DMA to the first buffer in the Receive Buffer Ring value programmed in the Page Start Address Register. The second comparison tests for equality between the DMA address of the next buffer address and the contents of the Boundary Pointer Register. If the two values are equal the reception is aborted. The Boundary Pointer Register can be used to protect against overwrfting any area in the receive buffer ring that has not yet been read. When linking buffers, buffer management will never cross this pointer, effectively avoiding any overwrites. If the buffer address does not match either the Boundary Pointer or Page Stop Address, the link to the next buffer is performed.

### Linking Buffers

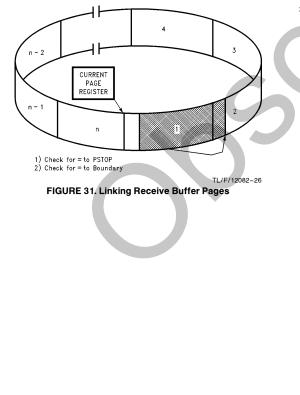Before the DMA can enter the next contiguous 256 byte buffer, the address is checked for equality to PSTOP and to the Boundary Pointer. If neither are reached, the DMA is allowed to use the next buffer.



### Buffer Ring Overflow

If the Buffer Ring has been filled and the DMA reaches the Boundary Pointer Address, reception of the incoming packet will be aborted by the DP83907. Thus, the packets previously received and still contained in the Ring will not be destroyed.

In heavily loaded networks which cause overflows of the Receive Buffer Ring, the DP83907 may disable the local DMA and suspend further receptions even if the Boundary register is advanced beyond the Current register. In the event that the DP83907 should encounter a receive buffer overflow, it is necessary to implement the following routine. A receive buffer overflow is indicated by the DP83907's assertion of the overflow bit (OVW) in the Interrupt Status Register (ISR).

If this routine is not adhered to, the DP83907 may act in an unpredictable manner. It should also be noted that it is not permissible to service an overflow interrupt by continuing to empty packets from the receive buffer without implementing the prescribed overflow routine. A flow chart of the DP83907's overflow routine can be found in *Figure 32*.

Note: It is necessary to define a variable in the driver, which will be called "Resend".

- 1) Read and store the value of the TXP bit in the DP83907's Command Register.
- Issue the STOP command to the DP83907. This is accomplished by setting the STP bit in the DP83907's Command Register. Writing 21H to the Command Register will stop the DP83907.
- 3) Wait for at least 1.6 ms. Since the DP83907 will complete any transmission or reception that is in progress, it is necessary to time out for the maximum possible duration of an Ethernet transmission or reception. By waiting 1.6 ms this is achieved with some guard band added. Previously, it was recommended that the RST bit of the nterrupt Status Register be polled to insure that the pending transmission or reception is completed. This bit is not a reliable indicator and subsequently should be ignored.


- 4) Clear the DP83907's Remote Byte Count registers (RBCR0 and RBCR1).
- 5) Read the stored value of the TXP bit from step 1, above.

If this value is a 0, set the "Resend" variable to a 0 and jump to step 6.

If this value is a 1, read the DP83907's Interrupt Status Register. If either the Packet Transmitted bit (PTX) or Transmit Error bit (TXE) is set to a 1, set the "Resend" variable to a 0 and jump to step 6. If neither of these bits is set, place a 1 in the "Resend" variable and jump to step 6.

This step determines if there was a transmission in progress when the stop command was issued in step 2. If there was a transmission in progress, the DP83907's ISR is read to determine whether or not the packet was recognized by the DP83907. If neither the PTX nor TXE bit was set, then the packet will essentially be lost and retransmitted only after a time-out takes place in the upper level software. By determining that the packet was lost at the driver level, a transmit command can be reissued to the DP83907 once the overflow routine is completed (as in step 11). Also, it is possible for the DP83907 to defer indefinitely, when it is stopped on a busy network. Step 5 also alleviates this problem. Step 5 is essential and should not be omitted from the overflow routine, in order for the DP83907 to operate correctly.

- Place the DP83907 in either mode 1 or mode 2 loopback. This can be accomplished by setting bits D2 and D1, of the Transmit Configuration Register, to "0,1" or "1,0", respectively.
- Issue the START command to the DP83907. This can be accomplished by writing 22H to the Command Register. This is necessary to activate the DP83907's Remote DMA channel.
- 8) Remove one or more packets from the receive buffer ring.
- 9) Reset the overwrite warning (OVW, overflow) bit in the Interrupt Status Register.
- 10) Take the DP83907 out of loopback. This is done by writing the Transmit Configuration Register with the value it contains during normal operation. (Bits D2 and D1 should both be programmed to 0.)
- 11) If the "Resend" variable is set to a 1, reset the "Resend" variable and reissue the transmit command. This is done by writing a value of 26H to the Command Register. If the "Resend" variable is 0, nothing needs to be done.
- Note 1: If Remote DMA is not being used, the DP83907 does not need to be started before packets can be removed from the receive buffer ring. Hence, step 8 could be done before step 7, eliminating or reducing the time spent polling in step 5.
- Note 2: When the DP83907 is in STOP mode, the Missed Packet Tally counter is disabled.

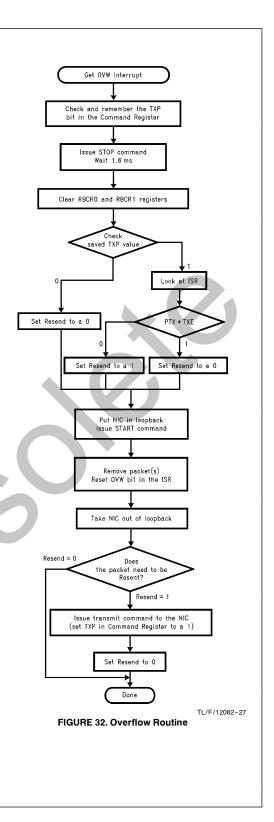

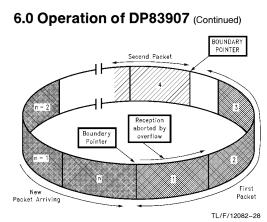


FIGURE 33. Received Packet Aborted if it Hits Boundary


# Enabling the DP83907 on an Active Network

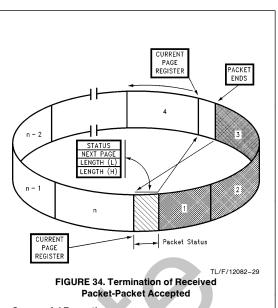After the DP83907 has been initialized the procedure for disabling and then re-enabling the DP83907 on the network is similar to handling Receive Buffer Ring overflow as described previously.

- 1) Program Command Register for page 0 (Command Register = 21H)
- 2) Initialize Data Configuration Register (DCR)
- 3) Clear Remote Byte Count Registers (RBCR0, RBCR1) if using Remote DMA.
- 4) Initialize Receive Configuration Register (RCR)
- 5) Place the DP83907 in LOOPBACK mode 1 or 2 (Transmit Configuration Register = 02H or 04H)
- Initialize Receive Buffer Ring: Boundary Pointer (BNDRY), Page Start (PSTART), and Page Stop (PSTOP)
- Clear Interrupt Status Register (ISR) by writing OFFH to it.
- 8) Initialize Interrupt Mask Register (IMR)
- 9) Program Command Register for page 1 (Command Register = 61H)
  - i) Initialize Physical Address Registers (PAR0-PAR5)
  - ii) Initialize Multicast Address Registers (MAR0-MAR7)
  - iii) Initialize CURRENT pointer
- Put DP83907 in START mode (Command Register = 22H). The local receive DMA is still not active since the DP83907 is in LOOPBACK.
- Initialize the Transmit Configuration for the intended value. The DP83907 is now ready for transmission and reception.

# **End of Packet Operations**

At the end of the packet the DP83907 determines whether the received packet is to be accepted or rejected. It either branches to a routine to store the Buffer Header or to another routine that recovers the buffers used to store the packet.




# Successful Reception

If the packet is successfully received, the DMA is restored to the first buffer used to store the packet (pointed to by the Current Page Register). The DMA then stores the Receive Status, a Pointer to where the next packet will be stored (Buffer 4) and the number of received bytes. Note that the remaining bytes in the last buffer are discarded and reception of the next packet begins on the next empty 256-byte buffer boundary. The Current Page Register is then initialized to the next available buffer in the Buffer Ring. (The location of the next buffer had been previously calculated and temporarily stored in an internal scratchpad register.)

### Buffer Recovery for Rejected Packets

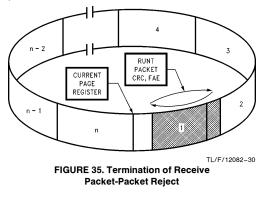If the packet is a runt packet or contains CRC or Frame Alignment errors, it is rejected. The buffer management logic resets the DMA back to the first buffer page used to store the packet (pointed to by CURR), recovering all buffers that had been used to store the rejected packet. This operation will not be performed if the DP83907 is programmed to accept either runt packets or packets with CRC or Frame Alignment errors. The received CRC is always stored in buffer memory after the last byte of received data for the packet.



# Error Recovery

If the packet is rejected as shown, the DMA is restored by the DP83907 by reprogramming the DMA starting address pointed to by the Current Page Register.

### **Storage Format for Received Packets**

The following diagrams describe the format for how received packets are placed into memory by the local DMA channel. These modes are selected in the Data Configuration Register.

AD7	AD0		
Receive Status			
Receive Byte Count 0			
Byte	1		
	Receive S		

 $\mathsf{BOS}=0, \mathsf{WTS}=1$  in Data Configuration Register. This format is used with Series 32xxx, or 808xx processors.

AD7 AD0
Receive Status
Receive Byte Count 1
Byte 2

 $\mathsf{BOS}=1,\mathsf{WTS}=1$  in Data Configuration Register. This format is used with 680 x 0 type processors. (Note: the Receive Count ordering remains the same for  $\mathsf{BOS}=0$  or 1.)

Receive Status
Next Packet Pointer
Receive Byte Count 0
Receive Byte Count 1
Byte 0
Byte 1

 $\mathsf{BOS}=0$  WTS =0 in Data Configuration Register. This format is used with general 8-bit processors.

# 6.4 PACKET TRANSMISSION

The Local DMA is also used during transmission of a packet. Three registers control the DMA transfer during transmission, a Transmit Page Start Address Register (TPSR) and the Transmit Byte Count Registers (TBCR0, 1). When the DP83907 receives a command to transmit the packet pointed to by these registers, buffer memory data will be moved into the FIFO as required during transmission. The DP83907 will generate and append the preamble, synch and CRC fields.

### General Transmit Packet Format

Transmit	Destination Address	6 Bytes
Byte	Source Address	6 Bytes
Count	Type/Length	2 Bytes
TBCR0, 1	Data	≥ 46 Bytes
	Pad (if data < 46 Bytes)	

# **Transmit Packet Assembly**

The DP83907 requires a contiguous assembled packet with the format shown. The transmit byte count includes the Destination Address, Source Address, Length Field and Data. It does not include preamble and CRC. When transmitting data smaller than 46 bytes, the packet must be padded to a minimum size of 64 bytes. The programmer is responsible for adding and stripping pad bytes.

The packets are placed in the buffer RAM by the system. In I/O Mode the system programs the NIC Core's Remote DMA to mode the data from the data port to the RAM handshaking with system transfers loading the I/O data port. In Shared Memory Mode the packets are written directly to the RAM by system using standard memory transfer instructions (MOV).

For I/O mode the data transfer must be 16 bits (1 word) when in 16 bit mode, and 8 bits when the DP83907 is set in 8 bit mode. The data width is selected by setting the WTS bit in the Data Configuration Register and setting the DWID pin for the proper mode.

In Shared Memory mode data transfer can be accomplished by using either 8- or 16-bit data transfer instructions, because this mode responds to 8/16 bit data signaling on the ISA bus. In this mode Shared Memory Control Register 2 bit 6 sets the bus interface data width, and the NIC Core's data width is set by the WTS bit in the Data Configuration Register.

## Transmission

Prior to transmission, the TPSR (Transmit Page Start Register) and TBCR0, TBCR1 (Transmit Byte Count Registers) must be initialized. To initiate transmission of the packet the TXP bit in the Command Register is set. The Transmit Status Register (TSR) is cleared and the DP83907 begins to prefetch transmit data from memory (unless the DP83907 is currently receiving). If the interframe gap has timed out the DP83907 will begin transmission.

# **Conditions Required to Begin Transmission**

In order to transmit a packet, the following three conditions must be met:

- 1. The Interframe Gap Timer has timed out the first 6.4  $\mu s$  of the Interframe Gap
- 2. At least one byte has entered the FIFO. (This indicates that the burst transfer has been started)
- 3. If a collision had been detected then before transmission the packet time must have timed out.

In typical systems the DP83907 prefetches the first burst of bytes before the 6.4  $\mu s$  timer expires. The time during which DP83907 transmits preamble can also be used to load the FIFO.

Note: If carrier sense is asserted before a byte has been loaded into the FIFO, the DP83907 will become a receiver.

### **Collision Recovery**

During transmission, the Buffer Management logic monitors the transmit circuitry to determine if a collision has occurred. If a collision is detected, the Buffer Management logic will reset the FIFO and restore the Transmit DMA pointers for retransmission of the packet. The COL bit will be set in the TSR and the NCR (Number of Collisions Register) will be incremented. If 15 retransmissions each result in a collision the transmission will be aborted and the ABT bit in the TSR will be set.

Note: NCR reads as zeroes if excessive collisions are encountered.

# **Transmit Packet Assembly Format**

The following diagrams describe the format for how packets must be assembled prior to transmission for different byte ordering schemes. The various formats are selected in the Data Configuration Register.

D15	D8	D7 D0
Destination Address	1	Destination Address 0
Destination Address	3	Destination Address 2
Destination Address	5	Destination Address 4
Source Address 1		Source Address 0
Source Address 3		Source Address 2
Source Address 5		Source Address 4
Type/Length 1		Type Length 0
Data 1		Data 0

BOS = 0, WTS = 1 in Data Configuration Register

This format is used with Series 32xxx, or 808xx processors.

D15 I	D8 D7		D0
Destination Address 0		Destination Address 1	
Destination Address 2		Destination Address 3	
Destination Address 4		Destination Address 5	
Source Address 0		Source Address 1	
Source Address 2		Source Address 3	
Source Address 4		Source Address 5	
Type Length 0		Type/Length 1	
Data 0		Data 1	

BOS = 1, WTS = 1 in Data Configuration Register.

This format is used with 680x0 type processors.

D7		D0
	Destination Address 0	
	Destination Address 1	
	Destination Address 2	
	Destination Address 3	
	Destination Address 4	
	Destination Address 5	
	Source Address 0	
	Source Address 1	
	Source Address 2	
	Source Address 3	
	Source Address 4	
	Source Address 5	

BOS = 0, WTS = 0 in Data Configuration Register.

This format is used with general 8 bit processors.

Note: All examples above will result in a transmission of a packet in order of DA0, DA1, DA3... bits within each byte will be transmitted least significant bit first.

DA = Destination Address

# 6.5 LOOPBACK DIAGNOSTICS

Three forms of local loopback are provided on the DP83907. The user has the ability to loopback through the deserializer on the controller, through the ENDEC module or transceiver. Because of the half duplex architecture of the DP83907, loopback testing Is a special mode of operation with the following restrictions:

### **Restrictions During Loopback**

The FIFO is split into two halves, one half is used for transmission the other for reception. Only 8-bit fields can be fetched from memory so two tests are required for 16-bit systems to verify integrity of the entire data path. During loopback the maximum latency to obtain access to the buffer memory is 2.0  $\mu$ s. Systems that wish to use the loopback test yet do not meet this latency can limit the loopback packet to 7 bytes without experiencing underflow. Only the last 8 bytes of the loopback packet are retained in the FIFO. The last 8 bytes can be read through the FIFO register which will advance through the FIFO to allow reading the receive packet sequentially.

Destination Address	= 6 bytes Station Physical Address
Source Address	= 6 bytes Station Physical Address
Length	2 bytes
Data	= 46 to 1500 bytes
CRC	Appended by DP8307
	Controller if CRC = 0 in TCR

When in word-wide mode with Byte Order Select set, the loopback packet must be assembled in the even byte locations as shown below. (The loopback only operated with byte wide transfers.)

LS Byte (D8	3–D15)	MS Byte (D0-D7)
		Destination
		Source
		Length
		Data
		CRS
WTS = 1	BOS = 1	(DCB Bits)

When in word-wide mode with Byte Order Select low, the following format must be used for the loopback packet.

MS Byte (	D8-D15)		LS Byte (D0–D7)
Destin	ation		
Sou	rce		
Len	gth		
Da	ta		
CR	S		
WTS = 1	BOS =	0	(DCB Bits)

Note: When using loopback in word mode 2n bytes must be programmed in the TBCR0, 1. When n = actual number of bytes assembled in even or odd location.

To initiate a loopback the user first assembles the loopback packet then selects the type of loopback using the Transmit Configuration register bits LB0, LB1. The transmit configuration register must also be set to enable or disable CRC generation during transmission. The user then issues a normal transmit command to send the packet. During loopback the receiver checks for an address match and if CRC bit in the TCR is set, the receiver will also check the CRC. The last 8 bytes of the loopback packet are buffered and can read out of the FIFO using FIFO read port.

### Loopback Modes

**MODE1:** Loopback Through the DP83907 Controller Module (LB1 = 0, LB0 = 1): If this loopback is used, The DP83907 Module's serializer is connected to the deserializer.

**MODE 2:** Loopback Through the ENDEC Module (LB1 = 1, LB0 = 0): If the loopback is to be performed through the SNI, the DP83907 provides a control (LPBK) that forces the ENDEC module to loopback all signals.

**MODE 3:** Loopback to the external coax interface or twisted pair interface module (LB1 = 1, LB0 = 1).

Packets can be transmitted to the cable in loopback mode to check all of the transmit and receive paths and the cable itself. If, in twisted pair mode, there is a link fail the transmitter will be disabled which could give misleading results in Mode 3. The link integrity should be checked, by reading Configuration Register B, before this test.

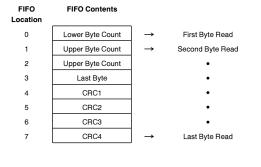
# **Reading the Loopback Packet**

The last eight bytes of a received packet can be examined by 8 consecutive reads of the FIFO register. The FIFO pointer is increment after the rising edge of the CPU's read strobe by internally synchronizing and advancing the pointer. This may take up to four bus clock cycles, if the pointer has not been incremented by the time the CPU reads the FIFO register again, the DP83907 will insert wait states.


Note: The FIFO may only be read during Loopback. Reading the FIFO at any other time will cause the DP83907 to malfunction.

# Alignment of the Received Packet In the FIFO

Reception of the packet in the FIFO begins at location zero, after the FIFO pointer reaches the last location in the FIFO, the pointer wraps to the top of the FIFO overwriting the previously received data. This process continued until the last byte is received. The DP83907 then appends the received byte count in the next two locations of the FIFO. The contents of the Upper Byte Count are also copied to the next FIFO location. The number of bytes used in the loopback packet determined the alignment of the packet in the FIFO. The alignment for a 64-byte packet is shown below.



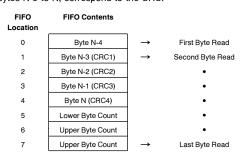For the following alignment in the FIFO the packet length should be  $(N \times 8) + 5$  Bytes. Note that if the CRC bit in the TCR is set, CRC will not be appended by the transmitter. If the CRC is appended by the transmitter, the 1st four bytes, bytes N-3 to N, correspond to the CRC.



# Loopback Tests

Loopback capabilities are provided to allow certain tests to be performed to validate operation of the DP83907 prior to transmitting and receiving packets on a live network. Typically these tests may be performed during power up of a node. The diagnostic provides support to verify the following:

- 1) Verify integrity of data path. Received data is checked against transmitted data.
- 2) Verify CRC logic's capability to generate good CRC on transmit, verify CRC on receive (good or bad CRC).
- 3) Verify that the Address Recognition Logic can
  - a) Recognize address match packets
  - b) Reject packets that fail to match an address

### Loopback Operation In the DP83907 Controller

Loopback is a modified form of transmission using only half of the FIFO. This places certain restrictions on the use of loopback testing. When loopback mode is selected in the TCR, the FIFO is spilt. A packet should be assembled in memory with programming of TPSR and TBCR0, TBCR1 registers. When the transmit command is issued the following operations occur:

### TRANSMITTER ACTIONS

- Data is transferred from memory by the DMA until the FIFO is filled. For each transfer TBCR0 and TBCR1 are decremented. (Subsequent burst transfers are initiated when the number of bytes in the FIFO drops below the programmed threshold.)
- 2) The DP83907 generates 56 bits of preamble followed by an 8-bit synch pattern.
- 3) Data transferred from FIFO to serializer.
- 4) If CRC = 1 in TCR, no CRC calculated by DP83907, the last byte transmitted is the last byte from the FIFO (Allows software CRC to be appended). If CRC = 0, DP83907 calculates and appends four bytes of CRC.
- 5) At end of Transmission PTX bit set in ISR.

# RECEIVER ACTIONS

- 1) Wait for synch, all preamble stripped.
- Store packet in FIFO, increment receive byte count for each incoming byte.
- If CRC = 0 in TRC, receiver checks incoming packet for CRC errors. If CRC = 1 in TCR, receiver does not check CRC errors, CRC error bit always set in RSR (for address matching packets).
- 4) At end of receive, receive byte count written into FIFO, receive status register is updated. The PRX bit is typically set in the RSR even if the address does not match. If CRC errors are forced, the packet must match the address filters in order for the CRC error bit in the RS to be set.

# EXAMPLES

The following examples show what results can be expected from a properly operating DP83907 during loopback. The restrictions and results of each type of loopback are listed for reference. The loopback tests are divided into two sets of tests. One to verify the data path, CRC generation and byte count through all three paths. The second set of tests uses internal loopback to verify the receiver's CRC checking and address recognition. For all of the tests the DCR was programmed to 40H.

Path	TCR	RCR	TSR	RSR	ISR
DP83907	02	00	53	02	02
Internal	02	00	(Note 1)	(Note 2)	(Note 3)

Note 1: Since carrier sense and collision detect are generated in the ENDEC module. They are blocked during internal loopbaok, carrier and CD heartbeat are not seen and the CRS and CDH bits are set.

Note 2: CRC errors are always indicated by receiver if CRC is appended by the transmitter.

Note 3: Only the PTX bit in the ISR is set, the PRX bit is only set if status is written to memory. In loopback this action does not occur and the PRX bit remains 0 for all loopback modes.

### Note 4: All values are hex.

Path	TCR	RCR	TSR	RSR	ISR
DP83907 Internal	04	00	43 (Note 1)	02	02

Note 1: CDH is set, CRS is not set since it is generated by the external encoder/decoder.

Path	TCR	RCR	TSR	RSR	ISR
DP83907	06	00	03	02	02
Internal	06	00	(Note 1)	02	(Note 2)

Note 1: CDH and CRS should not be set. The TSR however, could also contain 01H, 03H, 07H and a variety of other values depending on whether collisions were encountered or the packet was deferred.

Note 2: Will contain O8H if packet is not transmittable

Note 3: During external loopback the DP83907 Controller is now exposed to network traffic, it is therefore possible for the contents of both the Receive portion of the FIFO and the RSR to be corrupted by any other packet on the network. Thus in a live network the contents of the FIF0 and RSR should not be depended on. The DP83907 will still abide by the standard CSMA/CD protocol in external loopback mode. (i.e. The network will not be disturbed by the loopback packet).

Note 4: All values are hex

# **CRC and Address Recognition**

The next three tests exercise the address recognition logic and CRC. These tests should be performed using internal loopback only so that the DP83907 is isolated from interference from the network. These tests also require the capability to generate CRC in software.

The address recognition logic cannot be directly tested. The CRC and FAE bits in the RSR are only set if the address if the packet matches the address filters. If errors are expected to be set and they are not set, the packet has been rejected on the basis of an address mismatch. The following sequence of packets will test the address recognition logic. The DCR should be set to 40H, the TCR should be set to 03H with a software generated CRC.

Pack	et Contents	Results			
Test Address		CRC	RSR		
Test A	Matching	Good	01 (Note 1)		
Test B	Matching	Bad	02 (Note 2)		
Test C Non-Matching		Bad	01		

Note 1: Status will read 21H if multicast address used.

Note 2: Status will read 22H if multtcast address used.

Note 3: In test A, the RSR is set up. In test B the address is found to match since the CRC is flagged as bad. Test C proves that the address recognition logic can distinguish a bad address and does not notify the RSR of the bad CRC. The receiving CRC is proven to work in test A and test B.

Note 4: All values are hex.




FIGURE 36. Tally Counters

### **Network Management Functions**

Network management capabilities are required for maintenance and planning of a local area network. The DP83907 supports the minimum requirement for network management in hardware, the remaining requirements can be met with software. Software alone can not track during reception of packets: CRC errors, Frame Alignment errors, and missed packets, *Figure 36*.

Since errored packets can be rejected, the status associated with these packets is lost unless the CPU can access the Receive Status Register before the next packer arrives. In situations where another packet arrives very quickly, the CPU may have no opportunity to do this. The DP83907 Controller counts the number of packets with CRC errors and Frame Alignment errors. 8-bit counters have been selected to reduce overhead. The counters will generate interrupts whenever their MSBs are set so that a software routine can accumulate the network statistics and reset the counter betore overflow occurs. The counters are sticky so that when they reach a count of 192 (COH) counting is halted. An additional counter is provided to count the number of packets the DP83907 misses due to buffer overflow or being off-line. The structure of the counters is shown in *Fiaure 36*.

Additional information required for network management is available in the Receive and Transmit Status Registers. Transmit status is available after each transmission for information regarding events during transmission.

# Typically, the following statistics might be gathered in software: Traffic: Frames Sent OK Frames Received OK Multicast Frames Received Packets Lost Due to Lack of Resources Retries/Packet Errors: CRC Errors Alignment Errors Excessive Collisions Packet with Length Errors Heartbeat Failure

### 6.6 MEMORY ARBITRATION AND BUS OPERATION

The DP83907 will always operate as a slave device on it's peripheral interface to the ISA bus. However on the memory bus, the DP83907 Controller operates in three possible modes:

- 1. Bus Master of Local Packet Buffer RAM
- 2. Bus Slave when accessed by the CPU via the Bus Interface
- 3. Idle, when no activity is occurring.

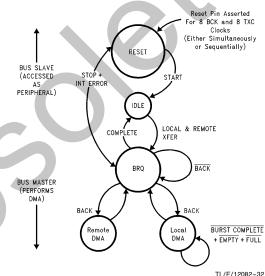


FIGURE 37. DP8390 Core Bus States

Upon power-up the DP83907 is in an indeterminate state. After receiving a hardware reset the DP83907 is a bus slave in the Reset State, the receiver and transmitter are both disabled in this state. The reset state can be re-entered under four conditions, soft reset (Stop Command), register reset (reset port), hard reset (RESET input) or an error that shuts down the receiver of transmitter (FIFO underflow or overflow, receive buffer ring overflow).

After initialization of registers, the DP83907 Controller is issued a Start command and the DP83907 enters Idle state. Until the DMA is required the DP83907 remains in idle state.


The idle state is exited and the DP83907 will drive the local memory bus when a request from the FIFO in the DP8390 (NIC) core causes the memory bus interface logic to issue a read or write operation, such as when the DP83907 is transmitting or receiving data.

The NIC Core's Remote DMA also requests access from the memory bus. When software programs an I/O data transfer between the CPU and the buffer RAM, the Remote DMA controls this request.

All Local DMA transfers are burst transfers, the DMA will transfer an exact burst of bytes programmed in the Data Configuration Register (DCR) then relinquish the memory bus. If there are remaining bytes in the FIFO the next burst will not be initiated until the FIFO threshold is exceeded.

# I/O Mode Operation

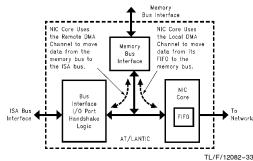In I/O mode the DP83907 transfers data to and from the packet buffer RAM by utilizing the Remote DMA logic which is programmed by the main system CPU to transfer data through the DP83907's internal data



```
FIGURE 38. I/O Operation: All Data Transfers and
Arbitration is Controlled by the NIC Core
```

### INTERLEAVED LOCAL/REMOTE OPERATION

When in I/O mode the remote DMA is used to transfer data to/from the main system. If a remote DMA transfer is initiated or in progress when a packet is being received or transmitted, the Remote DMA transfers will be interrupted for higher priority Local DMA transfers. When the Local DMA transfer is completed the Remote DMA will rearbitrate for the bus and continue its transfers.

If the FIFO requires service while a remote DMA is in progress the Local DMA burst is appended to the Remote Transfer. When switching from a local transfer to a remote transfer there is a break to allow the CPU to fairly contend for the bus.

# **REMOTE DMA BI-DIRECTIONAL PORT**

The Remote DMA transfers data between the local buffer memory and the internal bi-directional port (memory to I/O transfer).

This transfer is arbitrated on a transfer by transfer basis versus the burst transfer mode used for Local DMA transfers. This bi-directional port is integrated onto the DP83907, and is read/written by the host. All transfers through this port are asynchronous. At any one time transfers are limited to one direction, either form the port to local buffer memory (Remote Write) or form local buffer memory to the port (Remote Read).

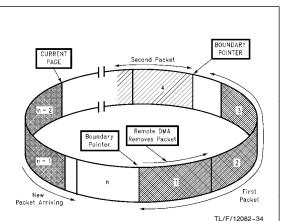


FIGURE 39. 1st Received Packet Removed by Remote DMA

### I/O MODE REMOVING PACKETS FROM RING

Network activity is isolated on a local bus, where the DP83907's local DMA channel performs burst transfers between the buffer memory and the DP83907's FIFO. The Remote DMA transfers data between the buffer memory and the host memory via the internal bi-directional I/O port. The Remote DMA provides local addressing capability and is used as a slave DMA by the host. The host system reads the I/O port to transfer data between the system and I/O port. The DP83907 allows Local and Remote DMA operations to be interleaved.

Packets are removed from the ring using the Remote DMA. When using the Remote DMA the Send Packet command can be used. This programs the Remote DMA to automatically remove the received packet pointed to by the Boundary Pointer. At the end of the transfer, the DP83907 moves the Boundary Pointer, freeing additional buffers for reception. The Boundary Pointer can also be moved manually by programming the Boundary Register. Care should be taken to keep the Boundary Pointer at least one buffer behind the Current Page Pointer.

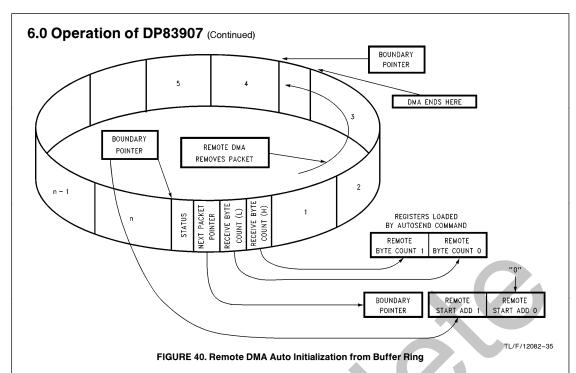
Data transfer by the Remote DMA to the integrated I/O data port is dependent on whether the DP83907 is set into 8 bit mode or 16 bit mode. In 8 bit mode all transfers are 8 bits (1 byte) wide. When in 16 bit mode all transfers are 16 bits (1 word) wide. The data width is selected by setting the WTS bit in the data Configuration Register and setting the DWID pin for the proper mode.

The following is a suggested method for maintaining the Receive Buffer Ring pointers:

- At initialization, set up a software variable (next\_pkt) to indicate where the next packet will be read. At the beginning of each Remote Read DMA operation, the value of next\_pkt will be loaded into RSAR0 and RSAR1.
- 2. When initializing the DP83907 Controller set:

- CURR = PSTART + 1
- next\_pkt = PSTART + 1
- After a packet is DMAed from the Receive Buffer Ring, the Next Page Pointer (second byte in the DP83907 Controller buffer header is used to update BNDRY and next\_pkt.

BNDRY = PSTART



# next\_pkt = Next Page Pointer

BNDRY = Next Page Pointer - 1

If BNDRY < PSTART then BNDRY = PSTOP -1

Note the size of the Receive Buffer Ring is reduced by one 256-byte buffer, this will not, however impede the operation of the DP83907. The advantage of this scheme is that it easily differentiates between buffer full and buffer empty: it is full if BNDRY = CURR; empty when BNDRY = CURR-1. If, in I/O mode, send packet is used to empty the buffer ring this scheme cannot be used. BNDRY must be initialized equal to CURR, or the first executed send packet will not return data from the received packet, which will be written at CURR. The Overwrite Warning bit of the Interrupt Status Register must be used in this mode to differentiate between buffer full and buffer empty.

### I/O REMOTE DMA COMMANDS

The Remote DMA channel is used in the I/O Mode to both assemble packets for transmission, and to remove received packets from the Receive Buffer Ring. It may also be used for moving blocks of data or commands between host memory and local buffer memory. (In Shared Memory Mode, the Remote DMA should be disabled, and not used. Packet transfer to/from the system is accomplished by normal CPU read/write operations.) There are three modes of Remote DMA operation: Remote Write, Remote Read, or Send Packet.

Two register pairs are used to control the Remote DMA, a Remote Start Address (RSAR0, RSAR1) and a Remote Byte Count (RBCR0, RBCR1) register pair. The Start Address Register pair points to the beginning of the block to be moved while the Byte Count Register pair is used to indicate the number of bytes to be transferred. Full handshake logic is provided to move data between local buffer memory and a bi-directional I/O port.

**Remote Write:** A Remote Write transfer is used to move a block of data from the host into local buffer memory. The Remote DMA will read data from the I/O port and sequentially write it to local buffer memory beginning at the Remote Start Address. The DMA Address will be incremented and the Byte Counter will be decremented after each transfer. The DMA is terminated when the Remote Byte Count Register reaches a count of zero.

**Remote Read:** A Remote Read transfer is used to move a block of data from local buffer memory to the host. The Remote DMA will sequentially read data from the local buffer memory, beginning at the Remote Start Address, and write data to the I/O port.

The DMA Address will be incremented and the Byte Counter will be decremented after each transjer. The DMA is terminated when the Remote Byte Count Register reaches zero.

Send Packet Command: The Remote DMA channel can be automatically initialized to transfer a single packet from the Receive Buffer Ring. The CPU begins this transfer by issuing a "Send Packet" Command. The DMA will be initialized to the value of the Boundary Pointer Register and the Remote Byte Count Register pair (RBCR0, RBCR1) will be initialized to the value of the Receive Byte Count fields found in the Buffer Header of each packet. After the data is transferred, the Boundary Pointer is advanced to allow the buffers to be used for new receive packets. The Remote Read will terminate when the Byte Count equals zero. The Remote DMA is then prepared to read the next packet from the Receive Buffer Ring. If the DMA pointer crosses the Page Stop Register, it is reset to the Page Start Address. This allows the Remote DMA to remove packets that have wrapped around to the top of the Receive Buffer Ring.

Note 1: In order for the DP83907 Controller to correctly execute the Send Packet Command, the upper Remote Byte Count Register (RBCR1) must first be loaded with 0FH.

Note 2: The Send Packet command cannot be used with 680x0 type processors.

# I/O READ TIMING

- The DMA reads word from local buffer memory and writes the word into the internal latch, increments the DMA address and decrements the byte count (RBCR0,1).
- 2) Internally a request line is asserted to enable the system to read the port. If the system reads this port before the data has been written, then the system is sent a wait signal to wait until the data has been written to the port. Once written the systems read is allowed to complete.
- The system reads the port, the read strobe for the port is used as an acknowledge to the Remote DMA and it goes back to step 1.

Steps 1–3 are repeated until the remote DMA is complete. (i.e., the byte count has gone to zero.)

Note that in order for the Remote DMA to transfer a word from memory to the latch, it must arbitrate access to the local buffer RAM. After each word is transferred to the internal latch, access to the RAM is relinquished. If a Local DMA is in progress, the Remote DMA is held off until the local DMA is complete.

# **I/O WRITE TIMING**

A Remote Write operation transfers data from the I/O port to the local buffer RAM. The system transfers a byte-word to the latch via IOWR. This write strobe is detected by the DP83907 and the byte/word is transferred to local buffer memory. The Remote DMA holds off further transfers into the latch until the current byte/word has been transferred from the latch.

- 1) DP83907 awaits data to be written by the system. System writes byte/word into latch.
- Remote DMA reads contents of port and writes byte/ word to local buffer memory, increments address and decrements byte count (RBCR0,1).
- 3) Go back to step 1.
- Steps 1-3 are repeated until the remote DMA is complete.

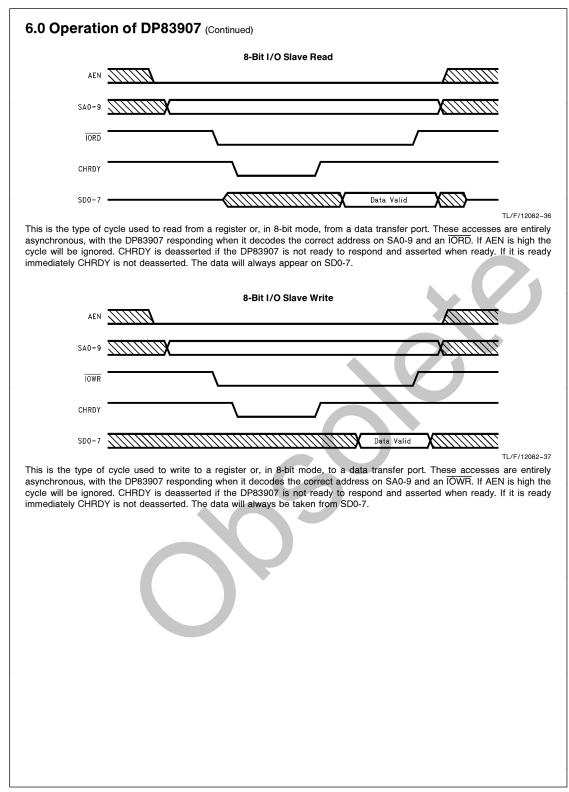
### 6.7 FUNCTIONAL BUS TIMING

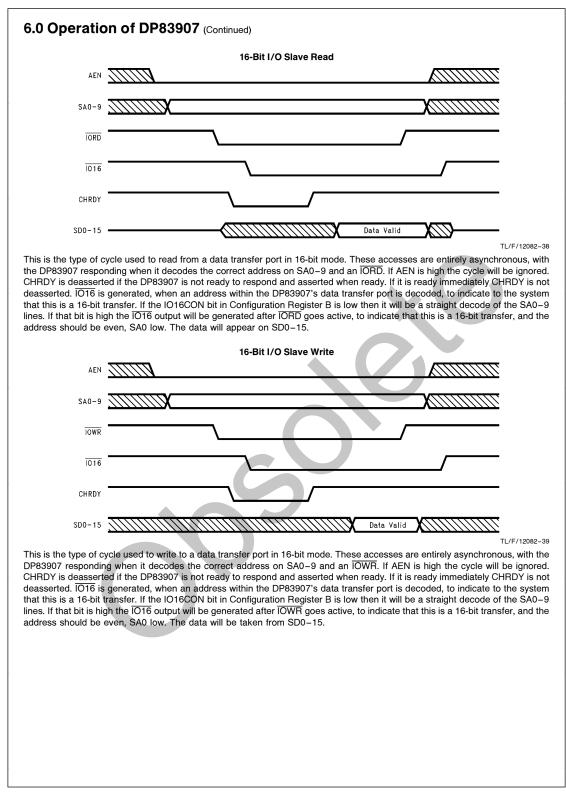
This section describes the bus cycles that the DP83907 performs. These timings can be subdivided into 3 basic categories:

- 1. ISA I/O Access: There are register accesses in both modes, and I/O data accesses in I/O mode.
- Shared RAM ISA Accesses: These are the timing for the ISA bus accesses through the DP83907 to the memory bus and buffer RAM.
- Boot PROM ISA Accesses: These are the timing for the ISA bus accesses through the DP83907 to the memory bus and boot PROM.
- Local and I/O RAM Accesses: This is the timing of the Local DMA, accesses from the NIC Core FIF0 to the RAM, and the Remote DMA accesses to the RAM over the memory bus.

# ISA Bus I/O Accesses

The DP83907 is designed to directly interface to the ISA bus (PC AT backplane bus). The CPU can read or write any internal registers. All register accesses are byte wide. The functional timing for DP83907 accesses are shown in the following pages.







# 16-Bit I/O Cycle with IO16 Fix


Some Chips & Technologies and VLSI Technologies PC-AT chip sets have timing requirements in 16-bit I/O cycles that cannot be achieved by the default DP83907 cycle, described on the previous page. When that cycle is executed with these chip sets, the system does not recognize the CHRDY signal and does not insert wait states. The system executes a standard cycle and deasserts IORD or IOW even if CHRDY is still deasserted. The DP83907 recognizes if this situation has occurred, asserts CHRDY and sets a bus error bit in Configuration Register B to flag this error. Thus the user can test any new system to see if this error occurs and then take some remedial action. The DP83907 supports a fix which can be selected by software, by writing to Configuration Register B.

This fix is enabled by setting the IO16 bit of Configuration Register B. In normal operation any time a valid address exists on SA0-9 IO16 is generated. Delaying IO16 until after the IORD or IOW can cure the problem on non-compliant machines. The theory is that the system is fooled into thinking an 8-bit peripheral is responding, since IO16 is not generated for the valid address, and accepts 8-bit I/O cycle timings for CHRDY. It then rechecks IO16 after the IORD or IOW strobe and correctly determines it is a 16-bit peripheral. If a system did not recheck IO16 it would generate 2, 8-bit cycles instead of 1, 16-bit cycle. The DP83907 would interpret each 8-bit access as a 16-bit transfer and decrement it's DMA byte count by 2. Eventually the system would attempt to access the data transfer port when the DP83907 had finished transferring data and CHRDY would be deasserted indefinitely. To prevent misoperation this fix should only be implemented on systems that require it.
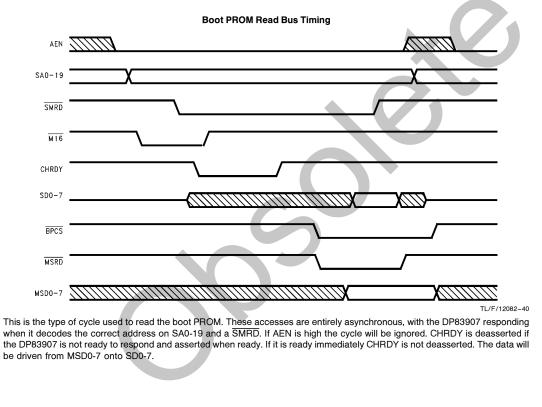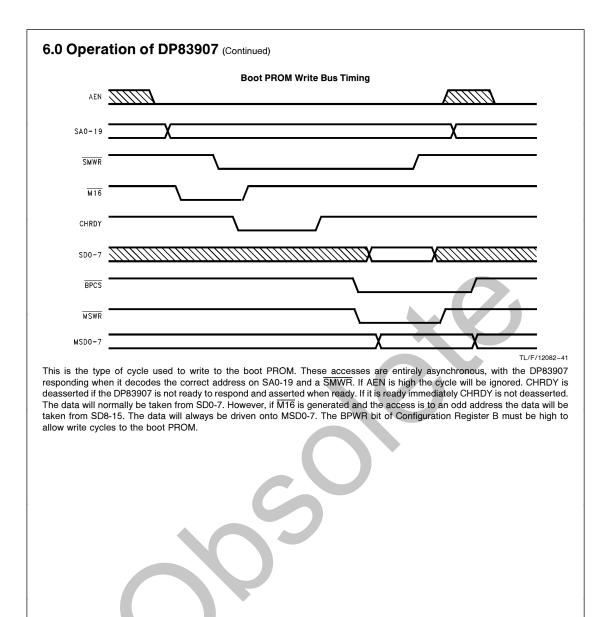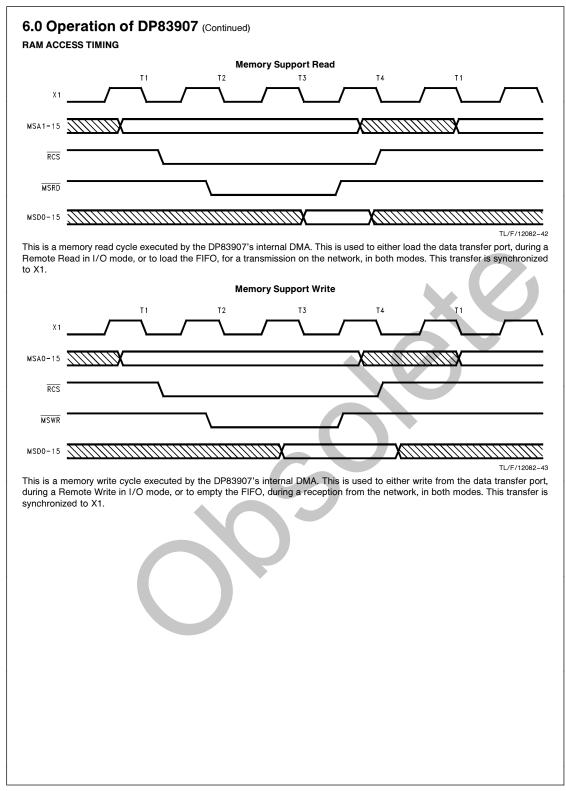
# ISA BUS BOOT PROM ACCESS TIMING







# 7.0 In-Circuit Test (ICT) Description

The test register is made available only when the test bit (D7 of cnfg. A) is set at the following I/O address: I/O mode: Base + 1FHex.

The test register contains the following bits. Note that when the test bit is low the test register is held set except for D4 and D0 which is reset.

TABLE I. Test Modes (test pin $=$ 1)								
lode	D7	D6	D5	D4	D3	D2	D1	D0

	Test Mode	D7	D6	D5	D4	D3	D2	D1	D0	SA<9>
1	V <sub>IH</sub> /V <sub>IL</sub>	1	1	1	1	1	1	1	0	х
2	V <sub>OH</sub> /V <sub>OL</sub>	1	1	1	0	1	0	1	0	1

 $V_{\text{IL}}/V_{\text{IH}}$  test mode when high will AND all inputs (except RESET pin) and present outcome on IRQ<3>. To enable this st-nic mode must NOT be entered.

 $V_{OH}/V_{OL}$  test mode is active in st-nic mode if SA<9>=1. Then all o/p's switch with SA<4> as per Table 2.  $V_{OH}/V_{OL}$  mode output states (SA<9>=1)

SA<4>=0	SA<4>=1								
1555 Hex	0AAA Hex								
AAAA Hex	5555 Hex								
AAAA Hex	5555 Hex								
A2 Hex	5D Hex								
0	1								
1	0								
0	1								
0	1								
1	0								
0	0								
0	0								
0, 1, 0	1, 0, 1								
1	0								
	SA < 4> = 0           1555 Hex           AAAA Hex           AAAA Hex           A2 Hex           0           1           0           1           0           0           0           0           0           0           0           0           0								

TABLE II

# **DP83907 Preliminary Specification Design Guide**

This document provides information on National Semiconductor's DP83907 target design parametric specifications. These specifications are provided as design targets for the DP83907. These parameters should be used to undergo systems design activities, and are not provided as guaranteed parametric specifications. At this time these specifications are **not** tested, and are subject to change based upon National's product characterization and yield analysis.

# Absolute Maximum Ratings Operating Conditions

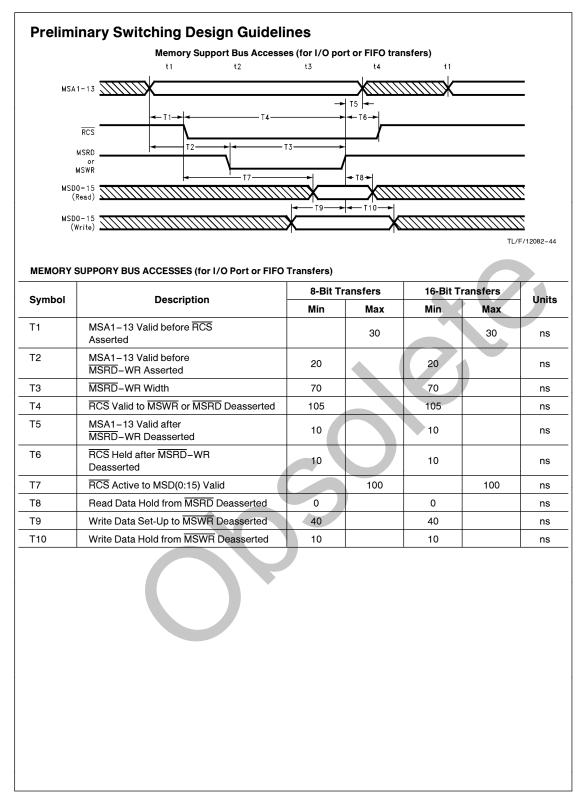
If Military/Aerospace specified	
please contact the National Office/Distributors for availability	
Supply Voltage (V <sub>CC</sub> )	-0.5V to $+7.0V$
Storage Temperature (T <sub>STG</sub> )	-65°C to +150°C
Package Power Dissipation (PD)	900 mW
Lead Temperature (T <sub>L</sub> ) (Soldering, 10 seconds)	260°C

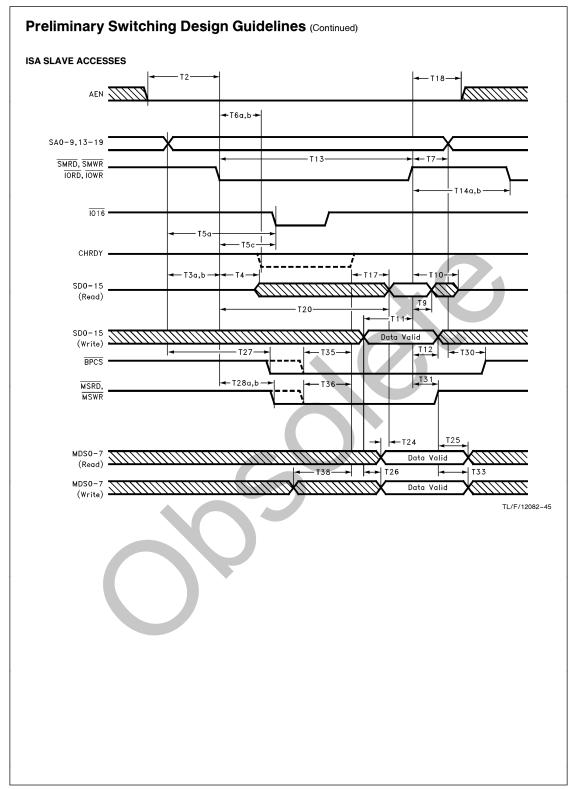
Operating Conditions			
	Min	Max	Units
Supply Voltage (V <sub>CC</sub> )	4.75	5.25	V
Operating Temperature (T <sub>A</sub> )	0	+70	°C
ESD Tolerance:	2.0		kV
$C_{ZAP} = 100 \text{ pF}, R_{ZAP} = 1.5 \text{ k}\Omega$			

# **Preliminary DC Specifications**

Symbol	Description	Conditions	Min	Max	Unit
	RENT				
ICC	Average Active (Transmitting and Receiving) Supply Current	X1 = 20  MHz Clock $V_{IN} = Switching$		150	mA
	Average Idle Supply Current	X1 = 20  MHz Clock $V_{IN} = V_{CC} \text{ or GND}$		120	mA
TL INPUTS					
V <sub>IL</sub>	Maximum Low Level Input Voltage			0.8	V
V <sub>IH</sub>	Minimum High Level Input Voltage		2.0		V
I <sub>IN</sub>	Input Current	$V_{I} = V_{CC} \text{ or } GND$	-10	+ 10	μA
ST TRI-STA	TE HIGH DRIVE I/O				
V <sub>OH</sub>	Minimum High Level Output Voltage	$I_{OH} = -3 \text{ mA}$	2.4		V
V <sub>OL</sub>	Maximum Low Level Output Voltage	$I_{OL} = 24 \text{ mA}$		0.5	V
V <sub>IL</sub>	Maximum Low Level Input Voltage			0.8	V
VIH	Minimum High Level Input Voltage		2.0		V
I <sub>IN</sub>	Input Current	$V_{I} = V_{CC} \text{ or } GND$	-10	+ 10	μΑ
I <sub>OZ</sub>	Maximum TRI-STATE Output Leakage Current	$V_{OUT} = V_{CC} \text{ or } GND$	-10	+10	μA
NOS INPUTS	, OUTPUTS AND I/O				
V <sub>OH</sub>	Minimum High Level Output Voltage	I <sub>OH</sub> = −20 μA	V <sub>CC</sub> - 0.1		V
V <sub>OL</sub>	Maximum Low Level Output Voltage	$I_{OL} = 20 \ \mu A$		0.1	v
V <sub>IL</sub>	Maximum Low Level Input Voltage			0.8	V
V <sub>IH</sub>	Minimum High Level Input Voltage		2.0		v
I <sub>IN</sub>	Input Current	$V_{I} = V_{CC} \text{ or } GND$	-10	+ 10	μΑ
I <sub>IN1</sub>	Input Current MSA9-13, MSD0-2	$V_{I} = V_{CC} \text{ or } GND$	-10	+ 10	μA
I <sub>IN2</sub>	Input Current MSD3-15, MSA1-8	V <sub>I</sub> = V <sub>CC</sub> or GND RESET = Active	-10	+ 10	μA
I <sub>OZ</sub>	Maximum TRI-STATE Output Leakage Current	$V_{OUT} = V_{CC} \text{ or } GND$	-10	+ 10	μΑ
OCH OPEN C	OLLECTOR HIGH DRIVE OUTPUT				
V <sub>OL</sub>	Maximum Low Level Output Voltage	$I_{OL} = 24 \text{ mA}$		0.5	V
ED DRIVER	Ουτρυτ				
V <sub>OL</sub>	Maximum Low Level Output Voltage	$I_{OL} = 16 \text{ mA}$		0.5	V


Symbol	Description	Conditions	Min	Мах	Units
OSCILLAT	OR PINS (X1 AND X2)				
V <sub>IH</sub>	X1 Input High Voltage	X1 is Connected to an Oscillator	2.0		V
V <sub>IL</sub>	X1 Input Low Voltage	X1 is Connected to an Oscillator		0.8	V
I <sub>OSC</sub>	X1 Input Current	X1 is Connected to an Oscillator $V_{IN} = V_{CC}$ or GND		1	mA
ТРІ					
R <sub>TOL</sub>	TXOd $\pm$ , TXO $\pm$ Low Level Output Resistance	$I_{OL} = 25 \text{ mA}$		15	Ω
R <sub>TOH</sub>	TXOd $\pm$ , TXO $\pm$ High Level Output Resistance	$I_{OH} = -25 \text{ mA}$		15	Ω
V <sub>SRON1</sub>	Receive Threshold Turn-On Voltage 10BASE-T Mode		±300	±585	mV
V <sub>SRON2</sub>	Receive Threshold Turn-On Voltage Reduced Threshold		± 175	±300	mV
V <sub>SROFF</sub>	Receive Threshold Turn-Off Voltage	(Note 1)	±175	± 300	mV
V <sub>DIFF</sub>	Differential Mode Input Voltage Range	V <sub>CC</sub> = 5.0V (Note 1)	-3.1	+ 3.1	V
V <sub>OD</sub>	Differential Output Voltage	On-Chip Filters Selected	Typical:	5.0	V
		100 $\Omega$ Load	(Note:	s 1, 2)	pk-pk
AUI					
V <sub>OD</sub>	Differential Output Voltage (TX $\pm$ )	78 $\Omega$ Termination (Note 1)	±550	±1200	mV
V <sub>OB</sub>	Differential Idle Output Voltage Imbalance (TX $\pm$ )	78 $\Omega$ Termination (Note 1)	Ту	pical: 40 m\	V
VU	Undershoot Voltage (TX $\pm$ )	78 $\Omega$ Termination (Note 1)	Ту	pical: 80 m\	V
V <sub>DS</sub>	Differential Squelch Threshold (RX $\pm$ , CD $\pm$ )		-175	-300	mV
V <sub>CM</sub>	Differential Input Common Mode Voltage ( $RX \pm$ , CD $\pm$ )	(Note 1)	0	5.25	v
Note 2: In or	Tested in Production Test. chip filter mode, the value of TPI V <sub>DD</sub> when measured driving a 100 use of a resistor on RTX. This does not adversely effect system per				d process








	AVE ACCESSES (Continued)	8-Bit Tr	ansfers	16-Bit T	ransfers	<u> </u>	
Symbol	Description		Max	Min	Max	Units	
T2	AEN Valid before Command Strobe Active	Min 60	mux	60	Indx	ns	
T3a	SA0-9 Valid before IORD, IOWR Asserted	40		20		ns	
T3b	SA0-19 Valid before SMRD, SMWR Asserted	32				ns	
T4	SMRD, IORD, Asserted to SD0–15 Driven (Notes 3, 14)	0		0		ns	
T5a	SA0-9 Valid before 1016 Valid (Notes 1, 9)				60	ns	
T5c	SA0-9 Valid and IORD, IOWR Active before IO16 Valid (Notes 1, 10)				50	ns	
T6a	IORD, IOWR Asserted to CHRDY Negated (Notes 2, 5)		100		50	ns	
T6b	SMRD, SMWR Asserted to CHRDY Negated (Note 2)		100			ns	
Τ7	SMRD, SMWR, IORD, IOWR, Negated before SA0–9 Invalid	20		20		ns	
Т9	SMRD, IORD, Negated to SD0-15 Read Data Invalid (notes 3, 14)	0		0		ns	
T10	SMRD, IORD negated to SD0-15 Floating (Note 3)		45		45	ns	
T11	D0-15 Write Data Valid to IOWR, SMWR Negated (Note 3)	60			40	ns	
T12	SMWR, IOWR, Negated to SD0-15 Write Data Invalid (Note 3)	20		20		ns	
T13	SMRD, SMWR, IORD, IOWR Active Width (Note 8)	300		140		ns	
T14a	IORD, IOWR Inactive Width	85		85		ns	
T14b	SMRD, SMWR, Inactive Width	150		150		ns	
T17	CHRDY Asserted to SD0-15 Read Data Valid (Notes 2, 3, 6)		60		60	ns	
T18	SMRD, SMWR, IORD, IOWR Negated before AEN Invalid	25		25		ns	
T20	SMRD, IORD Asserted to SD0-15 Read Data Valid (Notes 3 and 7)		150		90	ns	
T24	Read Data Valid on MSD0-7 to Valid on SD0-7		70			ns	
T25	MSRD Deasserted to MSD0-7 Read Data Invalid (Note 3)	0				ns	
T26	Write Data Valid on SD0-7 to Valid on MSD0-7		90			ns	

		8-Bit Transfers		16-Bit Transfers		
Symbol	Description	Min	Мах	Min	Max	Unit
T27	SA0-19 Valid to BPCS Asserted (Note 11)		55		55	ns
T28a	MRD Asserted to MSRD Asserted		60		60	ns
T28b	MWR Asserted to MSWR Asserted		120		120	ns
Т30	SA0-19 Invalid to BPCS Negated (Note 11)	0				ns
T31	SMRD, Deasserted to MSRD Deasserted	0				ns
ТЗЗ	MSWR Deasserted to MSD0-7 Invalid (Note 3)	0				ns
T35	BPCS Asserted to CHRDY Asserted (Note 13)	175				ns
T36	MSRD Asserted to CHRDY Asserted (Note 13)	150				ns
Т38	MSD0-7 Asserted to CHRDY Asserted (Note 13)	250				ns
SERIAL E						
SERIAL E						-/12082-4
SERIAL E	EECS MSD2 +T6 +T8 MSD1 +T8 MSD0			T2		F/12082-4
	EECS MSD2 +T6 +T8 MSD1 +T8 MSD0			12	Ui	
Sym	EECS			T2	Ui	nits
Symi T1	EECS MSD2 MSD1 MSD0 MSD0 Description EECS Setup to MSD2			T2		nits ns
<b>Sym</b> T1 T2	EECS MSD2 HSD1 HSD1 HSD0 HSD0 EECS Setup to MSD2 EECS Hold after MSD2	Min 150 250		T2		nits ns ns
<b>Sym</b> i T1 T2 T3	EECS	Min 150 250 450		T2		nits ns ns ns
<b>Sym</b> T1 T2 T3 T4	EECS MSD2 MSD1 MSD0 MSD0 Description EECS Setup to MSD2 EECS Hold after MSD2 MSD2 Low Time MSD2 High Time	Min 150 250 450		T2		nits ns ns ns ns
<b>Sym</b> T1 T2 T3 T4 T5	EECS MSD2 MSD1 MSD0 MSD0 Description EECS Setup to MSD2 EECS Hold after MSD2 EECS Hold after MSD2 MSD2 Low Time MSD2 High Time MSD2 Clock Period (Note 1)	Min 150 250 450 1		T2		nits ns ns ns ns us

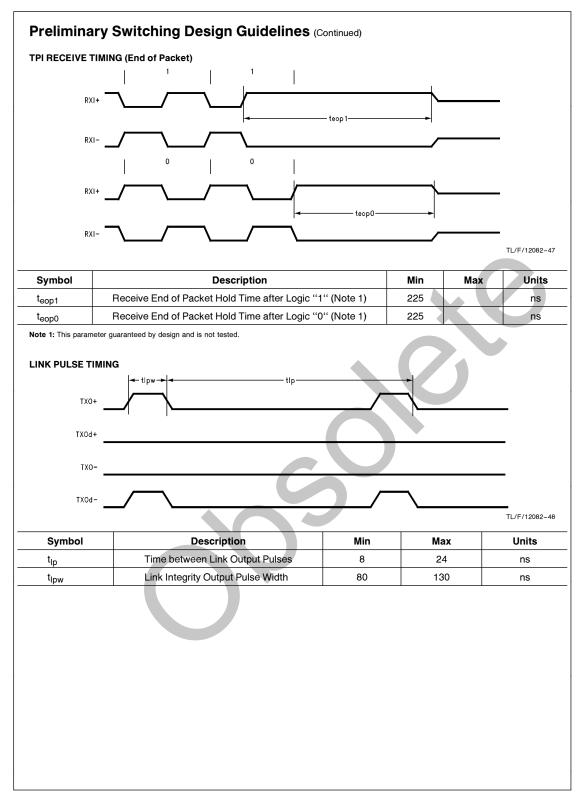


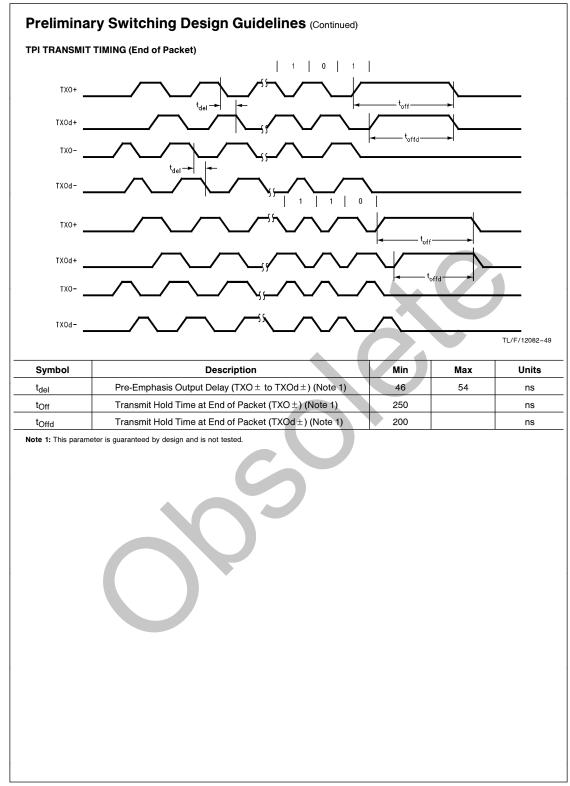

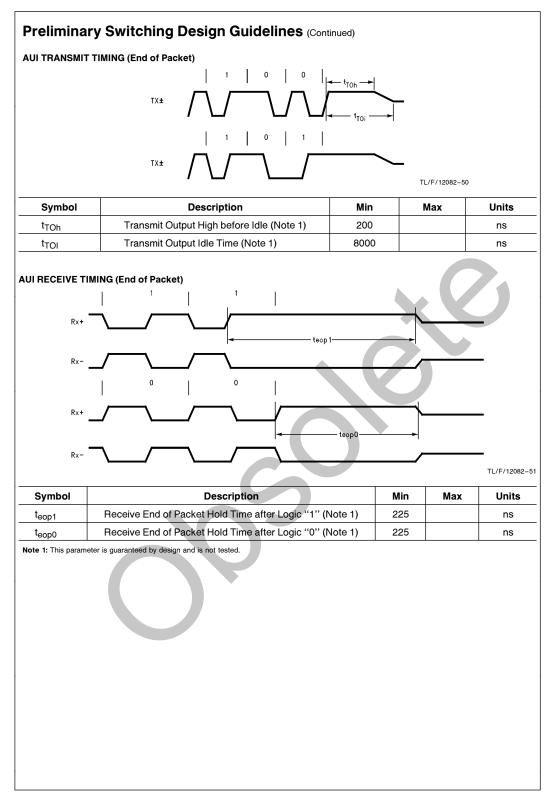

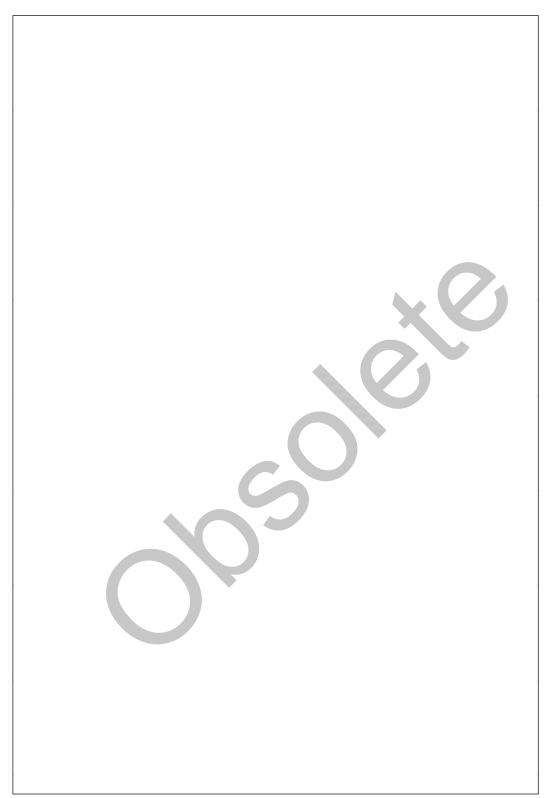

# DP83907 AT/LANTIC II

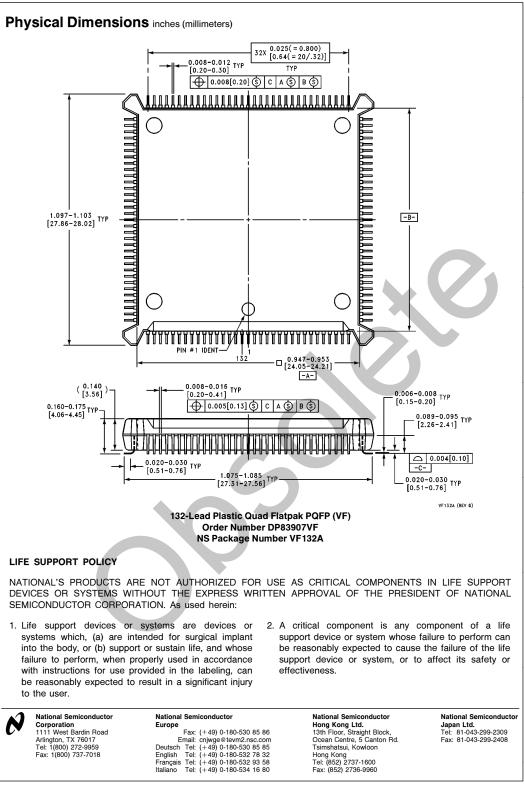

National does not assume any responsibility for use of any circuitry described, no circuit patent licenses are implied and National reserves the right at any time without notice to change said circuitry and specifications

# **IMPORTANT NOTICE**

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

Products		Applications	
Audio	www.ti.com/audio	Communications and Telecom	www.ti.com/communications
Amplifiers	amplifier.ti.com	Computers and Peripherals	www.ti.com/computers
Data Converters	dataconverter.ti.com	Consumer Electronics	www.ti.com/consumer-apps
DLP® Products	www.dlp.com	Energy and Lighting	www.ti.com/energy
DSP	dsp.ti.com	Industrial	www.ti.com/industrial
Clocks and Timers	www.ti.com/clocks	Medical	www.ti.com/medical
Interface	interface.ti.com	Security	www.ti.com/security
Logic	logic.ti.com	Space, Avionics and Defense	www.ti.com/space-avionics-defense
Power Mgmt	power.ti.com	Transportation and Automotive	www.ti.com/automotive
Microcontrollers	microcontroller.ti.com	Video and Imaging	www.ti.com/video
RFID	www.ti-rfid.com		
OMAP Mobile Processors	www.ti.com/omap		
Wireless Connectivity	www.ti.com/wirelessconnectivity		
		u Hama Dawa	a O a Al a a m

**TI E2E Community Home Page** 

e2e.ti.com

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2011, Texas Instruments Incorporated