



Molex Japan Co., Ltd.

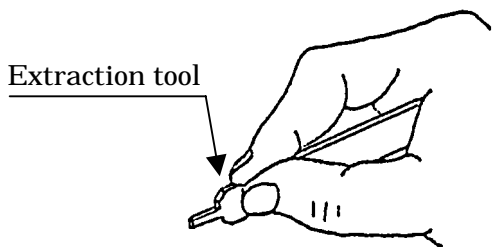
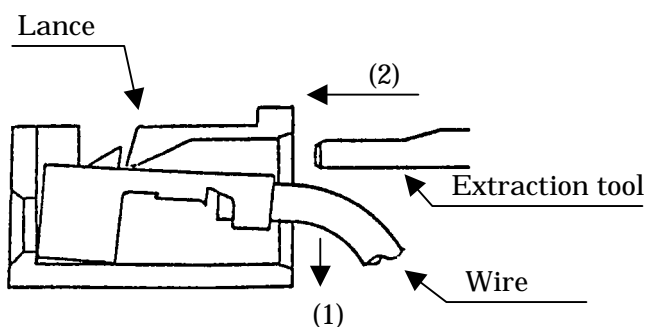
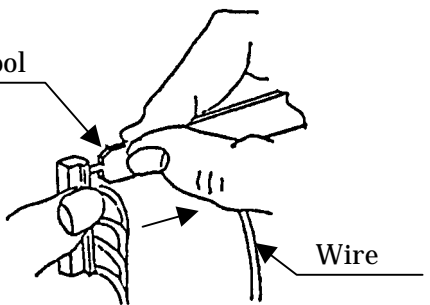
INSTRUCTION MANUAL NO.	
IS-0036E	
ISSUED	1987-07-22
REVISED	2005-02-15
REV.	D

Tool Number: 57105-6000

This document is prepared so that the tool is properly used.

Please take the time to read this manual, making sure you understand the operating procedures described herein before attempting to operate the tool.

Applicable housing number	51004, 51049	51065, 5109, 51090
Applicable terminal number	50011, 50031, 50200	50212, 50372

No	Operation steps	Explanation figure
1	Hold an extraction tool, and make forward the "Molex" engraving side of it as shown in a right picture.	 <p>Extraction tool</p>
2	Hold a housing, and upturn the lance part of it. Next, (1) bend a wire to downward, and (2) insert the tool to the interior of the housing in the lance side in a right picture.	 <p>Lance</p> <p>(2)</p> <p>Extraction tool</p> <p>(1)</p> <p>Wire</p>
3	Pull out at the time with the wire and the tool in a right picture with the tool inserted.	 <p>Extraction tool</p> <p>Wire</p>

"Note" Please surely lock the terminal pushing the lance of the housing when you install the terminal again after pulling out.