# Data Stream RS485 Digital Transducer

### DIN RAIL / PANEL MOUNT



Single Element - .26" Window 150 to 300 VAC 1 to 25 AAC Input Range



Two Element - .26" Window 150 to 300 VAC 1 to 25 AAC Input Range



Three Element - .26" Window 150 to 300 VAC 1 to 25 AAC Input Range

The **CRD5100** Series Data Stream Digital Transducers are designed for complete monitoring of electrical power systems. The digital technology is used to measure voltage, current, power frequency and energy in single and three phase designs. The data is streamed over an RS485 IEEE bus which enables multiple transducers to communicate thru a single master connection. These advanced sensors are ideal for entire plant or zone monitoring. Also, the communication alagorithm can be pre-ordered with ASCII based control or modified MODBUS based control.

### Sensing

Voltage, True RMS Current, True RMS

Active Power, bi-directional

Active Energy, bi-directional

Reactive Power, bi-directional

Reactive Energy, bi-directional

**Power Factor** 

Frequency

### **Applications**

Sub-Metering

Motor Loads

Uninterruptible Power Systems

Remote Monitoring

Load Shedding

**Energy Management** 

#### **Features**

35mm DIN Rail or Panel Mount

24 VDC powered

Use with external current transformers

Highest precision available

Connection diagram printed on case

## **Regulatory Agencies**







PART NUMBERS						
CRD5110	-		-		1 Element, AC Multifunction RS485 Digital Transducer	
CRD5150	-		-		3 Phase, 3-Wire AC Multifunction RS485 Digital Transducer	
CRD5170	-		-		3 Phase, 4-Wire AC Multifunction RS485 Digital Transducer	

**150** - 0-150 VAC **300** - 0-300 VAC

Available up to and including 600 VAC

1 - 0-1 AAC

**5** • 0-5 AAC

**15 -** 0-15 AAC **25 -** 0-25 AAC

Above 30 AAC must use 5 amp CT

Note: Add an M at the end for MODBUS CRD5110-150-5-M




CR Magnetics, Inc. 3500 Scarlet Oak Blvd. St. Louis MO USA 63122 V: 636-343-8518 F: 636-343-5119

Web: http://www.crmagnetics.com


E-mail: sales@crmagnetics.com

#### **SPECIFICATIONS**

Basic Accuracy:	0.5%	Torque Specifications:3.0 inch lbs (0.4Nm)				
Calibration:	True RMS Sensing	Response Time:250 ms. max. 0-90% FS				
Thermal Drift:	500 PPM/°C	Relative Humidity:80% for temperatures up to				
Operating Temperature	e <sub>1</sub> :0°C to +60°C	31°C and decreasing linearly to 50% at 40°C				
Installation Category:	CAT II	Output Resolution:16 bi				
Pollution Degree:	2	Transducer fanout on common bus:64 max				
Insulation Voltage:	2500 VDC	Baud Rate <sub>3</sub> :1200, 2400, 4800, 9600,19.7K .bps				
Altitude:	2000 meter max	A/D Conversion Type:4th order Delta Sigma				
Frequency Range:	20 Hz - 5 KHz	Device Address <sub>3</sub> :00 to FF				
MTBF:	Greater than 100K hours	s Data Format: ASCI				
Cleaning:	Water-dampened cloth	Supply Current:Typical 30mA Max 30mA				
Supply Voltage <sub>2</sub> :	24 VDC ±10%	Weight:				
1) RH 5% to 95%, non-cond	ensing	2) 0.4% max. ripple Vpp				
3) Factory default settings: address 01, baud rate 9600, no parity, no flow control, 1 stop bit						




CRD5110 Single Element, 2-Wire




CRD5150 3 Element, 3-Wire


## **Connection Diagram**

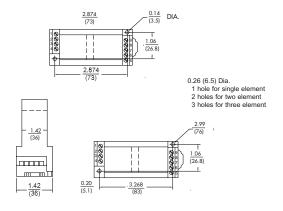

## **OUTLINE DRAWING**




CRD5150 Single Element, 3-Wire



CRD5170 3 Element, 4-Wire

#### CRD485-232

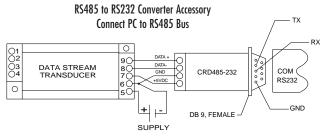

## **ASCII Simplified Programming Commands**

A simplified data structure is used with only 6 commands required for full control of the transducer. Commands are: Read Transducer Name, Read Configuration, Set Configuration, Read Measurements, Read Energy Totalizer and Clear Energy Totalizer. For illustration, the following commands are used to read data from a CRD5170 3 Phase, 4 Wire Transducer with a device address of 00.

Command Transducer to Read Data: #00A<cr>

 $\textbf{Transducers Response:} \ \ \, \text{>+}[\% \ \text{FS Voltage}_{L1\text{-N}}] \text{+}[\% \ \text{FS Current}_{L1}] \text{+}[\% \ \text{FS}$ 

 $Voltage_{L_2-N}$ ]+[% FS Current\_2]+[% FS  $Voltage_{L_3-N}$ ]+[% FS Current\_3,][+/- % FS

Power][+/-% FS VARS][+/-Power Factor][Frequency]<cr>

Command Transducer to Read Energy Totalizer: #00W<cr>

Transducer Responds: 01[+/-KWHr]{\[-/-KVHr][check sum]<cr>

Note: This is for illustration purposes only, See Applications Guides (Section I for complete instructions.



CR Magnetics, Inc. 3500 Scarlet Oak Blvd. St. Louis MO USA 63122 V: 636-343-8518 F: 636-343-5119