

TSW4806EVM

The TSW4806 evaluation module (EVM), one of the new Texas Instruments (TI) low-cost evaluation tools, uses an LMK04806 dual-PLL clock-jitter cleaner and generator, providing a low cost, low-noise, portable clocking solution for use with TI's high-speed data converter EVMs. Together with the accompanying Labview-based Graphical User Interface (GUI), it is a complete clocking tool used with the other low-cost TI evaluation tools providing a complete system that captures and evaluates data samples from ADC EVM's and generates test patterns to DAC EVM's. The EVM's on-board EEPROM comes with several pre-programmed register settings so the board can begin running without using the GUI interface. The EEPROM provides the memory necessary for saving up to eight custom LMK04806 configuration settings. These settings are quickly loaded using on-board switches.

Contents

1	Introduction	2
1.1	Overview	2
1.2	Quick-Start Setup Procedure	3
2	Software Control	3
2.1	Installation Instructions	3
2.2	Software Operation	3
3	TSW4806 GUI Operation	7
4	EEPROM	8
4.1	Writing to the EEPROM	8
4.2	Program the LMK04806 Device from EEPROM	9
5	Optional Features and Configurations	10
5.1	Clocking	10

List of Figures

1	TSW4806EVM Block Diagram	2
2	LMK04800 Main Tab Window	4
3	LMK04800 Output Tab	5
4	LMK04800 Advanced Tab	6
5	PLL2 Settings.....	7
6	Clock Divider Settings	8
7	EEPROM Programming Interface	9

List of Tables

1	Available LMK04800 Family Devices	2
2	Main Window Description	4
3	LMK04800 Output Tab Description.....	5
4	LMK04800 Advanced Tab Description	6
5	Output SMA's.....	9

1 Introduction

1.1 Overview

The EVM provides several programmable output clock sources. Four SMA outputs (J1, J4, J6 and J17) are configured as CMOS outputs. Configure the two other output pairs (J2, J3) and (J7, J15) for CMOS, LVDS, or LVPECL output levels.

An option for installing a commercial-quality voltage-controlled crystal oscillator (VCXO) is available on the board, providing a known reference point for evaluation of the device performance in dual-PLL mode.

The board features an on-board 10-MHz reference oscillator for internal clock reference and output reference source.

The on-board EEPROM programs the LMK04806, providing several factory pre-programmed settings. The board provides 491.52-, 245.76-, 122.88-, and 61.44-MHz outputs after power up (or after pushing the RESET button) if the four dip switches are in their default 0000 position (all up). A software GUI is also provided allowing custom configuration of the LMK04806.

The EVM supports any of the four devices offered in the LMK04800 family with the default device being the LMK04806.

Table 1. Available LMK04800 Family Devices

Device	VCO Frequency
LMK04803B	1840 to 2030 MHz
LMK04805B	2148 to 2370 MHz
LMK04806B ⁽¹⁾	2370 to 2600 MHz
LMK04808B	2750 to 3072 MHz

⁽¹⁾ Board default installed device

Figure 1 shows a block diagram of the EVM.

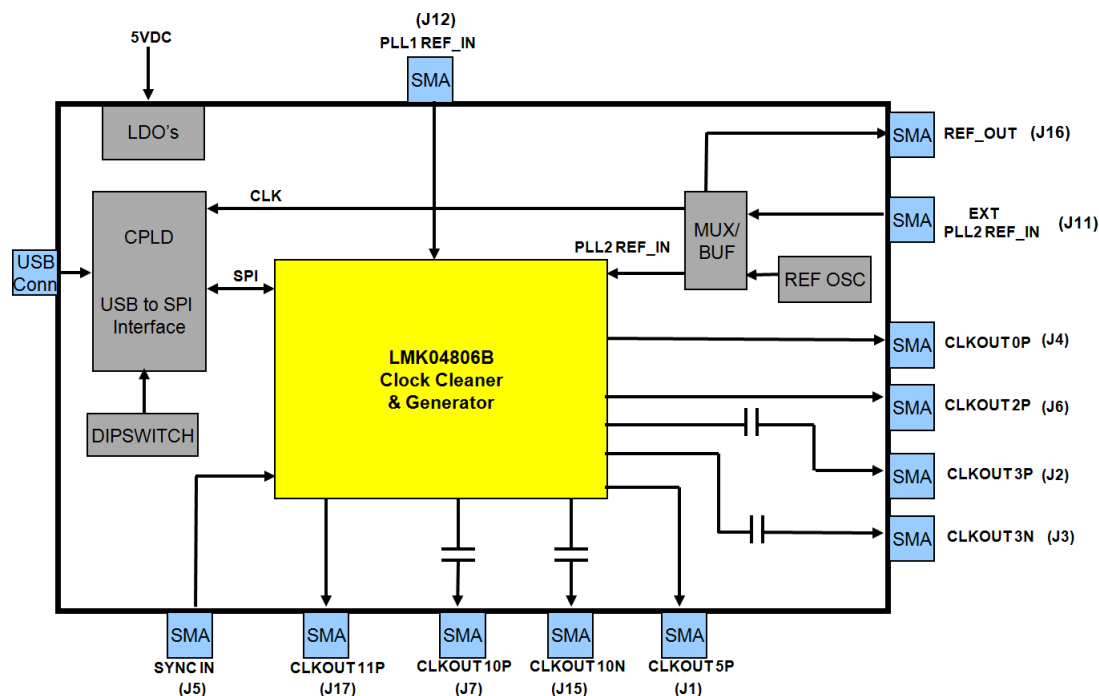


Figure 1. TSW4806EVM Block Diagram

1.2 Quick-Start Setup Procedure

1.2.1 Hardware Setup

1. Connect the provided 5-VDC power supply to the barrel connector (J8) of the TSW4806. If using the banana jacks, connect the positive end to J10 and the negative end to J9.
2. Make sure the four dip switches (SW1) are in the factory default position (all up). This corresponds to an address of 0000 and is also indicated by four LED's, all of which indicate *OFF*. The address for the on-board EEPROM is selected by the CPLD, dependant upon the switch settings.
3. After power-up, the 5-VDC LED illuminates. The on-board CPLD automatically loads the LMK04806 from the configuration file stored in the EEPROM at the location determined by DIPSWITCH, SW1. After the LMK is configured, the green *LOCK* LED turns on. This indicates that the PLL of the LMK04806 is locked to the 10-MHz on-board reference source. The output SMA's now provide the following frequencies:
J7 – 61.44-MHz CMOS output. AC coupled, from CLKOUT10P of LMK04806.
J15 – 61.44-MHz CMOS output. AC coupled, from CLKOUT10N of LMK04806.
J17 – 61.44-MHz CMOS output from CLKOUT11P of LMK04806.
J4 – 122.88-MHz CMOS output from CLKOUT0P of LMK04806.
J1 – 245.76-MHz CMOS output from CLKOUT5P of LMK04806.
J2 – 491.52-MHz CMOS output. AC coupled, from CLKOUT3P of LMK04806.
J3 – 491.52-MHz CMOS output. AC coupled, from CLKOUT3N of LMK04806.
J6 – 491.52-MHz CMOS output from CLKOUT2P of LMK04806.
Note: If the *LOCK* LED does not turn on after power up, ensure the four dip switches are set to 0000 (all in the up position) and push the reset button (SW2).

2 Software Control

This section provides installation instructions and explanations of the TSW4806 GUI. Enable the GUI control by connecting the provided mini-USB cable between the host PC and J13 of the EVM.

2.1 Installation Instructions

1. Download the software from the EVM product page on www.ti.com. Find the page by searching for *TSW4806EVM*. The software is listed under the *Related Products* section on the *TI Software* tab.
2. Extract the files from the zip file titled *TSW4806 GUI vXpY Installer.zip* where *XpY* represents the version number.
3. Run *setup.exe* and follow the installation prompts.
4. Start the GUI by going to *Start menu* → *All Programs* → *TSW4806 GUI vxpx*. Double click on *TSW4806 GUI.exe*.
5. When plugging the board into the computer through the USB cable for the first time, the USB drivers must be installed.

Windows® XP: If Windows XP does not automatically install the drivers, follow the on-screen prompts and install them. Do not let Windows XP search Microsoft Updates for the drivers, but do let Windows XP install the drivers automatically.

Windows 7: After installing the TSW4806 GUI, Windows 7 automatically installs the drivers for the EVM.

- If not already connected, connect the provided 5-VDC power supply to J8 and the other end to 110-120 VAC source.

2.2 Software Operation

The TSW4806 GUI programs the LMK04806 to desired outputs other than the default power up condition described in [Section 2.1](#). The on-board EEPROM is also programmed from the GUI, including custom setting options. The GUI controls are split between different tabs for a simplified interface. Detailed descriptions for each tab are given below.

2.2.1 LMK04800 Main Tab

After starting the GUI, the LMK04800 Main tab is selected by default and the display looks as shown in Figure 2.

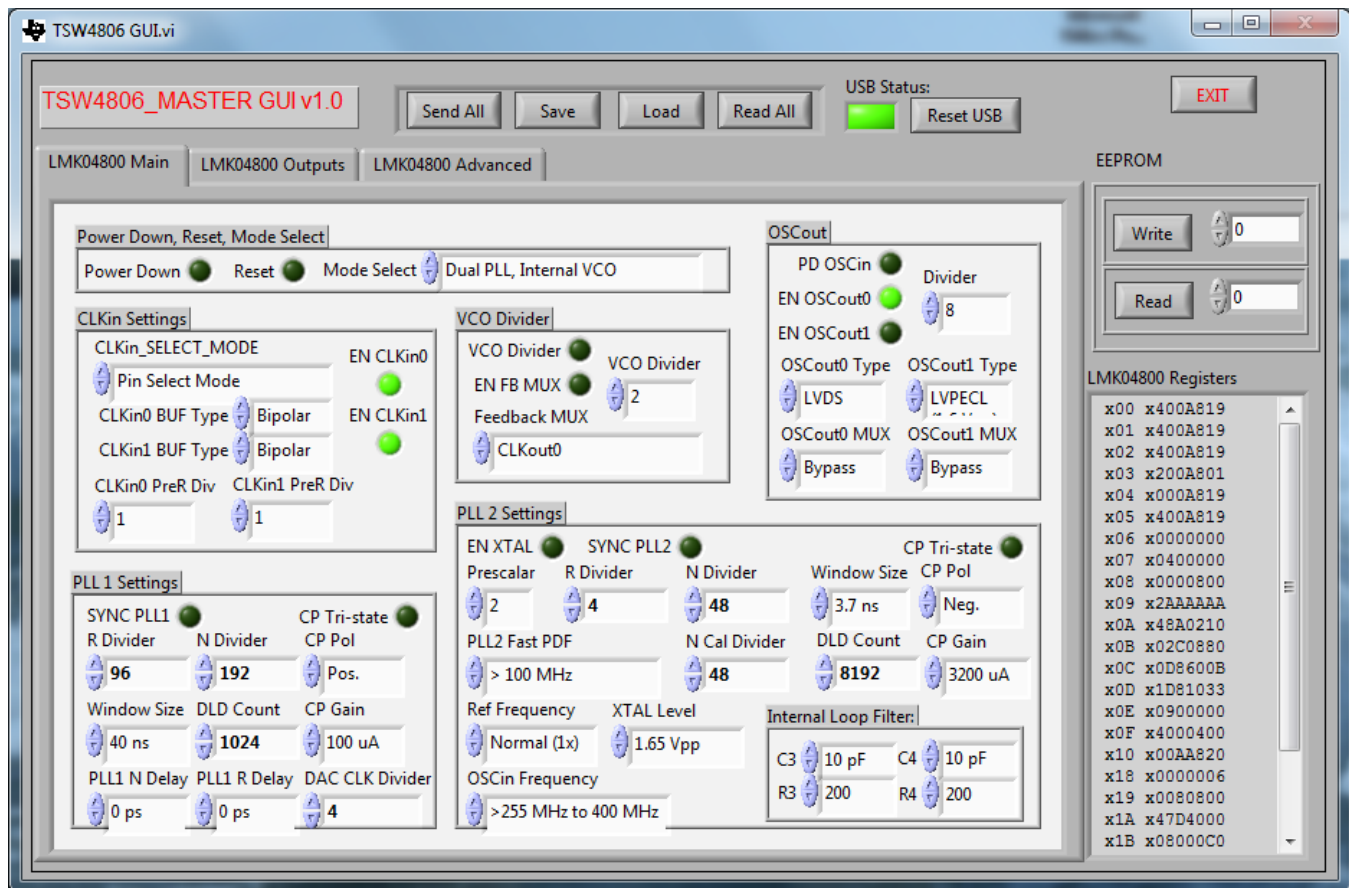


Figure 2. LMK04800 Main Tab Window

If the GUI connects to the board properly, the USB Status indicator turns green. If the indicator is not bright green (as shown in Figure 2), check that the board is powered up and the USB cable is installed. Press the **Reset USB** button a few times. If this still does not establish the connection, cycle power to the board and host PC. If this still does not correct the problem, make sure the USB drivers were installed properly using the Device Manager tool on the PC.

Table 2. Main Window Description

Section	Description
Reset USB	Issues a software reset to the FTDI USB controller.
Send All	Sends all current displayed GUI values to the LMK internal registers.
Save	Saves all of the current displayed GUI values to a file.
Load	Opens a browser for loading a custom register file into the GUI. The values are not loaded into the LMK until the Send All button is clicked.
Read All	Currently not used.
EXIT	Closes the GUI
EEPROM ⁽¹⁾	Writes and reads the GUI register values to the on-board EEPROM. The writable address range is from 8 to 15. The readable range is from 0 to 15. Addresses 0-7 are factory programmed and read only.
LMK04800 Registers	Displays the address and data values of the LMK.

⁽¹⁾ The EEPROM Read only works properly with the Windows 7 OS by opening the GUI using the *Run as Administrator* option.

Table 2. Main Window Description (continued)

Section	Description
Power Down, Reset, Mode Select	Allows for powering down and resetting the part. Also controls the mode of the LMK04800.
CLKin Settings	Enabled and select the input clock source, input buffer types, and dividers.
VCO Divider	Set the VCO divider to reduce the frequency on the clock distribution path. Use the VCO directly.
OSCOut	Control power to the OSCin port. Also enable and change parameters of the OSCOut pins.
PLL 1 Settings	Configure PLL 1 settings when using the dual PLL mode.
PLL 2 Settings	Configure PLL 2 settings for both dual and single PLL mode.

2.2.2 LMK04800 Outputs Tab

After clicking on the LMK04800 Outputs tab, the display looks as shown in [Figure 3](#).

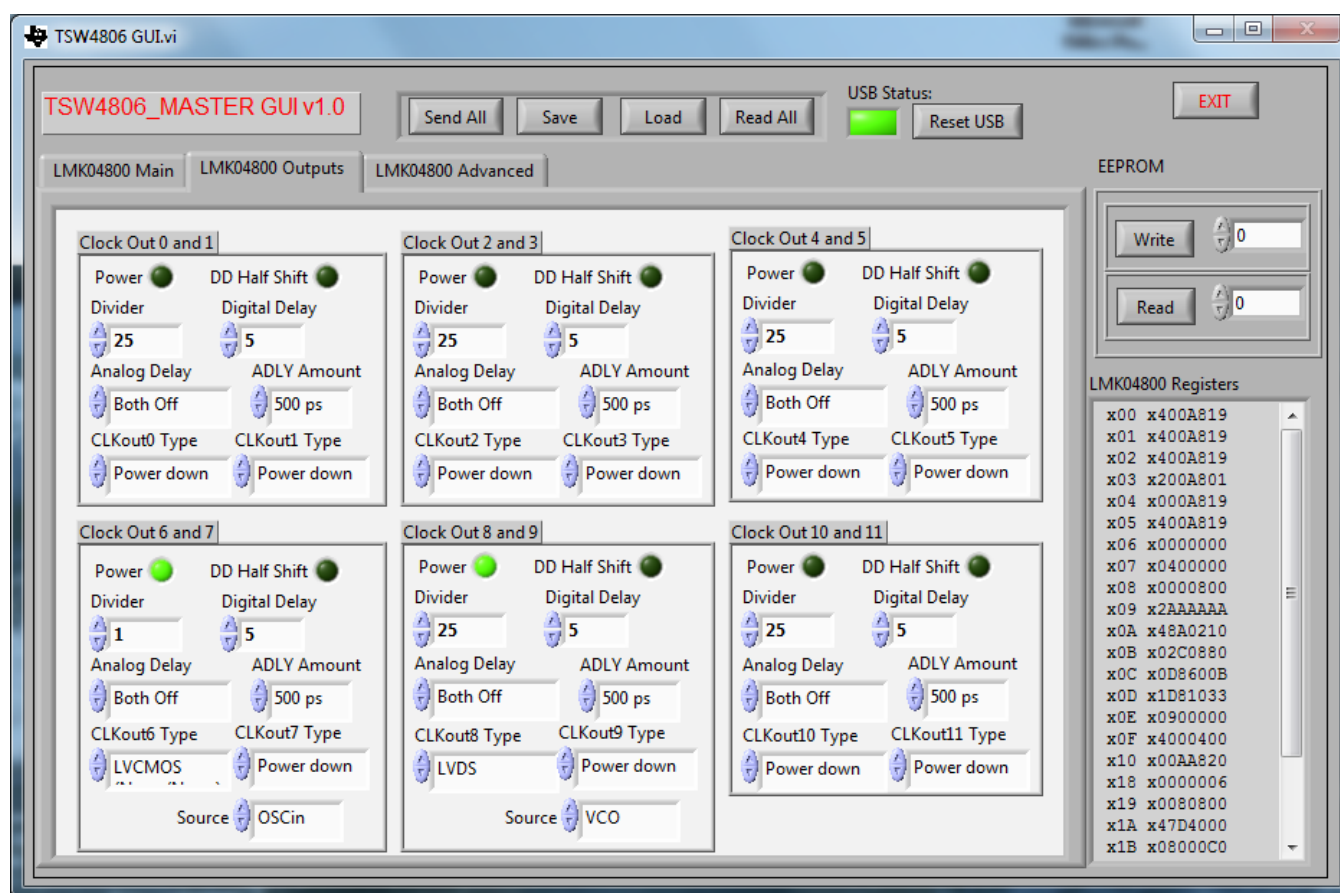


Figure 3. LMK04800 Output Tab

Table 3. LMK04800 Output Tab Description

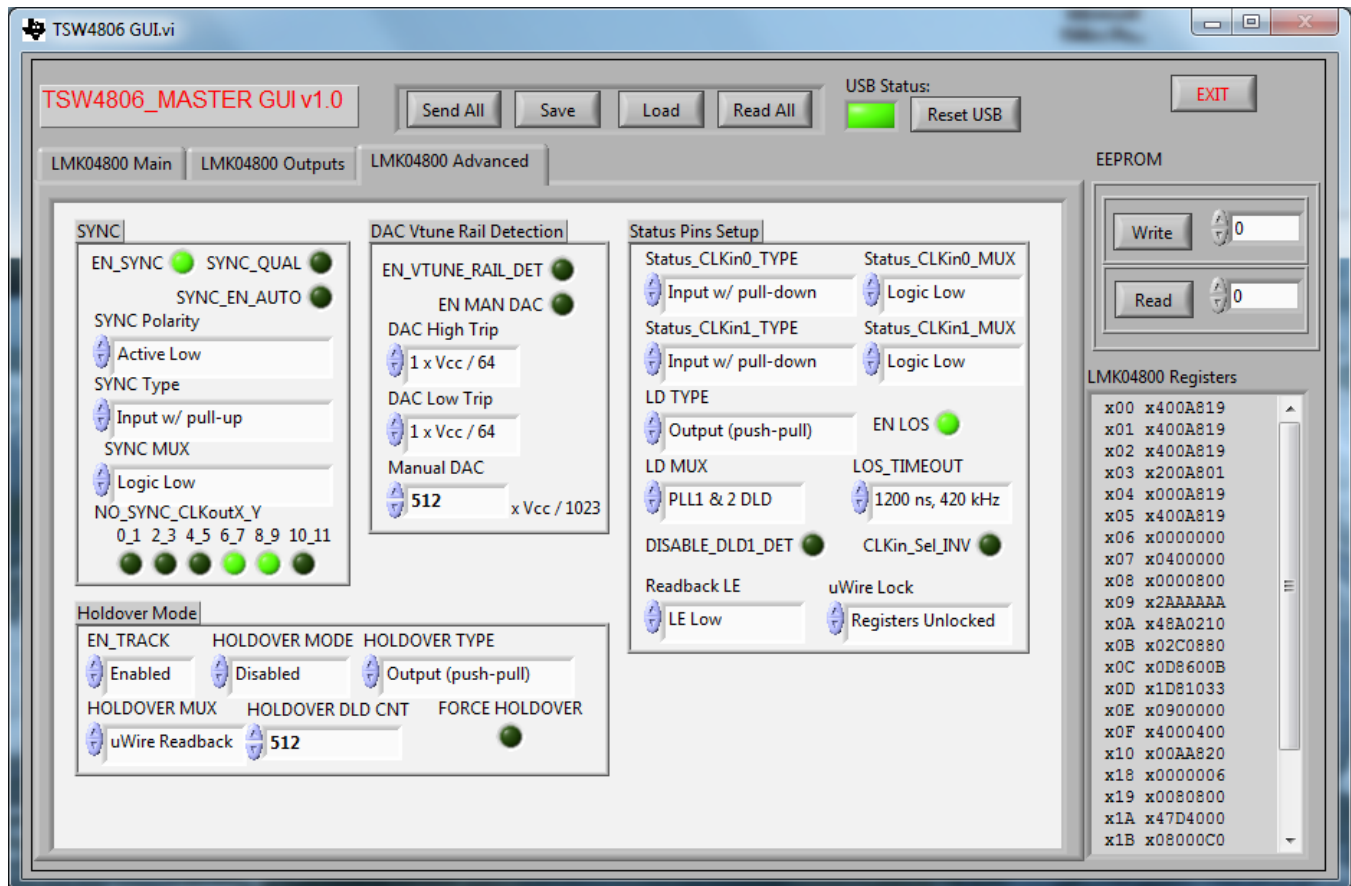
Section	Description
Clock Out 0 and 1	Configure Clock Out 0 and 1 outputs. Enable the outputs and set the divider, delay, and output buffer.
Clock Out 2 and 3	Configure Clock Out 2 and 3 outputs. Enable the outputs and set the divider, delay, and output buffer.
Clock Out 4 and 5	Configure Clock Out 4 and 5 outputs. Enable the outputs and set the divider, delay, and output buffer.
Clock Out 6 and 7	Configure Clock Out 6 and 7 outputs. Enable the outputs and set the divider, delay, and output buffer. Also select the source for the output.

Table 3. LMK04800 Output Tab Description (continued)

Section	Description
Clock Out 8 and 9	Configure Clock Out 8 and 9 outputs. Enable the outputs and set the divider, delay, and output buffer. Also select the source for the output.
Clock Out 10 and 11	Configure Clock Out 10 and 11 outputs. Enable the outputs and set the divider, delay, and output buffer.

2.2.3 LMK04800 Advanced

After clicking on the LMK04800 Advanced tab, the display looks as shown in Figure 4.


Figure 4. LMK04800 Advanced Tab
Table 4. LMK04800 Advanced Tab Description

Section	Description
SYNC	Enable and configure the sync functionality.
DAC Vtune Rail Detection	Enable and control the internal DAC settings.
Status Pins Setup	Setup the status pins for various outputs as well as control some miscellaneous functions.
Holdover Mode	Enable and configure holdover mode.

See the LMK04800 Family Data Sheet (<http://www.ti.com/product/lmk04800>) for a much more detailed explanation of all of the internal registers and operation of the device.

3 TSW4806 GUI Operation

1. Apply 5 V to the board. Start the TSW4806 GUI by going to the *Start Menu* → *All Programs* → *Texas Instruments ADCs* → *TSW4806 GUI*.
2. Make sure the USB Status green indicator lights.
3. Click the **Load** button and select the file named *122.88_61.44.txt*. Click **OK**.
4. Click **Send All**. At this point, the LED labeled *D1* on the TSW4806 lights, indicating a PLL lock.
5. Configure the board such that a 122.88-MHz clock is present on SMA's J2, J3, J4, and J6. SMA's J1, J7, J15 and J17 have 61.44-MHz clock outputs.

The output clocks are determined by the value the internal VCO is running at and the divide value selected for the output. In this example, the VCO is operating in single PLL mode and locked to the on-board 10-MHz oscillator. The value the PLL2 is setting the VCO too is determined as follows:

$$\begin{aligned}\text{REF CLK} / \text{R divider} &= \text{VCO} / \text{N divider} / \text{Prescaler} \\ 10\text{MHz} / 125 &= \text{VCO} / 3840 / 8 \\ \text{VCO} &= 2457.6\text{MHz}\end{aligned}$$

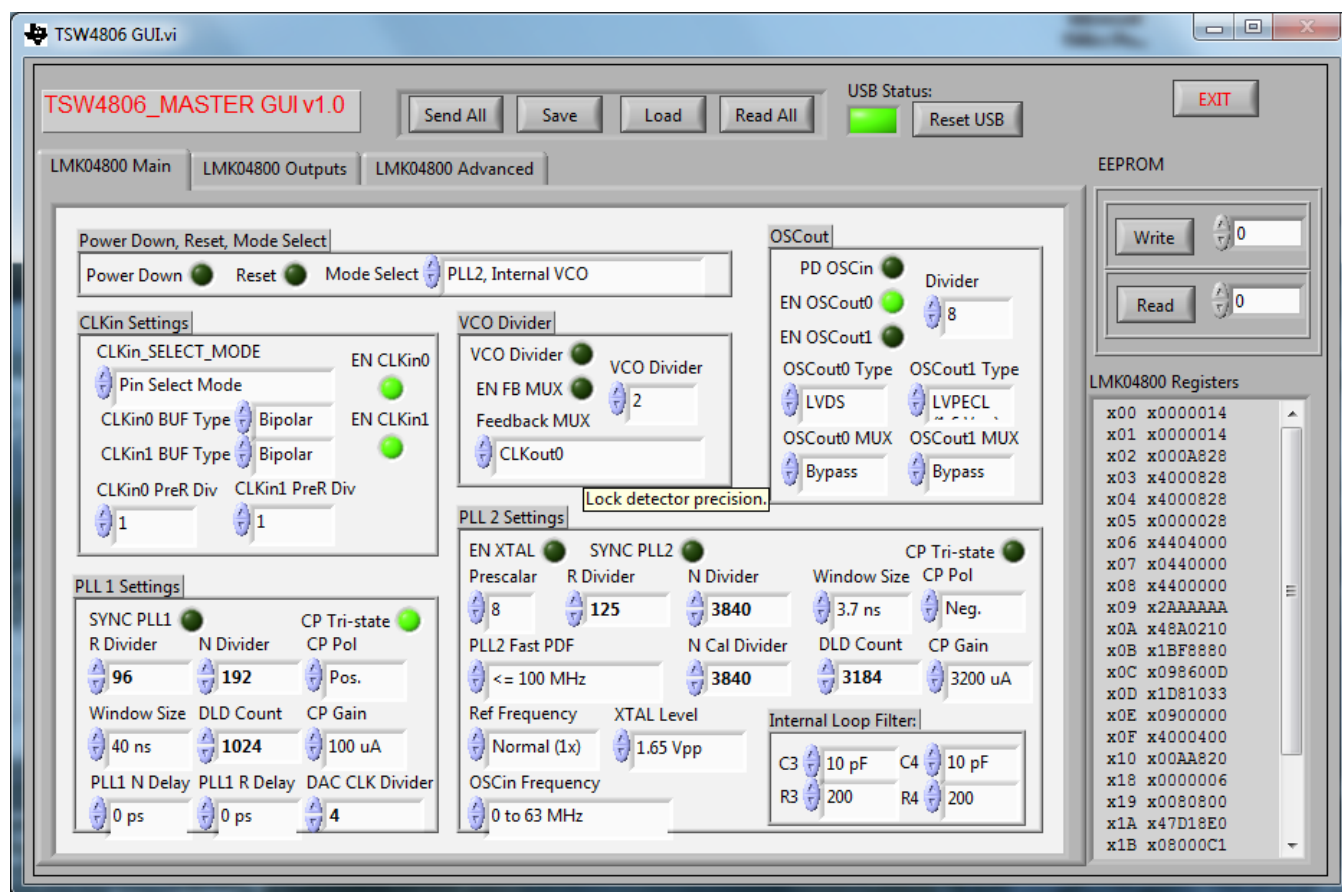


Figure 5. PLL2 Settings

Using the divided values shown in Figure 6 results in the following for Clock Out 0, 1, 2, and 3: $2457.6 / 20 = 122.88$ MHz.

Using the divided values shown in Figure 6 results in the following for Clock Out 6, 7, 8, 9, 10 and 11: $2457.6 / 40 = 61.44$ MHz.

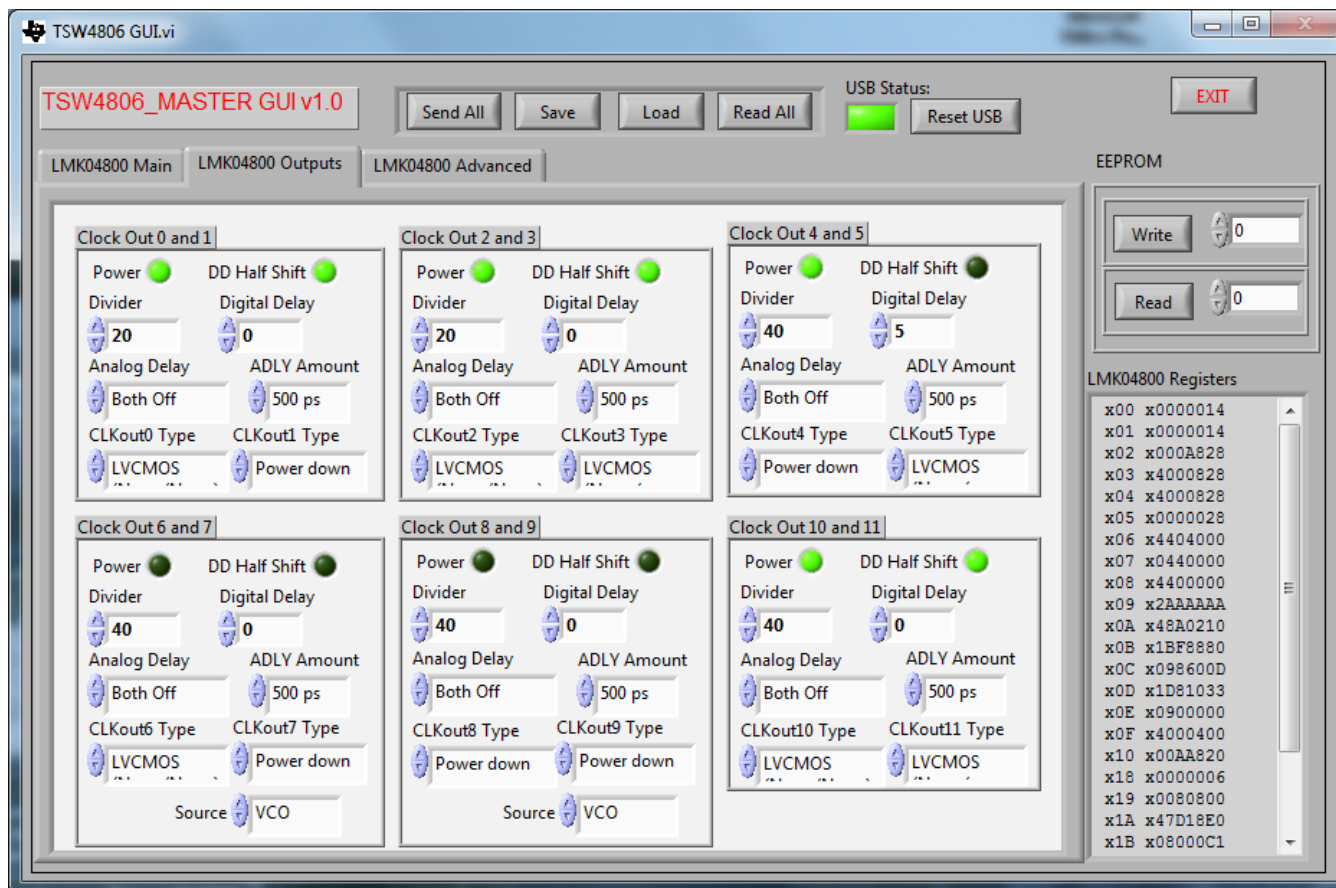


Figure 6. Clock Divider Settings

Note that clock pairs share the same dividers. This example also shows that Clocks 1, 4, 7, 8 and 9 are powered down. These outputs are not used on the EVM.

4 EEPROM

Saving the custom configuration settings from the TSW4806 GUI (Figure 7) is possible with the on-board EEPROM. With the settings saved, the LMK04806 is programmed without using the GUI. The EEPROM saves up to eight user-defined settings, starting from address 8. The EVM comes from the factory with two pre-loaded configurations stored in address locations 0 and 1.

4.1 Writing to the EEPROM

Write to the EEPROM with the following steps:

- Configure the GUI to the desired setting.
- Select an address from 8 to 15 in the EEPROM section of the GUI.
- When the **Write** button is pushed, the current GUI settings are saved to the selected EEPROM address.

Note: Read from the EEPROM by selecting the desired read address and pressing the **Read** button.

4.2 Program the LMK04806 Device from EEPROM

Program the LMK04806 from a saved configuration setting on the EEPROM:

- Power up the board with a 5-V supply
- Set the DIPSWITCH (SW1) to the address where the configuration settings were saved. For example, if the settings were saved to address 9, set DIPSWITCH to 1001.

Note: Red LED *On* indicates a high bit (or bit 1).

Switch 4 is MSB and Switch 1 is LSB

- Program the EVM by pushing the Reset button (SW2)

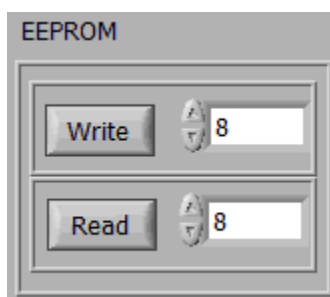


Figure 7. EEPROM Programming Interface

The EVM comes with two configurations stored in the EEPROM from the factory. The first configuration is loaded under address 0000 and the second resides in address 0001. When loaded with address 0000, the outputs are as described in Section 1.2.1. When loaded with the settings from address 0001, the outputs are as follows:

- J7 – 76.8-MHz CMOS output. AC coupled, from CLKOUT10P of LMK04806.
- J15 – 76.8-MHz CMOS output. AC coupled, from CLKOUT10N of LMK04806.
- J17 – 76.8-MHz CMOS output from CLKOUT11P of LMK04806.
- J4 – 153.6-MHz CMOS output from CLKOUT0P of LMK04806.
- J1 – 307.2-MHz CMOS output from CLKOUT5P of LMK04806.
- J2 – 614.4-MHz CMOS output. AC coupled, from CLKOUT3P of LMK04806.
- J3 – 614.4-MHz CMOS output. AC coupled, from CLKOUT3N of LMK04806.
- J6 – 614.4-MHz CMOS output from CLKOUT2P of LMK04806.

Table 5 shows all of the available factory-set frequencies stored inside the EEPROM and the DIPSWITCH settings required to load them.

Table 5. Output SMA's

DIPSWITCH Setting MSB - LSB	J1	J2, J3, J6	J4	J7, J15, J17
0000	245.76 MHz	491.52 MHz	122.88 MHz	61.44 MHz
0001	307.2 MHz	614.4 MHz	153.6 MHz	76.8 MHz
0010	Factory only, not used	Factory only, not used	Factory only, not used	Factory only, not used
.	"	"	"	"
.				
.				
0111	Factory only, not used	Factory only, not used	Factory only, not used	Factory only, not used
1000	User configuration 8	User configuration 8	User configuration 8	User configuration 8
.	"	"	"	"
.				
.				
1111	User configuration 15	User configuration 15	User configuration 15	User configuration 15

5 Optional Features and Configurations

5.1 Clocking

The EVM board comes with the LMK04806 device which has an internal VCO frequency range of 2370–2600 MHz. If the desired clock is not derived from this frequency range using integer dividers, then swap this device out for another LMK04800 with a different VCO range. Determine which LMK04800 works for the desired frequency range by consulting the LMK04800 data sheet ([SNAS489](#)).

Set up the LMK04800 in clock distribution mode or as a clock generator using single or dual PLL mode. The different modes of operation are listed below.

1. **External Clock Mode:** Setting up the LMK4806 in clock distribution mode permits the use of an external clock source. This allows for coherent sampling by providing a clock that is synchronized to the other signal sources. The TSW4806 GUI includes a configuration file for the external clock mode. This file is located in the GUI installation directory in the folder *Configuration Files* and is named *external_clock.txt*. Load the file by clicking the **Load** button, navigating to the correct folder, selecting the file, and clicking **OK**. Provide an external clock through the *CLKIN1* SMA J12 connector on the TSW4806 board.
2. **On-board Clock using Single PLL Mode:** This is the default mode of operation for the TSW4806. The 10-MHz on-board oscillator acts as the reference for the PLL and the divided down internal VCO acts as the clock source. All of the factory provided configurations stored in the EEPROM and the provided files in the *Configuration Files* folder not mentioned elsewhere in this document operate in this mode. Use an external reference (2 Vp-p min) in place of the on-board oscillator. Operate in this mode by providing a clock source to SMA J11, and moving the shunt on jumper JP5 to pins 2-3. The 10-MHz oscillator is now disabled by moving the shunt on jumper JP4 to pins 2-3.
3. **On-board Clock using Dual PLL Mode:** In this mode of operation, providing a low-frequency reference generates a synchronized sampling clock at a higher frequency. The reference comes from any source, such as a 10-MHz reference from a piece of test equipment, this allows synchronization between all signal sources and is used for coherent sampling. Installing a VCXO at Y2 allows the use of this mode. Update the loop filters if there is a change in reference or VCXO. Use the Clock Design Tool (<http://www.ti.com/tool/clockdesigntool>) for designing the loop filters and PLL settings based on the reference, VCXO, and output frequencies.

EVALUATION BOARD/KIT/MODULE (EVM) ADDITIONAL TERMS

Texas Instruments (TI) provides the enclosed Evaluation Board/Kit/Module (EVM) under the following conditions:

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods.

Should this evaluation board/kit not meet the specifications indicated in the User's Guide, the board/kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING LIMITED WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

Please read the User's Guide and, specifically, the Warnings and Restrictions notice in the User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For additional information on TI's environmental and/or safety programs, please visit www.ti.com/esh or contact TI.

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used. TI currently deals with a variety of customers for products, and therefore our arrangement with the user is not exclusive. TI assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.

REGULATORY COMPLIANCE INFORMATION

As noted in the EVM User's Guide and/or EVM itself, this EVM and/or accompanying hardware may or may not be subject to the Federal Communications Commission (FCC) and Industry Canada (IC) rules.

For EVMs **not** subject to the above rules, this evaluation board/kit/module is intended for use for ENGINEERING DEVELOPMENT, DEMONSTRATION OR EVALUATION PURPOSES ONLY and is not considered by TI to be a finished end product fit for general consumer use. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to part 15 of FCC or ICES-003 rules, which are designed to provide reasonable protection against radio frequency interference. Operation of the equipment may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

General Statement for EVMs including a radio

User Power/Frequency Use Obligations: This radio is intended for development/professional use only in legally allocated frequency and power limits. Any use of radio frequencies and/or power availability of this EVM and its development application(s) must comply with local laws governing radio spectrum allocation and power limits for this evaluation module. It is the user's sole responsibility to only operate this radio in legally acceptable frequency space and within legally mandated power limitations. Any exceptions to this are strictly prohibited and unauthorized by Texas Instruments unless user has obtained appropriate experimental/development licenses from local regulatory authorities, which is responsibility of user including its acceptable authorization.

For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant

Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For EVMs annotated as IC – INDUSTRY CANADA Compliant

This Class A or B digital apparatus complies with Canadian ICES-003.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Concerning EVMs including radio transmitters

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concerning EVMs including detachable antennas

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Cet appareil numérique de la classe A ou B est conforme à la norme NMB-003 du Canada.

Les changements ou les modifications pas expressément approuvés par la partie responsable de la conformité ont pu vider l'autorité de l'utilisateur pour actionner l'équipement.

Concernant les EVMs avec appareils radio

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

【Important Notice for Users of this Product in Japan】

This development kit is NOT certified as Confirming to Technical Regulations of Radio Law of Japan

If you use this product in Japan, you are required by Radio Law of Japan to follow the instructions below with respect to this product:

1. Use this product in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use this product only after you obtained the license of Test Radio Station as provided in Radio Law of Japan with respect to this product, or
3. Use of this product only after you obtained the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to this product. Also, please do not transfer this product, unless you give the same notice above to the transferee. Please note that if you could not follow the instructions above, you will be subject to penalties of Radio Law of Japan.

Texas Instruments Japan Limited
(address) 24-1, Nishi-Shinjuku 6 chome, Shinjuku-ku, Tokyo, Japan

<http://www.tij.co.jp>

【ご使用にあたっての注】

本開発キットは技術基準適合証明を受けておりません。

本製品のご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。

日本テキサス・インスツルメンツ株式会社

東京都新宿区西新宿 6 丁目 2 4 番 1 号

西新宿三井ビル

<http://www.tij.co.jp>

EVALUATION BOARD/KIT/MODULE (EVM) WARNINGS, RESTRICTIONS AND DISCLAIMERS

For Feasibility Evaluation Only, in Laboratory/Development Environments. Unless otherwise indicated, this EVM is not a finished electrical equipment and not intended for consumer use. It is intended solely for use for preliminary feasibility evaluation in laboratory/development environments by technically qualified electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems and subsystems. It should not be used as all or part of a finished end product.

Your Sole Responsibility and Risk. You acknowledge, represent and agree that:

1. You have unique knowledge concerning Federal, State and local regulatory requirements (including but not limited to Food and Drug Administration regulations, if applicable) which relate to your products and which relate to your use (and/or that of your employees, affiliates, contractors or designees) of the EVM for evaluation, testing and other purposes.
2. You have full and exclusive responsibility to assure the safety and compliance of your products with all such laws and other applicable regulatory requirements, and also to assure the safety of any activities to be conducted by you and/or your employees, affiliates, contractors or designees, using the EVM. Further, you are responsible to assure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard.
3. You will employ reasonable safeguards to ensure that your use of the EVM will not result in any property damage, injury or death, even if the EVM should fail to perform as described or expected.
4. You will take care of proper disposal and recycling of the EVM's electronic components and packing materials.

Certain Instructions. It is important to operate this EVM within TI's recommended specifications and environmental considerations per the user guidelines. Exceeding the specified EVM ratings (including but not limited to input and output voltage, current, power, and environmental ranges) may cause property damage, personal injury or death. If there are questions concerning these ratings please contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, some circuit components may have case temperatures greater than 60°C as long as the input and output are maintained at a normal ambient operating temperature. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors which can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during normal operation, please be aware that these devices may be very warm to the touch. As with all electronic evaluation tools, only qualified personnel knowledgeable in electronic measurement and diagnostics normally found in development environments should use these EVMs.

Agreement to Defend, Indemnify and Hold Harmless. You agree to defend, indemnify and hold TI, its licensors and their representatives harmless from and against any and all claims, damages, losses, expenses, costs and liabilities (collectively, "Claims") arising out of or in connection with any use of the EVM that is not in accordance with the terms of the agreement. This obligation shall apply whether Claims arise under law of tort or contract or any other legal theory, and even if the EVM fails to perform as described or expected.

Safety-Critical or Life-Critical Applications. If you intend to evaluate the components for possible use in safety critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, such as devices which are classified as FDA Class III or similar classification, then you must specifically notify TI of such intent and enter into a separate Assurance and Indemnity Agreement.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2012, Texas Instruments Incorporated

EVALUATION BOARD/KIT/MODULE (EVM) ADDITIONAL TERMS

Texas Instruments (TI) provides the enclosed Evaluation Board/Kit/Module (EVM) under the following conditions:

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods.

Should this evaluation board/kit not meet the specifications indicated in the User's Guide, the board/kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING LIMITED WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

Please read the User's Guide and, specifically, the Warnings and Restrictions notice in the User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For additional information on TI's environmental and/or safety programs, please visit www.ti.com/esh or contact TI.

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used. TI currently deals with a variety of customers for products, and therefore our arrangement with the user is not exclusive. TI assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.

REGULATORY COMPLIANCE INFORMATION

As noted in the EVM User's Guide and/or EVM itself, this EVM and/or accompanying hardware may or may not be subject to the Federal Communications Commission (FCC) and Industry Canada (IC) rules.

For EVMs **not** subject to the above rules, this evaluation board/kit/module is intended for use for ENGINEERING DEVELOPMENT, DEMONSTRATION OR EVALUATION PURPOSES ONLY and is not considered by TI to be a finished end product fit for general consumer use. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to part 15 of FCC or ICES-003 rules, which are designed to provide reasonable protection against radio frequency interference. Operation of the equipment may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

General Statement for EVMs including a radio

User Power/Frequency Use Obligations: This radio is intended for development/professional use only in legally allocated frequency and power limits. Any use of radio frequencies and/or power availability of this EVM and its development application(s) must comply with local laws governing radio spectrum allocation and power limits for this evaluation module. It is the user's sole responsibility to only operate this radio in legally acceptable frequency space and within legally mandated power limitations. Any exceptions to this are strictly prohibited and unauthorized by Texas Instruments unless user has obtained appropriate experimental/development licenses from local regulatory authorities, which is responsibility of user including its acceptable authorization.

For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant

Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For EVMs annotated as IC – INDUSTRY CANADA Compliant

This Class A or B digital apparatus complies with Canadian ICES-003.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Concerning EVMs including radio transmitters

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concerning EVMs including detachable antennas

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Cet appareil numérique de la classe A ou B est conforme à la norme NMB-003 du Canada.

Les changements ou les modifications pas expressément approuvés par la partie responsable de la conformité ont pu vider l'autorité de l'utilisateur pour actionner l'équipement.

Concernant les EVMs avec appareils radio

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

【Important Notice for Users of this Product in Japan】

This development kit is NOT certified as Confirming to Technical Regulations of Radio Law of Japan

If you use this product in Japan, you are required by Radio Law of Japan to follow the instructions below with respect to this product:

1. Use this product in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use this product only after you obtained the license of Test Radio Station as provided in Radio Law of Japan with respect to this product, or
3. Use of this product only after you obtained the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to this product. Also, please do not transfer this product, unless you give the same notice above to the transferee. Please note that if you could not follow the instructions above, you will be subject to penalties of Radio Law of Japan.

Texas Instruments Japan Limited
(address) 24-1, Nishi-Shinjuku 6 chome, Shinjuku-ku, Tokyo, Japan

<http://www.tij.co.jp>

【ご使用にあたっての注】

本開発キットは技術基準適合証明を受けておりません。

本製品のご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。

日本テキサス・インスツルメンツ株式会社

東京都新宿区西新宿 6 丁目 2 4 番 1 号

西新宿三井ビル

<http://www.tij.co.jp>

EVALUATION BOARD/KIT/MODULE (EVM) WARNINGS, RESTRICTIONS AND DISCLAIMERS

For Feasibility Evaluation Only, in Laboratory/Development Environments. Unless otherwise indicated, this EVM is not a finished electrical equipment and not intended for consumer use. It is intended solely for use for preliminary feasibility evaluation in laboratory/development environments by technically qualified electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems and subsystems. It should not be used as all or part of a finished end product.

Your Sole Responsibility and Risk. You acknowledge, represent and agree that:

1. You have unique knowledge concerning Federal, State and local regulatory requirements (including but not limited to Food and Drug Administration regulations, if applicable) which relate to your products and which relate to your use (and/or that of your employees, affiliates, contractors or designees) of the EVM for evaluation, testing and other purposes.
2. You have full and exclusive responsibility to assure the safety and compliance of your products with all such laws and other applicable regulatory requirements, and also to assure the safety of any activities to be conducted by you and/or your employees, affiliates, contractors or designees, using the EVM. Further, you are responsible to assure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard.
3. You will employ reasonable safeguards to ensure that your use of the EVM will not result in any property damage, injury or death, even if the EVM should fail to perform as described or expected.
4. You will take care of proper disposal and recycling of the EVM's electronic components and packing materials.

Certain Instructions. It is important to operate this EVM within TI's recommended specifications and environmental considerations per the user guidelines. Exceeding the specified EVM ratings (including but not limited to input and output voltage, current, power, and environmental ranges) may cause property damage, personal injury or death. If there are questions concerning these ratings please contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, some circuit components may have case temperatures greater than 60°C as long as the input and output are maintained at a normal ambient operating temperature. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors which can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during normal operation, please be aware that these devices may be very warm to the touch. As with all electronic evaluation tools, only qualified personnel knowledgeable in electronic measurement and diagnostics normally found in development environments should use these EVMs.

Agreement to Defend, Indemnify and Hold Harmless. You agree to defend, indemnify and hold TI, its licensors and their representatives harmless from and against any and all claims, damages, losses, expenses, costs and liabilities (collectively, "Claims") arising out of or in connection with any use of the EVM that is not in accordance with the terms of the agreement. This obligation shall apply whether Claims arise under law of tort or contract or any other legal theory, and even if the EVM fails to perform as described or expected.

Safety-Critical or Life-Critical Applications. If you intend to evaluate the components for possible use in safety critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, such as devices which are classified as FDA Class III or similar classification, then you must specifically notify TI of such intent and enter into a separate Assurance and Indemnity Agreement.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2012, Texas Instruments Incorporated

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have **not** been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components which meet ISO/TS16949 requirements, mainly for automotive use. Components which have not been so designated are neither designed nor intended for automotive use; and TI will not be responsible for any failure of such components to meet such requirements.

Products

Audio	www.ti.com/audio
Amplifiers	amplifier.ti.com
Data Converters	dataconverter.ti.com
DLP® Products	www.dlp.com
DSP	dsp.ti.com
Clocks and Timers	www.ti.com/clocks
Interface	interface.ti.com
Logic	logic.ti.com
Power Mgmt	power.ti.com
Microcontrollers	microcontroller.ti.com
RFID	www.ti-rfid.com
OMAP Applications Processors	www.ti.com/omap
Wireless Connectivity	www.ti.com/wirelessconnectivity

Applications

Automotive and Transportation	www.ti.com/automotive
Communications and Telecom	www.ti.com/communications
Computers and Peripherals	www.ti.com/computers
Consumer Electronics	www.ti.com/consumer-apps
Energy and Lighting	www.ti.com/energy
Industrial	www.ti.com/industrial
Medical	www.ti.com/medical
Security	www.ti.com/security
Space, Avionics and Defense	www.ti.com/space-avionics-defense
Video and Imaging	www.ti.com/video

TI E2E Community

e2e.ti.com